


# Leisure Cooker RTS330

This diagram is provided to assist you to identify parts if replacement is necessary, however due to the age of the appliance limited parts are available.

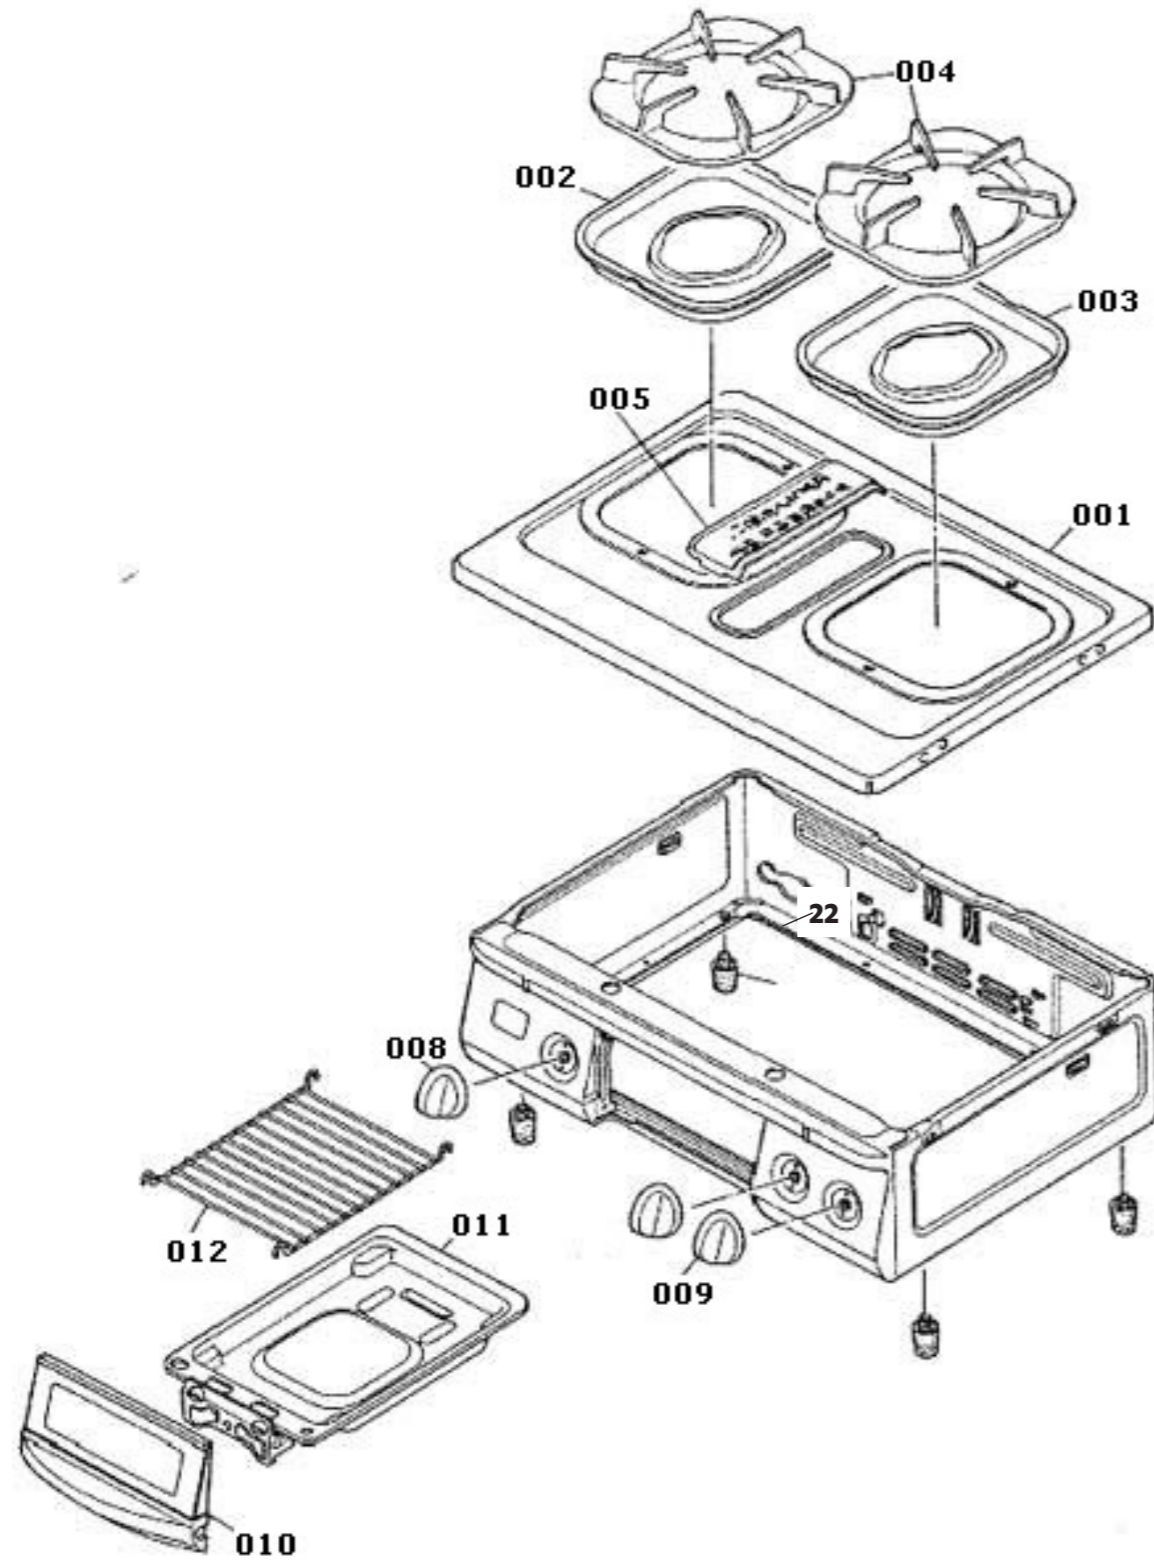


Ref.	Description	Part No.	Qty.
001	Top plate	9701	1
002	Drip pan - left	9702	1
003	Drip pan - right	9703	1
004	Pan support assembly	9704	2
005	Grill cover	9705	1
007	Rubber leg assembly	9706	4
008	Valve knob assembly	9707	2
009	Valve knob assembly	9708	1
010	Grill door assembly	9709	1
011	Grill pan assembly	9710	1
012	Grill grid	9711	1



# Leisure Cooker RTS330

This diagram is provided to assist you to identify parts if replacement is necessary, however due to the age of the appliance limited parts are available.

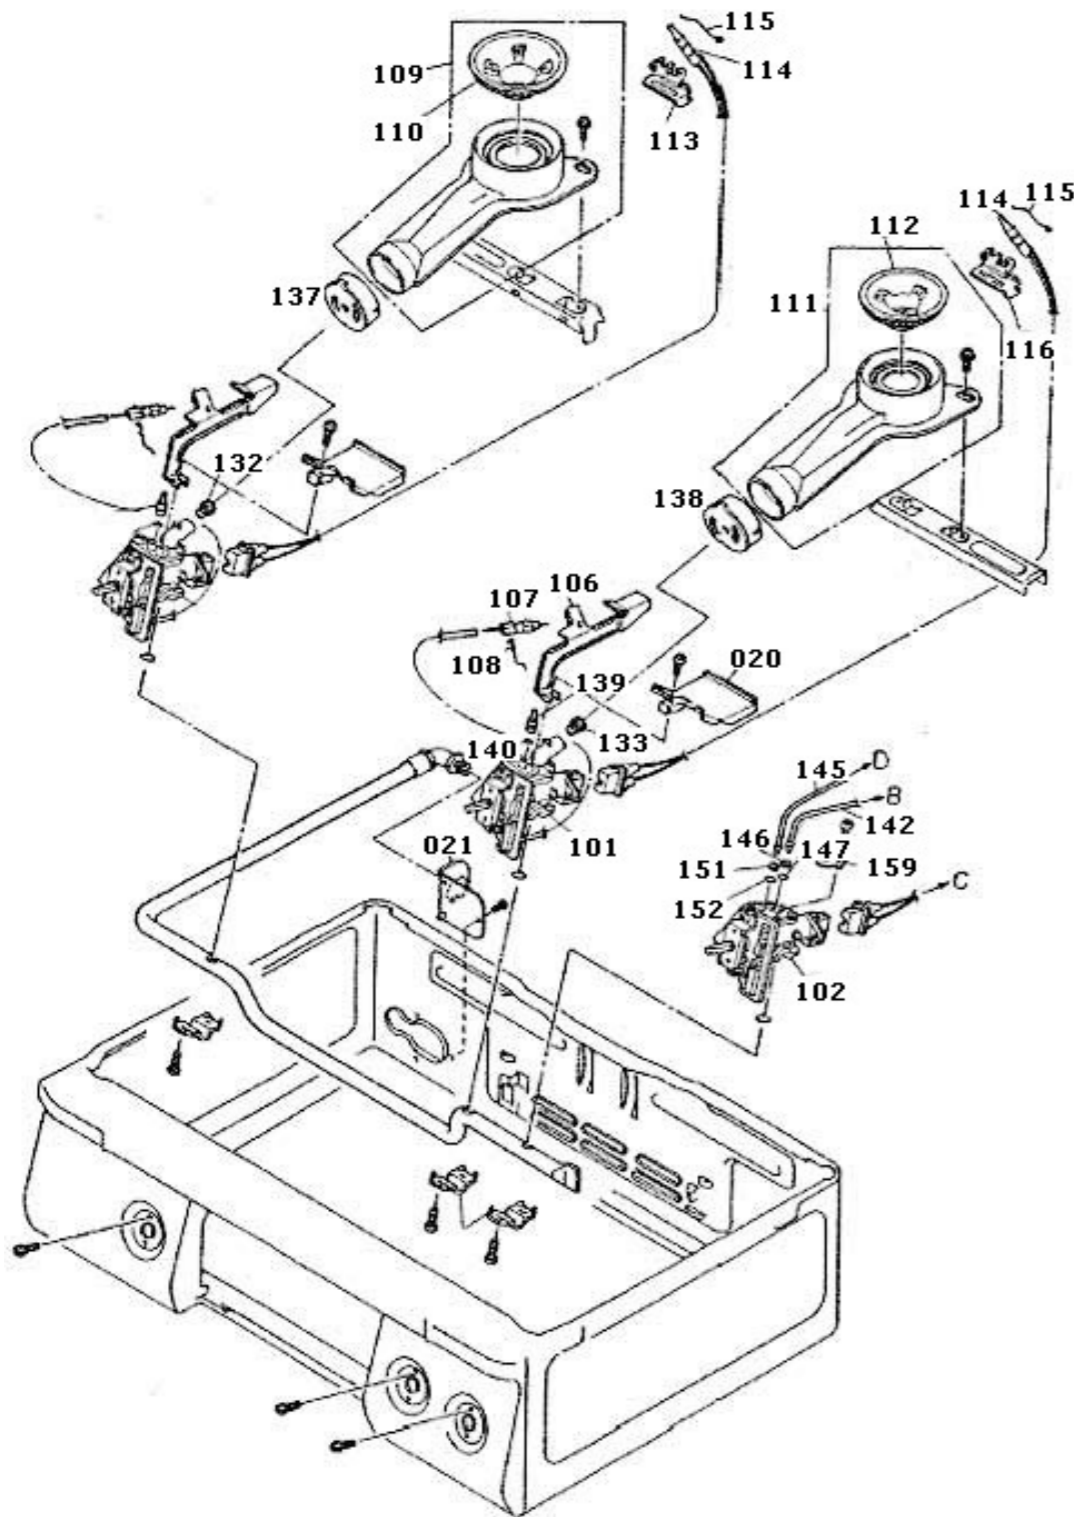

Ref.	Description	Part No.	Qty.
101	Safety Piezo valve assembly	9718	2
102	Safety Piezo valve assembly	9719	1
106	Pilot burner	9721	2
107	Pilot holder electrode	5423	3
108	Electrode fixing spring	9723	2
109	AL burner N assembly	9724	1
110	Burner cap 3 L	9725	1
111	M burner N assembly	9726	1
112	Burner cap 1M	9727	1
114	Thermocouple top	2233	2
115	Thermocouple retainer	2232	2
132	Main injector LPG	9741	1
133	Injector 0.80 mm LPG	4448	1
137	Regulator LPG	9745	1
138	Regulator LPG	9747	1
139	Pilot injector LPG	2294	1
140	O-ring	9744	1
146	Tube pilot washer	6789	1
147	O-ring	2268	1
151	Washer - same part as 146	2266	2
152	O-ring - same part as 147	2268	2