


## Maxim M4S

This diagram is provided to assist you to identify parts if replacement is necessary. Contact your place of purchase or the manufacturer to enquire about parts, availability and/or service.

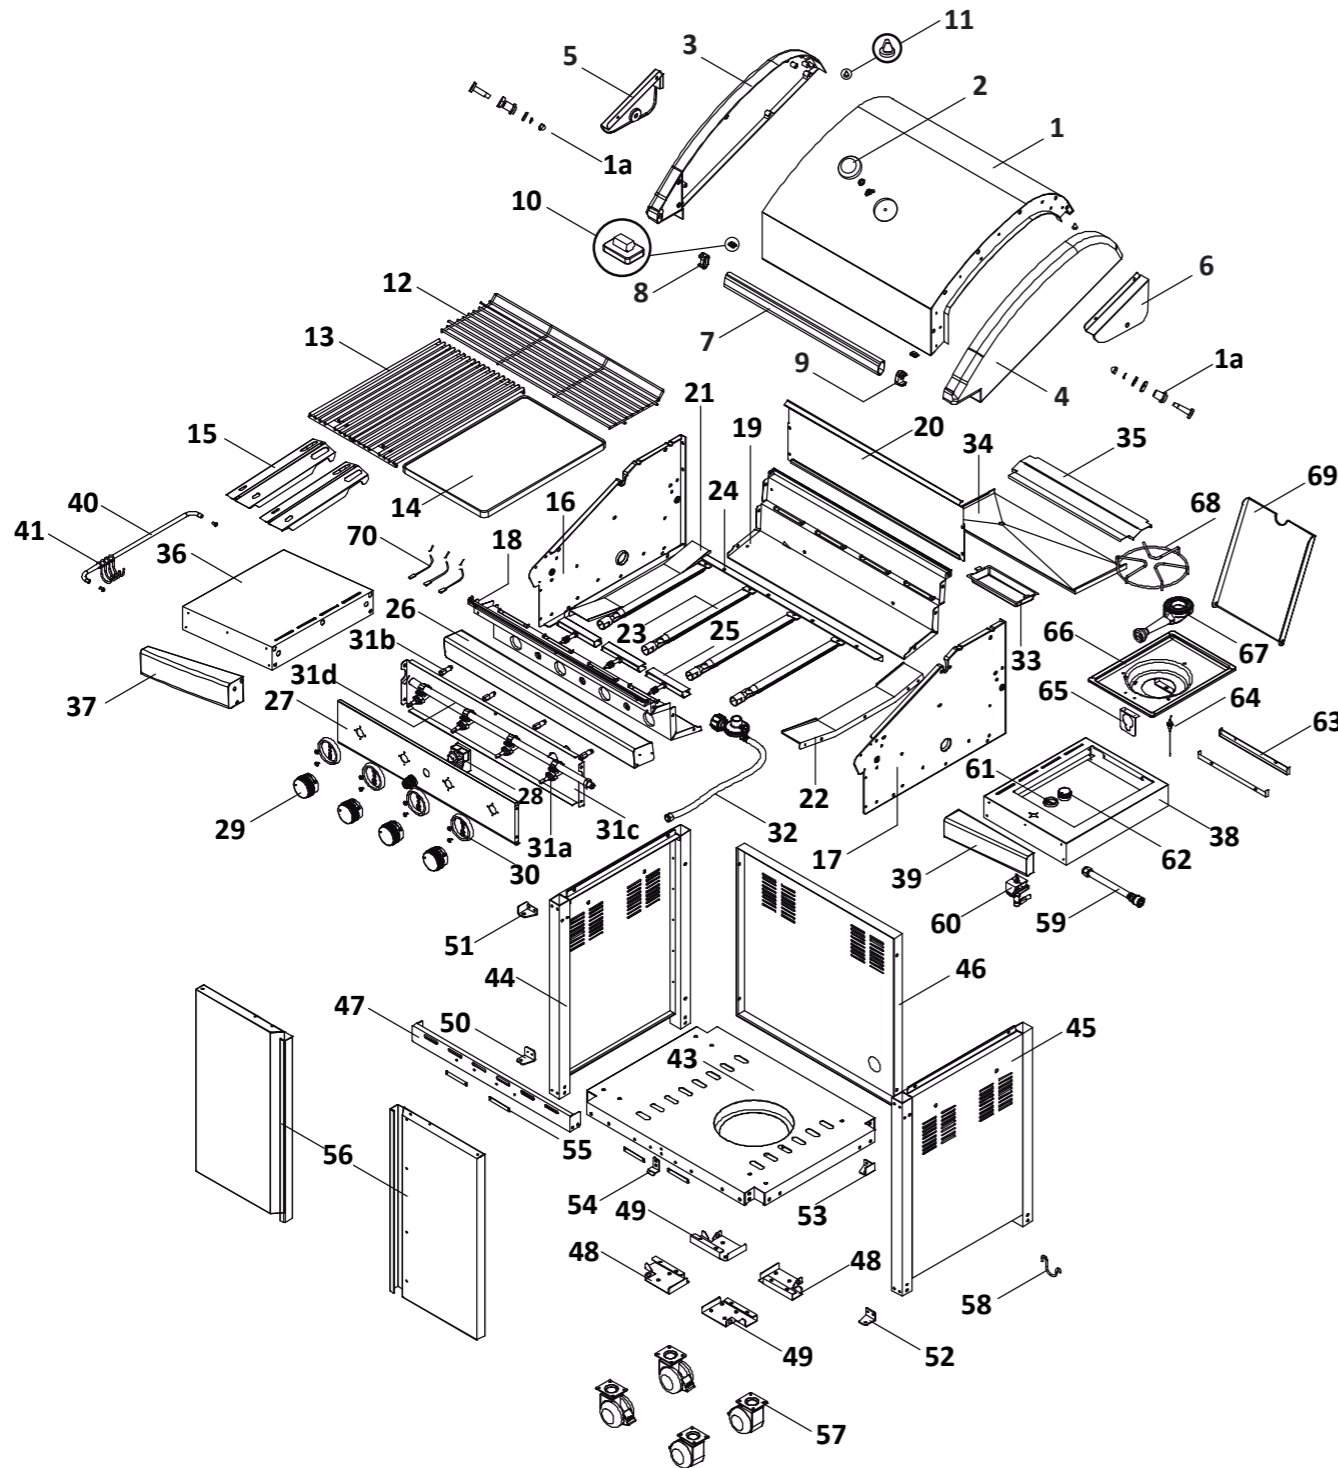

Ref.	Description	Qty.	Part No.
1	Hood	1	17751
1a	Hood hinge set	2	17668
2	Temperature gauge	1	17669
3	Hood panel - left	1	17670
4	Hood panel - right	1	17671
5	Hood hinge support - left	1	17672
6	Hood hinge support - right	1	17673
7	Hood handle	1	17752
8	Hood handle spacer - left	1	17675
9	Hood handle spacer - right	1	17676
10	Protective pad - front	2	17677
11	Protective pad - rear	2	18232
12	Secondary cooking (warming rack)	1	18013
13	Grill plate	2	18014
14	Hot plate	1	17584
15	Flame tamer	2	17604
16	Bowl panel - left	1	17678
17	Bowl panel - right	1	17679
18	Bowl panel - front	1	17753
19	Bowl panel - rear	1	17754
20	Bowl wind shield	1	18007
21	Grease tray track - left	1	18070
22	Grease tray track - right	1	18071
23	Main burner	4	18271
24	Burner support bracket	1	18600
25	Gas collector with electrode	3	18272
26	Upper decorative front panel	1	17755
27	Control panel	1	17756
28	Electric igniter - 4 port	1	17658
29	Control knob - main burner	4	17619
30	Control knob seat - main burner	4	18212
31	Manifold/heat shield assembly	1	17757
31a	Gas valve - main with jet	4	18277
31b	Jet main burner - ULPG	4	18538
31c	Heat shield	1	18020
31d	Manifold	1	18029
32	Regulator with hose	1	17685
33	Grease receptacle	1	18198
34	Grease draining tray	1	18018

Ref.	Description	Qty.	Part No.
35	Grease draining tray heat shield	1	18033
36	Side shelf - left	1	17526
37	Side shelf decoration panel - left	1	17686
38	Side shelf - right	1	17688
39	Side shelf decoration panel - right	1	17687
40	Tool holder	1	18228
41	Tool hook	4	18229
43	Trolley bottom shelf - ULPG	1	17758
44	Trolley legs with side panel - left	1	18283
45	Trolley legs with side panel - right	1	18284
46	Trolley rear panel	1	17759
47	Trolley bracket - front	1	17760
48	Castor seat - left front & right rear	2	18222
49	Castor seat - right front & left rear	2	18223
50	Door hinge bracket - bottom left	1	18288
51	Door hinge bracket - top left	1	18287
52	Door hinge bracket - bottom right	1	18024
53	Door hinge bracket - top right	1	18023
54	Door stop plate	1	17691
55	Door stop magnet	4	18030
56	Door assembly	2	17761
57	Castor wheel 3 " with brake	4	18220
58	Hose holder	1	18601
59	Side burner hose	1	18066
60	Gas valve side burner	1	18039
61	Control knob seat - side burner	1	17693
62	Control knob - side burner	1	17694
63	Side burner body bracket	2	18021
64	Side burner electrode	1	18646
65	Side burner bracket	1	18188
66	Side burner body	1	18645
67	Side burner	1	18184
68	Side burner pot support	1	17246
69	Side burner lid	1	18000
70	Electric wire set	1	18017
-	Rotisserie kit	1	ABBQ1321
-	Hardware pack	1	17764