


Maxim S7SB BBQ

This diagram is provided to assist you to identify parts if replacement is necessary. Contact your place of purchase or the manufacturer to enquire about parts, availability and/or service.

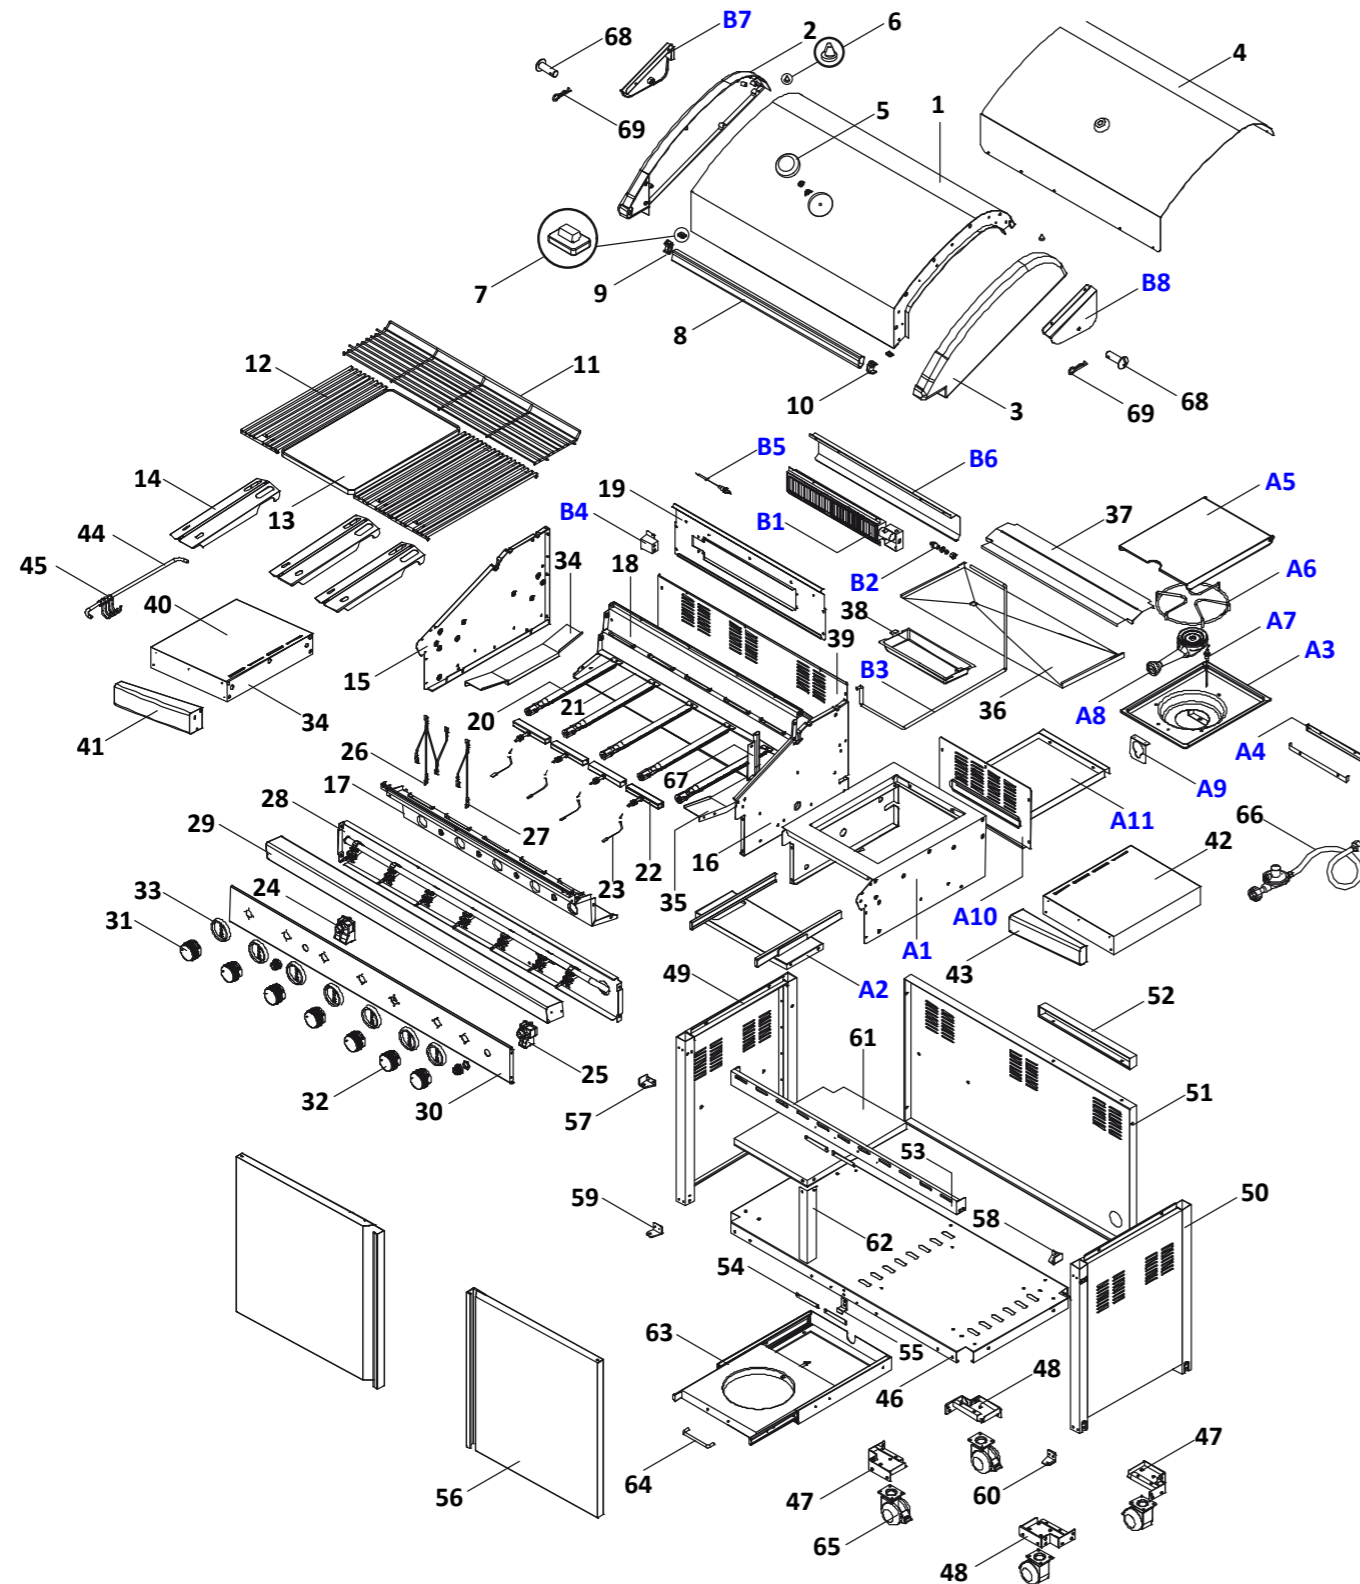


Ref.	Description	Qty.	Part No.
1	Hood	1	17695
2	Hood panel - left	1	17670
3	Hood panel - right	1	17671
4	Hood trim panel plate	1	17696
5	Temperature gauge	1	17669
6	Protective pad - rear	2	18232
7	Protective pad - front	2	17677
8	Hood handle	1	17674
9	Hood handle spacer - left	1	17675
10	Hood handle spacer - right	1	17676
11	Secondary cooking (warming rack)	1	18182
12	Grill plate	3	18250
13	Hotplate	1	17584
14	Flame tamer	3	17699
15	Bowl panel - left	1	17700
16	Bowl panel - right	1	17701
17	Bowl panel - front	1	17702
18	Bowl panel - rear	1	17703
19	Back burner frame	1	17705
20	Main burner	5	18271
21	Burner support bracket	1	18154
22	Gas collector with electrode	4	18272
23	Electric wire set	1	18195
24	Electric igniter - 4 port	1	17707
25	Electric igniter - 2 port	1	17708
26	Electric wire set - 5 contact	1	18196
27	Electric wire set - 2 contact	1	18194
28	Manifold/heat shield assembly:	1	17709
28a	- gas valve main	5	11710
28b	- gas valve side	1	18205
28c	- gas valve back burner	1	18203
28d	- manifold	1	18219
28e	- heat shield	1	17711
28f	- main burner jet ULPG	1	18539
29	Upper decorative panel	1	17713
30	Control panel	1	17714
31	Control knob main/side burner	6	17715
32	Control knob back burner	1	17716
33	Control knob seat	7	18212
34	Grease tray track - left	1	18224

Ref.	Description	Qty.	Part No.
35	Grease tray track - right	1	18225
36	Grease draining tray	1	18199
37	Grease draining tray heat shield	1	18237
38	Grease receptacle	1	18198
39	Bowl wind shield	1	18239
40	Side shelf - left	1	17717
41	Side shelf decoration panel - left	1	17719
42	Side shelf - right	1	17718
43	Side shelf decoration panel - right	1	17720
44	Tool holder	1	18228
45	Tool hook	4	18229
46	Trolley bottom shelf	1	17721
47	Castor seat - left front/right rear	2	18222
48	Castor seat - right front/left rear	2	18223
49	Trolley legs with side panel - left	1	18244
50	Trolley legs with side panel - right	1	18168
51	Trolley rear panel	1	18246
52	Trolley rear panel bracket	1	18207
53	Trolley bracket - front	1	17722
54	Door stop magnet	4	18226
55	Door stop plate	1	18227
56	Door assembly	2	17723
57	Door hinge bracket - top left	1	18159
58	Door hinge bracket - top right	1	18209
59	Door hinge bracket - bottom left	1	18210
60	Door hinge bracket - bottom right	1	18211
61	Partition panel	1	18243
62	Partition panel bracket	1	18206
63	Gas cylinder pull-out tray assembly	1	17724
64	Gas cylinder tray handle	1	17725
65	Castor wheel 3 " with brake	4	18220
66	Regulator with hose ULPG	1	17726
67	Lighting tube	1	18221
68	Hood hinge pin	2	17727
69	Cotter pin	2	17728

Refer next page for parts A1-B8 (in blue)

Maxim S7SB BBQ

This diagram is provided to assist you to identify parts if replacement is necessary. Contact your place of purchase or the manufacturer to enquire about parts, availability and/or service.

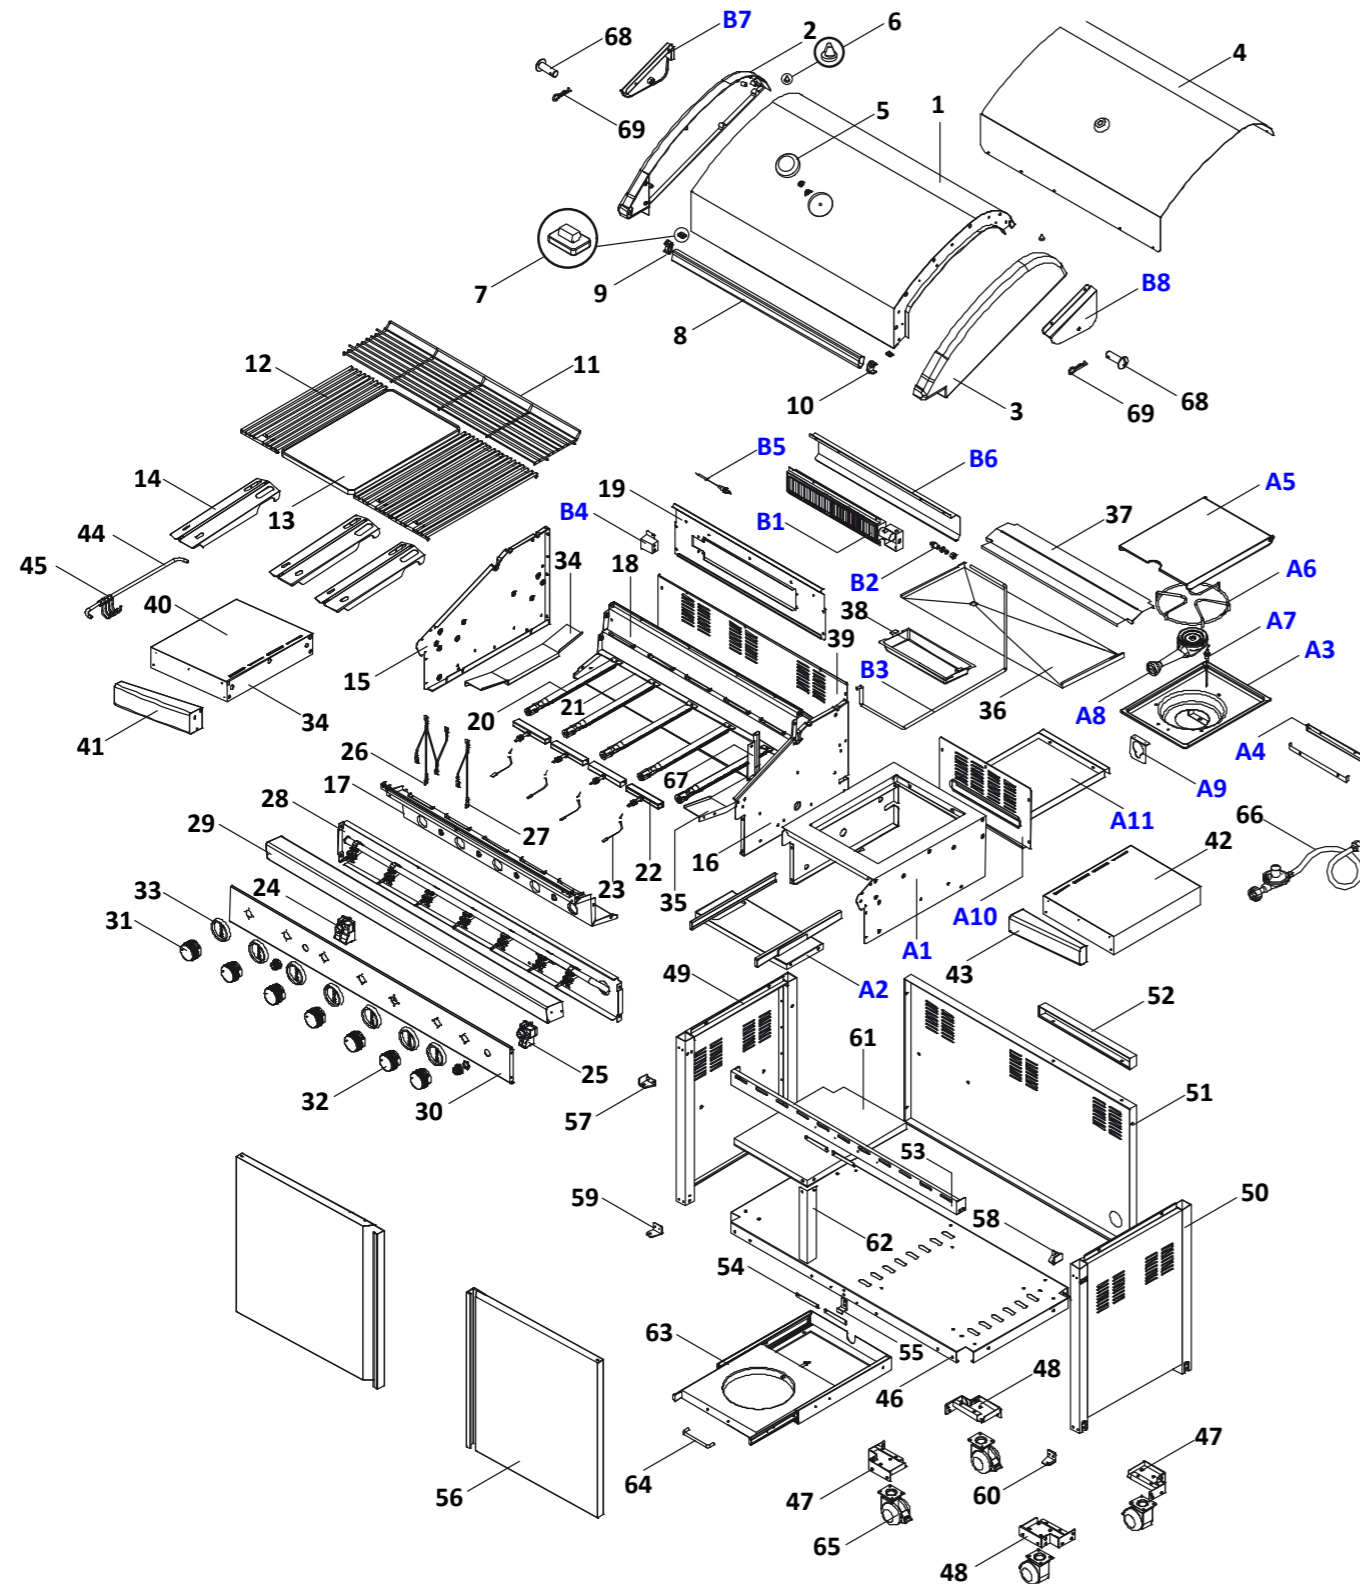

Ref.	Description	Qty.	Part No.
A1	Bowl side panel - outside right	1	17729
A2	Grease tray track assy - side burner	1	18231
A3	Side burner body	1	17730
A4	Side burner body bracket	2	18158
A5	Side burner lid	1	17731
A6	Side burner pot support	1	17246
A7	Side burner electrode	1	17732
A8	Side burner with brass ring	1	18184
A9	Side burner bracket	1	18188
A10	Side burner wind shield	1	18238
A11	Grease draining tray - side burner	1	18200
B1	Back burner assembly	1	18185
B2	Back burner jet ULPG	1	18235
B3	Back burner extension tube	1	18216
B4	Back burner gas collection box	1	18197
B5	Back burner electrode	1	18193
B6	Back burner wind shield	1	18240
B7	Hood hinge support - left	1	17734
B8	Hood hinge support - right	1	17736
Parts not shown in exploded diagram			
-	Hardware pack	1	17766
-	BBQ cover	1	ABBQ2019