

# Hotflo hot water heat pump error codes

<b>Display</b>	<b>Malfunction or protection</b>
E2	Communication malfunction
E3	T1, temperature sensor malfunction
E4	T5, water tank temperature sensor malfunction
E5	Condenser pipe temperature sensor malfunction
E6	Ambient temperature sensor malfunction
E7	T6, temperature sensor malfunction
E9	TP, temperature sensor malfunction
EA	T8, temperature sensor malfunction
P2	Current protection
P8	Tube, tube heat exchanger over temperature protection
P9	Discharge temperature overheat protection
PA	Water temperature overload protection
Pb	Anti-frozen protection