

# Cosypanel R501 and R501TF heater


This diagram is provided to assist you to identify parts if replacement is necessary. Contact your place of purchase or the manufacturer to enquire about parts, availability and/or service.

**Exploded diagrams are not available for this product**

This appliance cannot be converted



**Cosypanel R501**

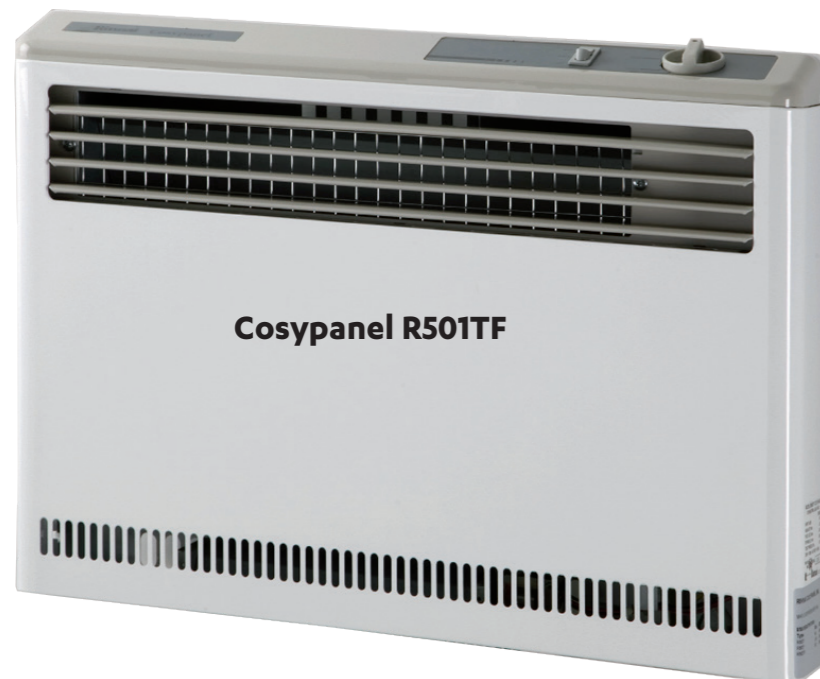

**Cosypanel R501TF**

Description	Part No.
Gas supply tube assembly (May-05 manufacture onwards), comprises: - retainer 6803-1 - 8 mm tube 8300 - nut 7956 - injector block 6353	6806
Electrode	5423
Thermocouple	6319
Thermocouple retainer	6632
Burner	6384
Control knob - ruskin grey	6798
Control valve NG	6781
Control valve LPG	6300
Front panel white	6804W
Front panel white TF model	6863W
Top panel - ruskin grey	6801F
Injector R501 NG 1.05 mm	5548
Pilot injector NG 0.65 mm	6094
Pilot burner and injector assembly	6309
Injector NG 0.90 mm	6782
Injector LPG 0.60 mm	6391
Escutcheon label T	6794
Escutcheon lable TF model	6834
Louvre assembly - painted grey	6819
Louvre guard (anti-post mesh)	6866

Description	Part No.
Flare nut 3/8	5030
Pilot tube	6787
Pilot tube washer	6789
Pilot holder	5421
Electrode retaining bracket	5422
Pilot holder screw	5424
Rear panel white TF model	6864W
Lower wall bracket	6379
Bottom panel T	6805
Bottom panel TF model	6860
Model label	6793
Inlet tube	6799
Wall mounting bracket	5547
Fan TF model	5354
Fan switch TF model	6402G
Wiring harness TF model	6859
Power cord TF	5378
<b>Paint information</b>	
<ul style="list-style-type: none"> <li>Pearl white (Orica PF50277)</li> <li>Grey (Stove bright 1PL017025003)</li> </ul>	