


Installation Instructions

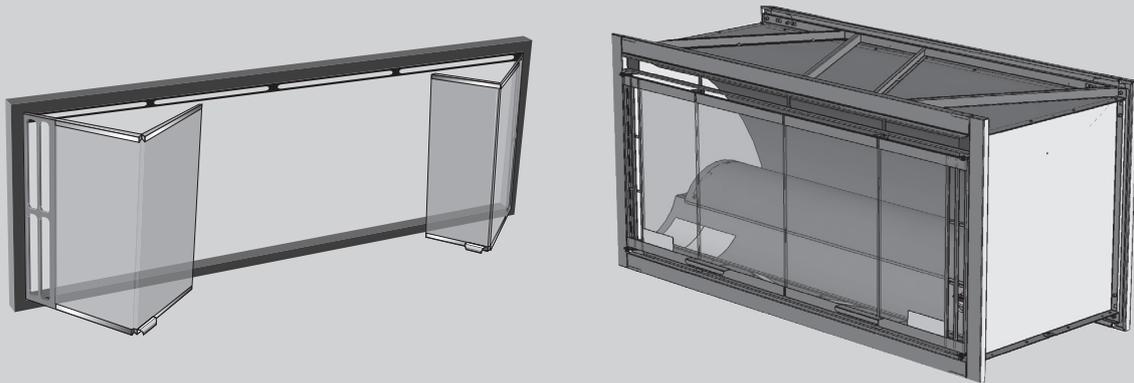

Only for use with cabinet installations of the
Rinnai Impression Outdoor Fire

Suitable for cabinet installations and installations using cladding and finishes that can withstand temperatures up to 150 °C.

Operation of the Rinnai Impression Outdoor Fire with doors can result in high temperatures being emitted from the top louvre. When fitting the Rinnai Impression Door Assembly ensure surround cladding and finishes above the appliance can withstand temperatures of 150 °C.

Rinnai accepts no responsibility for deterioration of cladding or finishes.

Owner, please retain this manual for future reference.



LIMITED WARRANTY

Rinnai brings you peace of mind
with a 2 year minimum warranty.

TERMS AND CONDITIONS

1. During the 24 month period from date of purchase and subject to clauses 2 and 3 below, Rinnai New Zealand Limited ("Rinnai") will, at its own discretion, either replace or repair any defective product at no charge to the customer.

2. This warranty covers manufacturing defects only. This warranty will not apply if (for example) the product has been improperly installed or is otherwise installed contrary to manufacturer's recommendations, or has been subjected to damage or abuse beyond that expected from conditions of normal use.

3. This warranty commences from the date of purchase. Proof of purchase is required at the time of any warranty claim.

The company is constantly improving its products and as such specifications are subject to change or variation without notice.

RECORD AND ATTACH YOUR PROOF OF PURCHASE BELOW:

Your Retailer: _____

Name: _____

Address: _____

Telephone: (_____) _____

Date of Purchase: _____ / _____ / _____

Rinnai


About the Impression Door Assembly

The assembly is comprised of tempered glass double bi-fold doors with stainless steel surrounds and fixings. This offers wind protection when the unit is on and when not in use protection from wind, rain and nesting animals.

The assembly fixes to the cabinet frame of the Rinnai Impression Outdoor Fire, so is only suitable for installations where a cabinet (also called a body assembly) has been installed.



Cabinet installation - door assembly is suitable

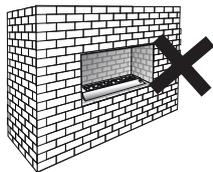

Only has a burner assembly installed - door assembly IS NOT suitable

The unit can operate with the doors open or closed, however for best radiant heat the doors should be open during operation.



If the doors are closed during operation **DO NOT** touch the glass. The glass can reach very high temperatures and cause severe burns.

Young children should be supervised at all times when the unit is in operation.

Maintenance

You can clean the doors using a soft damp cloth and mild detergent. **DO NOT** attempt to clean the appliance while it is hot or operating. **DO NOT** use abrasives or solvents.

You will need



Phillips head screwdriver - number 2



Approximately one hour with one person

Before installation



Check for damage. **DO NOT** install any damaged items.




Check all components have been supplied, refer kit components on following page.



Read these instructions to get an overview of the steps required before starting.

Door Assembly Kit Components

The Impression Door Assembly comes flat packed in one box and contains the following:

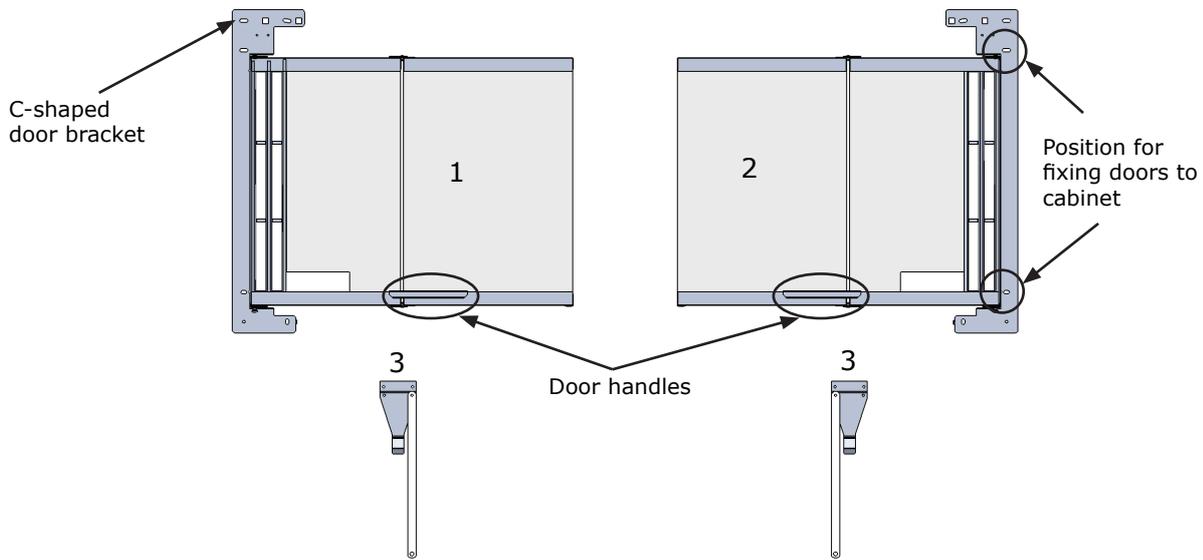

	Component	Quantity
1	Left hand glass panel and surround	1
2	Right hand glass panel and surround	1
3	Door swing catch set	1
-	Screws M4x10 (for fitting swing arms into cabinet)	4
-	Screws M5x8 (for fitting swing arms to doors)	2


Please note

These instructions will vary depending on whether the doors are being retrofitted or assembled at the same time as the Impression Outdoor Fire.

Door Assembly Installation Instructions

Fit door swing arms

Remove the left and right swing arms from the door assembly kit.

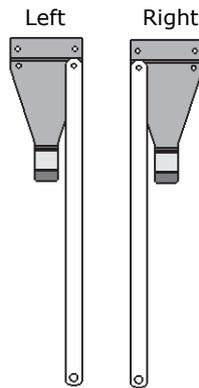

If the Impression Outdoor Fire has already been installed and you are retrofitting the doors, you will need to remove the frame and burner assembly before the swing arms can be screwed in place (refer p. 7).

Fit the swing arms into the smaller predrilled holes of the Impression cabinet using the smaller machine screws provided (two screws per arm). To view the position of the swing arms in the cabinet, refer to image on following page.

Install the body/burner assembly

The body/burner assembly needs to be fitted BEFORE the doors as the doors reduce entry access into the enclosure.

New installation	If you have purchased your doors with the Impression Outdoor Fire you need to install the body/burner assembly before the doors. To do this unpack the burner, slide into the cabinet and fit the granite pieces into place.
Retrofit	If the doors are being retrofitted the burner assembly needs to be fitted back into the cabinet. Reinstall by reversing the steps taken on page 7.

Fix doors to cabinet

If retrofitting the door assembly remove the C-shaped brackets already positioned as these are replaced by the C-shaped door brackets.

Fix the doors to the cabinet:

1. Slot the C-shaped door bracket over the louvre ensuring the holes line up with those on the unit. Rest the door on the swing mount, this will help level the door.
2. Secure the two machine screws into the side frame, level as best as you can and fix in place with the remaining four screws. Do not tighten at this stage as you will need to align both doors.
3. Repeat steps 1-2 with the other door.


Door Assembly Installation Instructions

Align doors and attach frame brackets

Align the doors and tighten, some adjustment may be necessary to square the frame, holding the door with one hand and tightening the screws with the other is a good way to do this.




Secure the four frame brackets provided with the Impression Outdoor Fire.

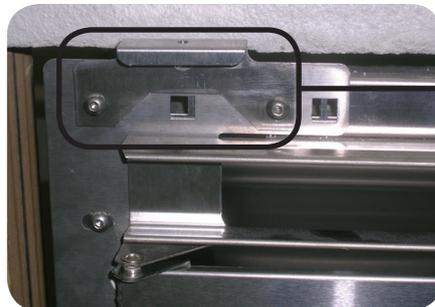

Frame bracket

Fit doors to swing arms

Attach the doors to swing arms using screws provided.

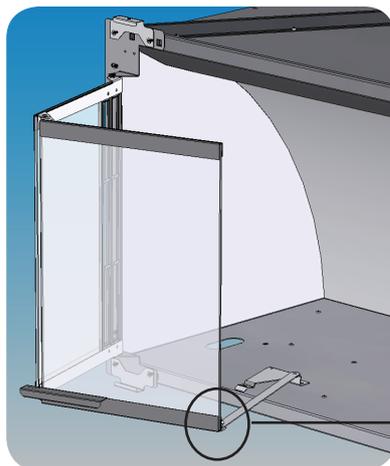

Attach door to swing arm

Attach the frame

Attach the frame from the Impression Outdoor Fire, refer separate instructions (Impression Outdoor Fire Installation and Operation Manual).

Retrofit Installations

If the Impression Outdoor Fire has already been installed and you are retrofitting the doors, you will need to remove the frame and burner assembly before the swing arms can be screwed in place.


Removing the frame

Remove the two underside screws from the bottom of the frame. Detach the frame from the bottom, swing out and up to remove.

Detach frame from the bottom



Remove the four frame brackets.

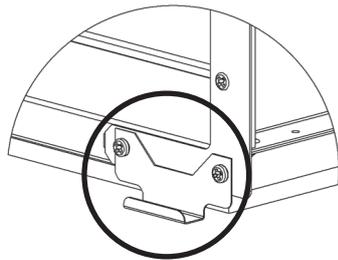

Removing the burner assembly

The burner assembly weighs approximately 20 kg, if required seek additional assistance in lifting. You may also want to remove some of the large quartz pieces to make it easier to carry.

1. Disconnect the gas and the gas connection.
2. Remove the left and right granite plates from the burner.
3. Remove the large M5 burner mounting screws on the left and right of the burner assembly.
4. Carefully remove the burner and set aside



Consumers: 0800 RINNAI (746 624)
Installers: 0800 TO RINNAI (86 746 624)

Address: 105 Pavilion Drive, Airport Oaks, Mangere, Manukau
PO Box 53177, Auckland Airport, Manukau 2150

Phone: (09) 257 3800
Fax: (09) 257 3899

Email: info@rinnai.co.nz
Website: www.rinnai.co.nz

Rinnai is constantly improving its products and as such information and specifications are subject to change or variation without notice.