





This diagram is provided to assist you to identify parts if replacement is necessary. Contact your place of purchase or the manufacturer to enquire about parts, availability and/or service.

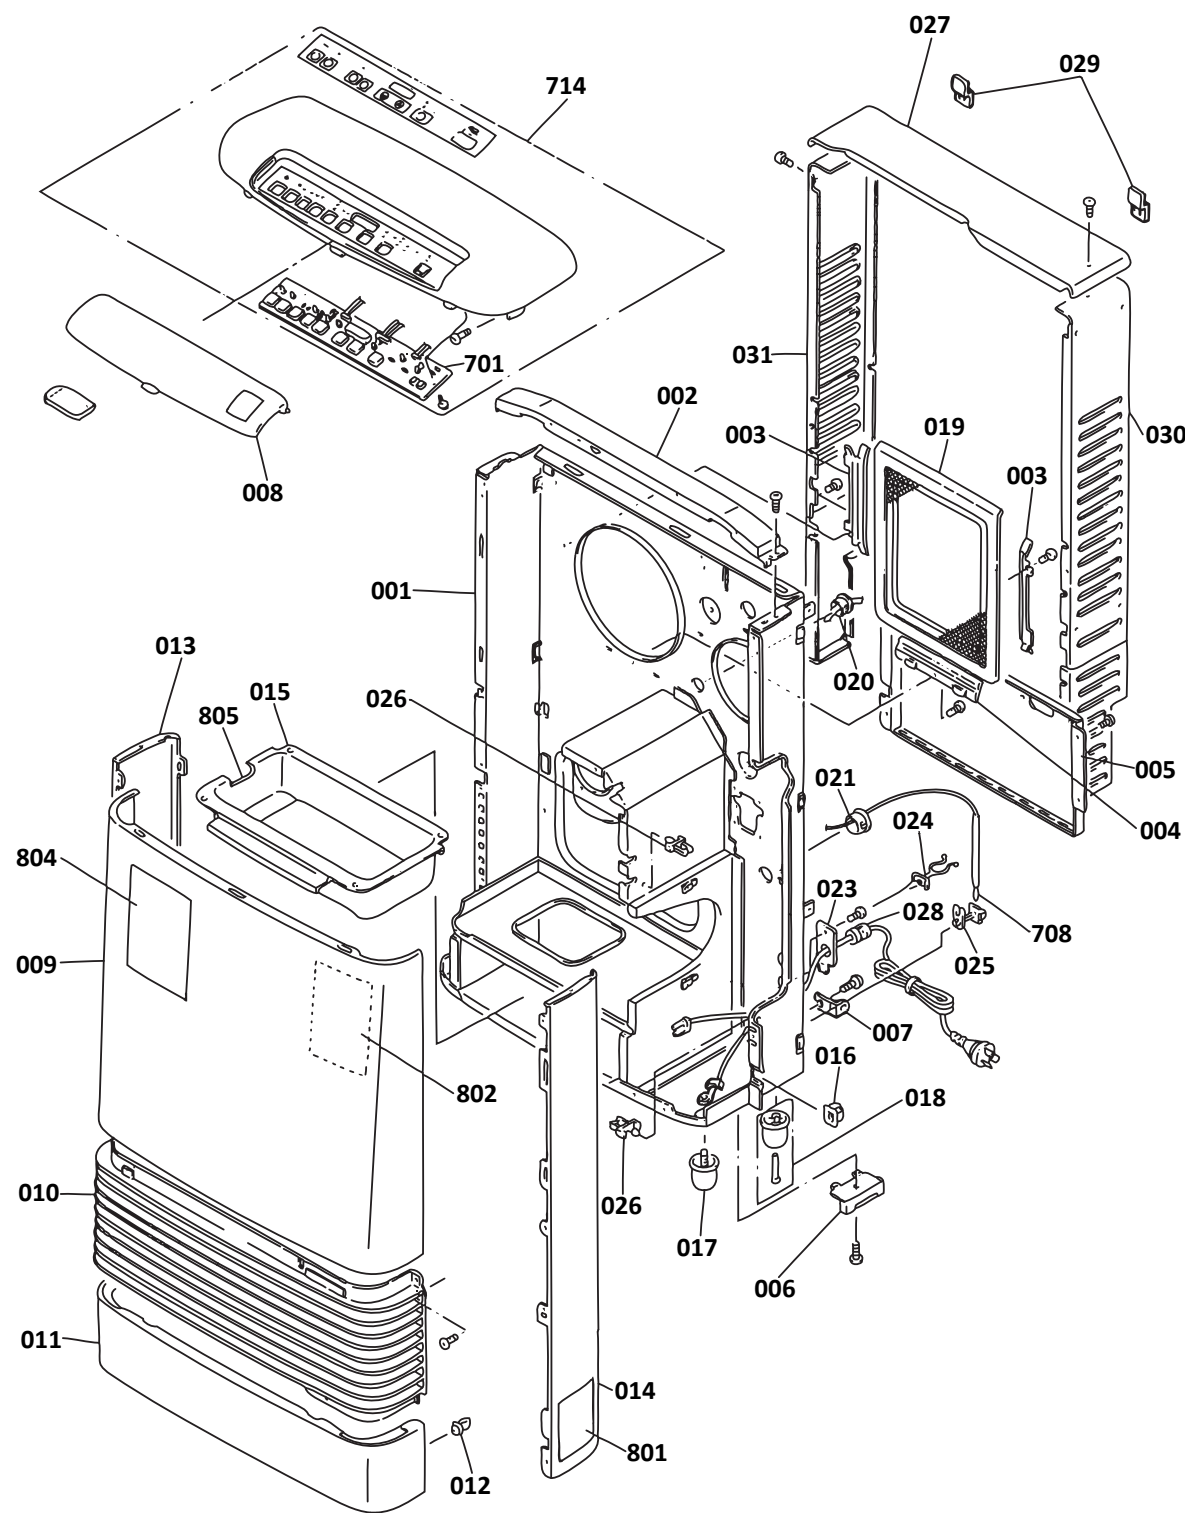

Ref.	Description	Qty.	Part No.
001	Rear panel assembly A	1	Not available
002	Top panel support	1	Not available
003	Filter clip - side	2	Not available
004	Filter clip	1	Not available
005	Rear panel heat shield	1	Not available
006	Floor mounting bracket	2	3541
007	Back spacer bracket	2	3542
008	Control cover assembly	1	3545
009	Front panel B	1	3546
010	Louvre assembly	1	3547
011	Bottom trim assembly B	1	3548
012	Strike	2	3038
013	Side panel B LH	1	3549
014	Side panel B RH	1	3553
015	Humidifier tray	1	3554
016	Latch	2	3028
017	Front foot	2	3403
018	Foot	2	3405
019	Air filter assembly B	1	3576
020	Bush	1	Not available
021	Bush	1	Not available
023	Electrical cord fixing plate	1	Not available
024	Cable clip	2	6698
025	Thermistor holder	1	4252
026	Wiring clip	1	2043
027	Back spacer top B	1	3577
028	Cord bush	1	2048
029	Clip	2	6684
030	Back spacer RH assembly	1	3578
031	Back spacer LH assembly	1	3579
701	Control panel PCB assembly	1	4394
708	Room temperature & overheat thermistor assembly	1	4386
714	Top panel assembly	1	4397
801	Data plate	1	Not available
802	Wiring diagram	1	Not available




This diagram is provided to assist you to identify parts if replacement is necessary. Contact your place of purchase or the manufacturer to enquire about parts, availability and/or service.

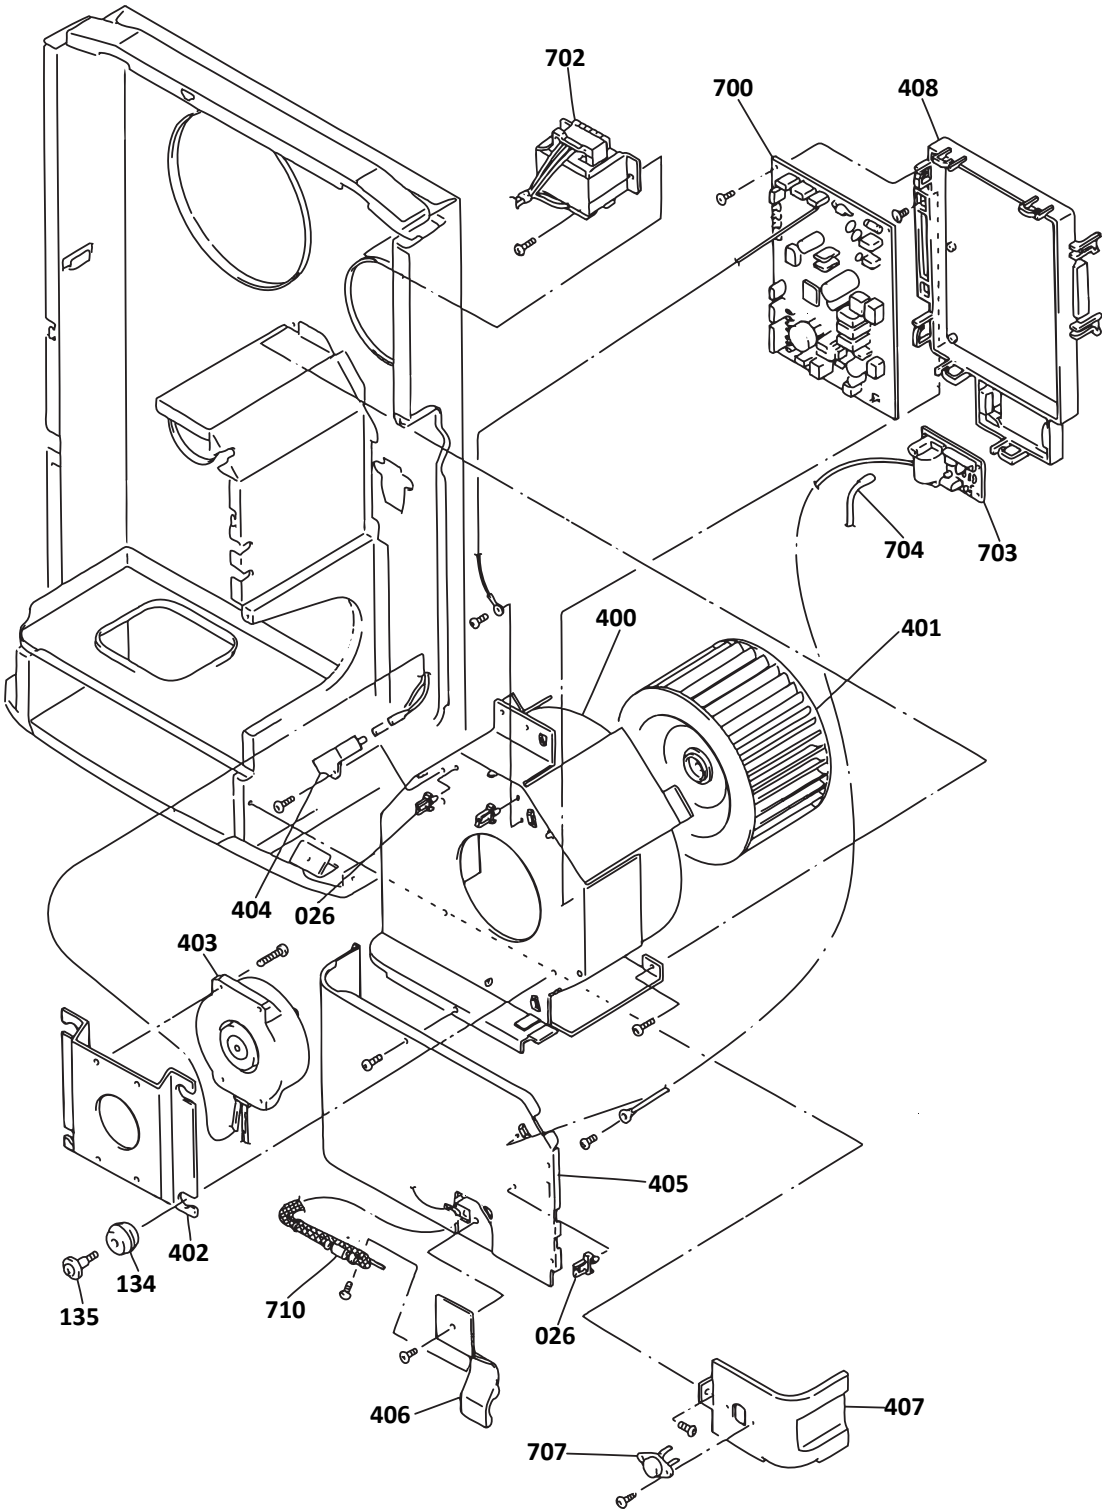

Ref.	Description	Qty.	Part No.
026	Wiring clip	2	2043
134	Mounting rubber	7	4364
135	Motor fixing screw	3	Not available
400	Convection fan casing assembly	1	Not available
401	Sirroco fan assembly	1	4391
402	Fan motor base	1	Not available
403	Convection fan motor and harness	1	4392
404	Capacitor	1	3107
405	Heat shield	1	Not available
406	Thermal fuse fixing panel	1	Not available
407	OHS 2 mounting bracket	1	Not available
408	PCB mounting bracket	1	Not available
700	PCB	1	4393
702	Transformer	1	3116
703	Sparker	1	2958
704	High tension cord assembly B	1	4383
707	Overheat switch 90 °C	1	4384
710	Thermal fuse harness	1	4395




This diagram is provided to assist you to identify parts if replacement is necessary. Contact your place of purchase or the manufacturer to enquire about parts, availability and/or service.

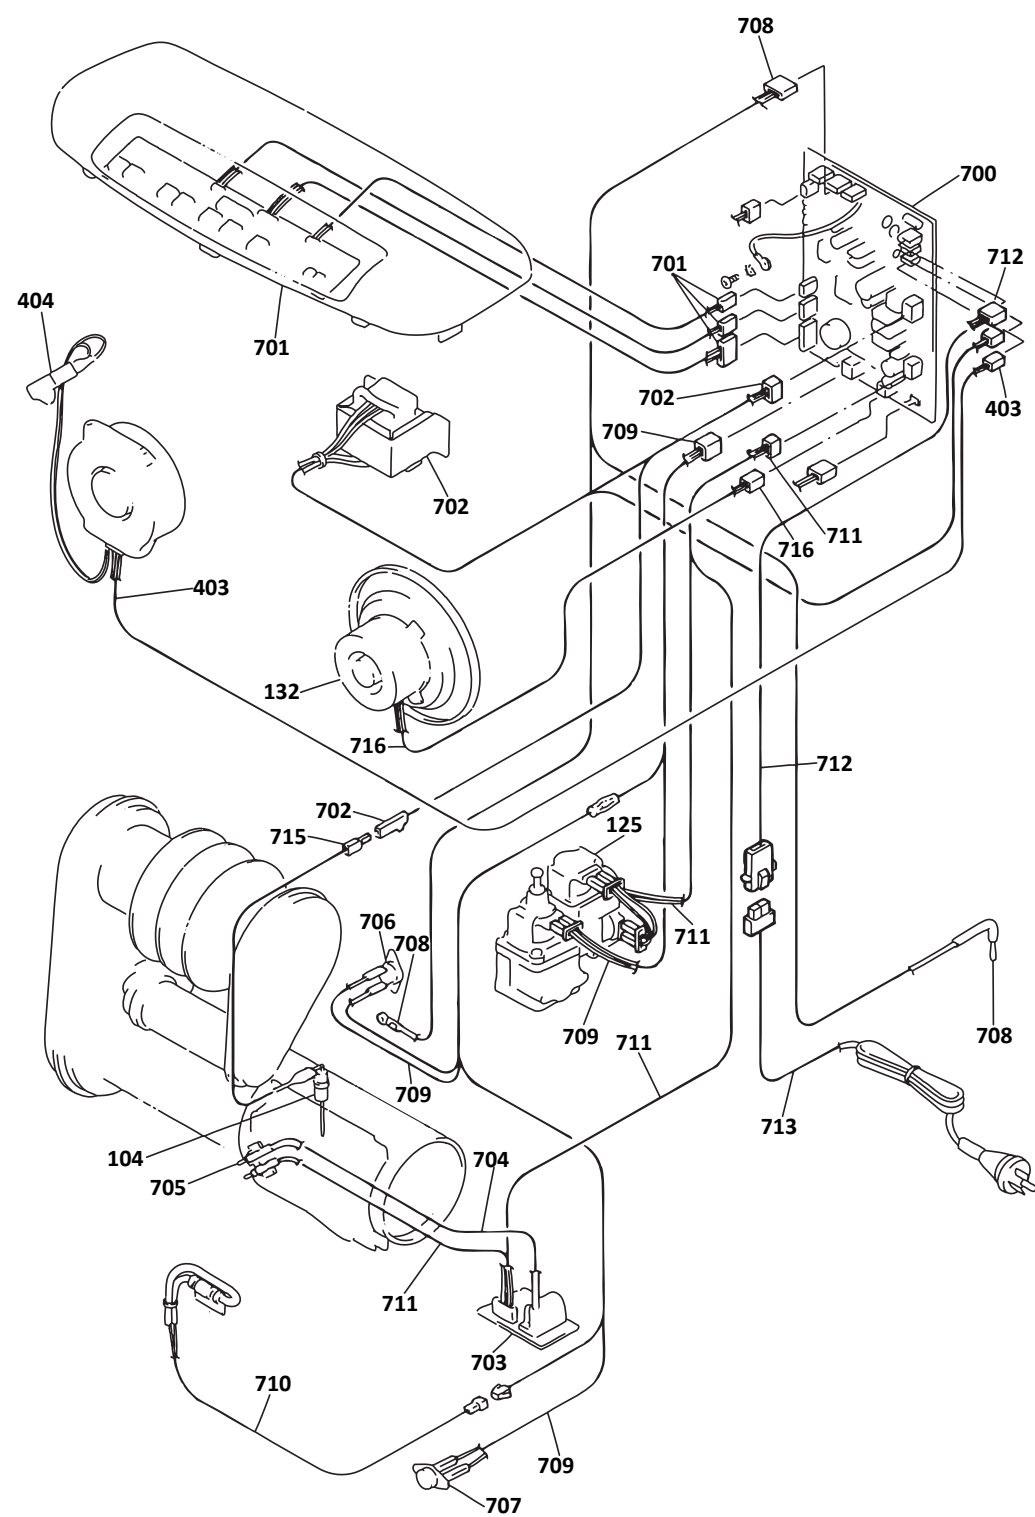

Ref.	Description	Qty.	Part No.
104	Flame rod	1	4299
125	Gas control assembly A LPG	1	3595
125	Gas control assembly C NG	1	3596
132	Combustion fan complete assembly	1	3995
403	Convection fan motor harness	1	4392
404	Capacitor	1	3107
700	PCB	1	4393
701	Control panel PCB assembly	1	4394
702	Transformer	1	3116
703	Sparker	1	2958
704	High tension cord assembly B	1	4383
705	Electrode sleeve	1	7564
706	Overheat switch 130 °C	1	4385
707	Overheat switch 90 °C	1	4384
708	Room temperature & overheat thermistor assembly	1	4386
709	Solenoid valve harness	1	4389
710	Thermal fuse harness	1	4395
711	Main harness assembly	1	4387
712	Electrical cord assembly	1	4396
713	Power cord assembly	1	3115
715	Flame rod lead	1	4398
716	Combustion motor harness A	1	4399



This diagram is provided to assist you to identify parts if replacement is necessary. Contact your place of purchase or the manufacturer to enquire about parts, availability and/or service.

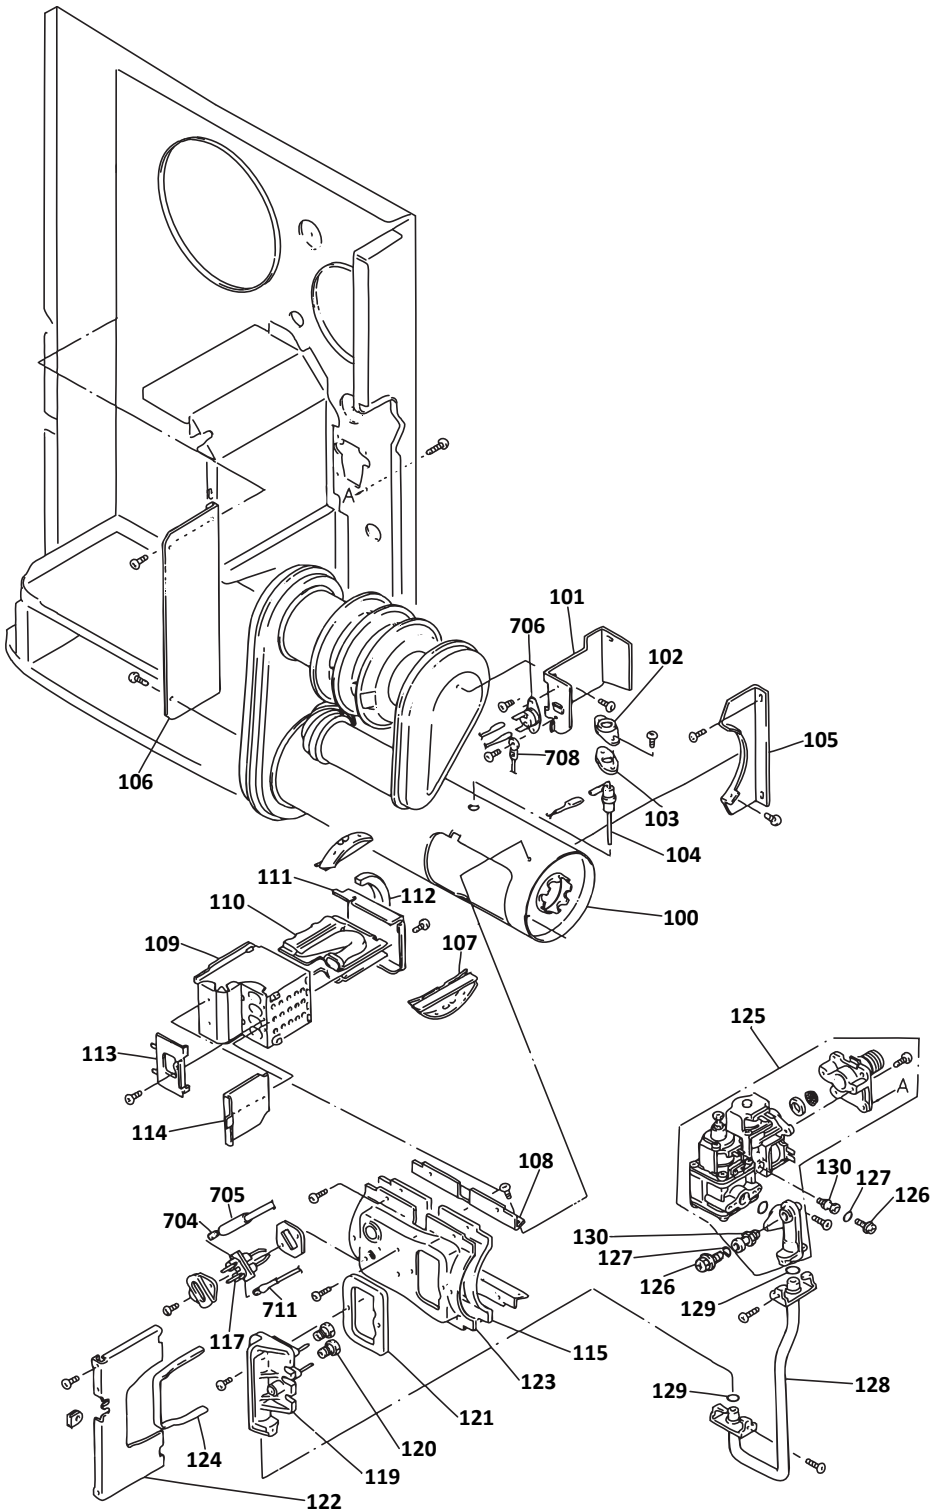


Ref.	Description	Qty.	Part No.
100	Heat exchanger assembly	1	3580
101	OHS bracket	1	Not available
102	Flame rod bracket	1	Not available
103	Flame rod packing	1	3069
104	Flame rod	1	4299
105	Combustion chamber fixing bracket	1	Not available
106	Heat exchanger bracket	1	Not available
107	Sealing bracket assembly	2	Not available
108	Flange	2	Not available
109	Burner box assembly	1	Not available
110	Burner assembly	1	3091
111	Burner clip assembly	1	Not available
112	Burner box packing	1	4231
113	Primary air damper LPG	1	3588
113	Primary air damper NG	1	3592
114	Secondary air damper LPG	1	3593
114	Secondary air damper NG	1	3594
115	Fixing plate packing	1	Not available
117	Electrode kit	1	R1346
119	Injector manifold	1	Not available
120	Main injector NG	2	2394
120	Main injector LPG	2	2393
121	Manifold packing	1	3094
122	Warm air sealing bracket	1	Not available

Ref.	Description	Qty.	Part No.
123	Burner box mounting plate assy.	1	Not available
124	Heat exchanger packing B	1	4306
125	Gas control assembly A LPG	1	3595
125	Gas control assembly C NG	1	3596
126	Pressure test point screw	3	Not available
127	O-ring	3	2239
128	Gas supply connection tube assy.	1	3856
129	O-ring	2	2389
130	Pressure test point	2	4204
704	High tension cord assembly B	1	4383
706	Overheat switch 130 oC	1	4385
711	Main harness assembly	1	4387



This diagram is provided to assist you to identify parts if replacement is necessary. Contact your place of purchase or the manufacturer to enquire about parts, availability and/or service.

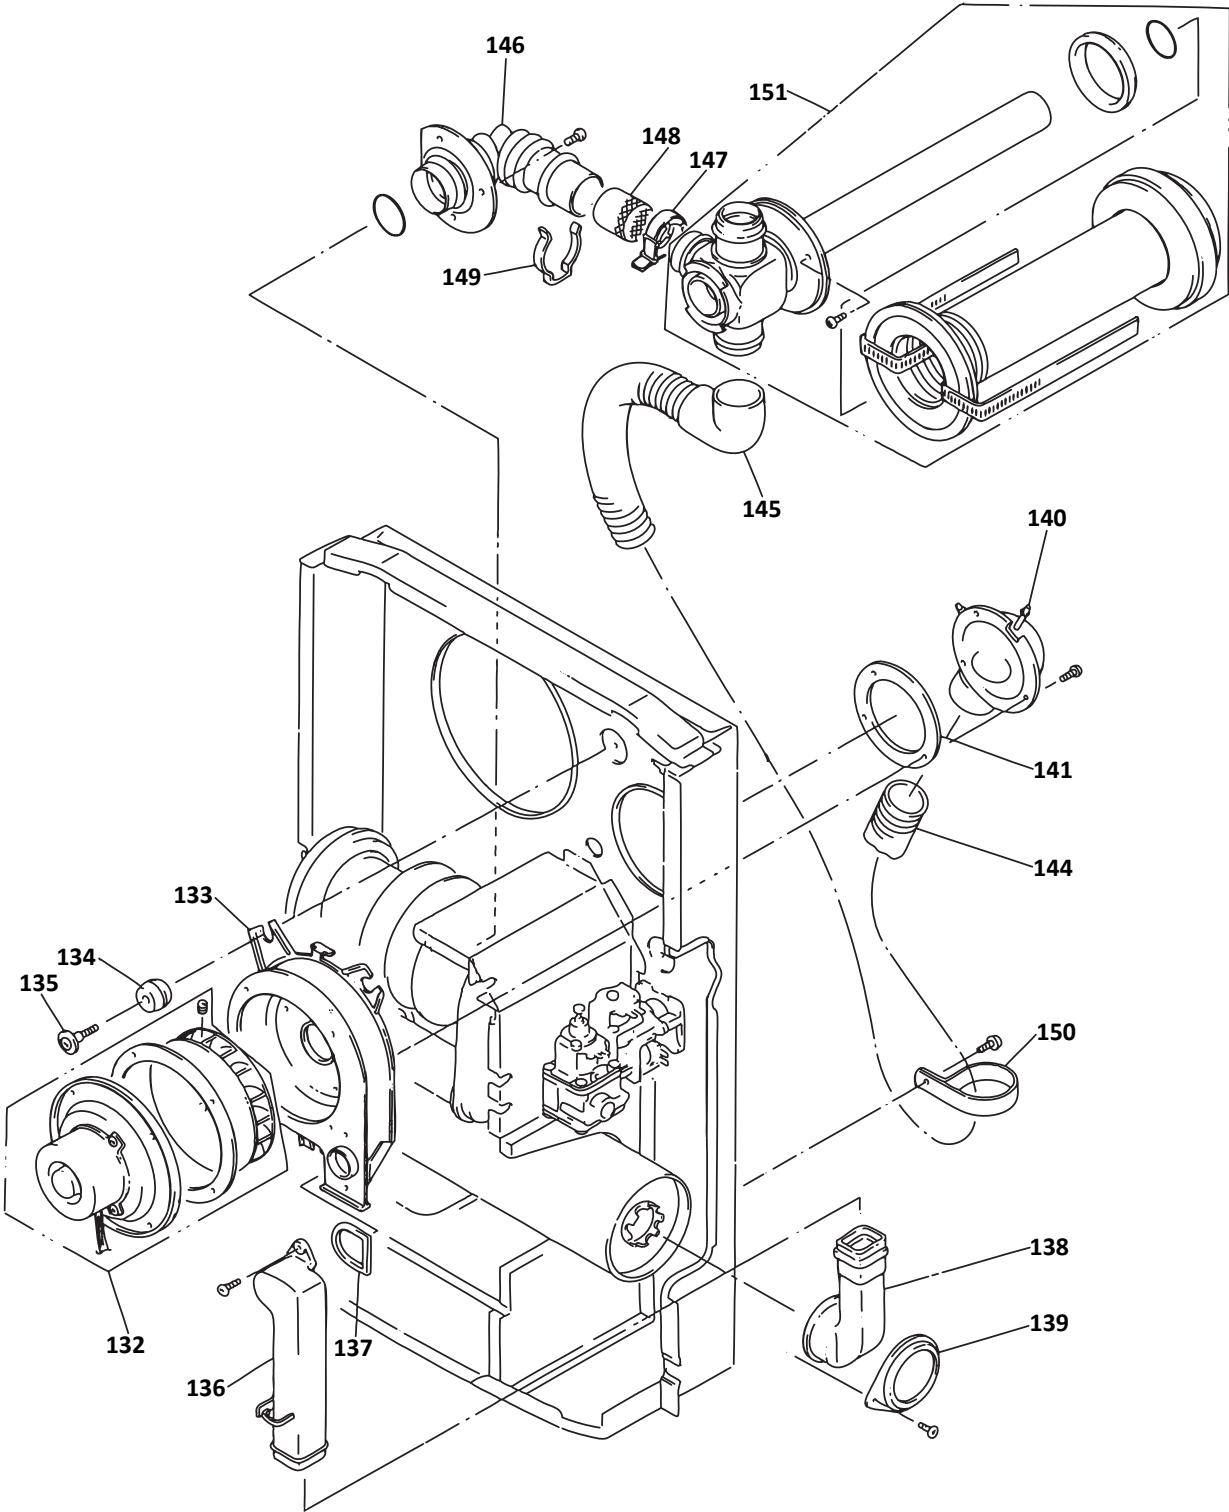

Ref.	Description	Qty.	Part No.
132	Combustion fan assembly	1	3995
133	Combustion fan casing assembly	1	Not available
134	Mounting rubber	7	4364
135	Motor fixing screw	3	Not available
136	Combustion chamber connection tube top	1	3996
137	Connection tube packing	1	3997
138	Combustion chamber connection tube bottom	1	3998
139	Rubber connection tube clip	1	3103
140	Air inlet C	1	4367
141	Air inlet packing	1	4053
144	Flexible intake hose	1	4041
145	Air inlet elbow	1	4040
146	Flue elbow assembly	1	3999
147	Stopper clip assembly	1	3455
148	Elbow cover	1	2972
149	Ring	1	4171
150	Clamp	2	4373
151	Mushroom flue A (115-240 mm)	1	R1351

Not shown in exploded diagram			
-	Surge arrestor	1	3212
-	Harness surge arrestor 2001	1	3213
-	Installation kit	1	3112

Flueing related			
-	Fixing strap	1	9830
-	Spiral spacer	1	9833
-	Plastic condensate tube	1	9835
-	Transition box manifold assy. (thru-wall flue only)	1	1004
-	Transition box manifold assy. (in-wall flue only)	1	1003
-	Header plate top flue support (in-wall flue only)	1	9831
-	Vertical flue cowl Voumard (in-wall and thru-wall flue only)	1	3232
-	Appliance flue joiner clip (in-wall flue only)	1	9834
-	O-ring (for ESPIPE900 & ESDFK)	1	4350
-	Spacer (for ESPIPE900 & ESDFK)	1	4351