 
 
 
 
 
 
 
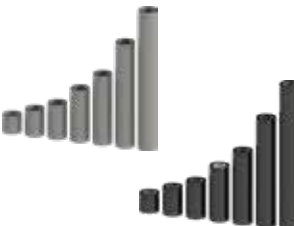 


Novo Freestander and Cube

ordering guide

1. Select gas type		Code	
	Novo Cube NG	RDV2320 FN	
	Novo Cube LPG	RDV2320 FL	
Includes engine, cube wrap, outer frame, IR remote, stainless steel gas pipe, brass adapter, aeration plates and screws, log set and granules.			
2. Select optional accessories			
	Novo Freestander Cabinet Base	R2362GL	
	Novo Freestander Plinth Base	R2363GL	
	Novo Freestander Mesh Frame	R2371	
	Wi-Fi module control kit	R7000	
3. Select flue components			
	Novo Freestanding flue kit DV black 3.6 m (If you need to order the flue cowl separately the part is R3651)	R3706	
	Elbow flue strap	R3644	
	Wall flue strap	R3647	
	High wind vertical cowl protection kit	R3655	
3. Select flue components unpainted, or painted		Unpainted	Painted
	Flue pipe 150 mm	R3630	R3630GL
	Flue pipe 230 mm	R3631	R3631GL
	Flue pipe 300 mm	R3632	R3632GL
	Flue pipe 450 mm	R3633	R3633GL
	Flue pipe 600 mm	R3634	R3634GL
	Flue pipe 900 mm	R3635	R3635GL
	Flue pipe 1200 mm	R3636	R3636GL
	Flue pipe extension 75-175 mm	R3638	R3638GL
	Flue pipe extension 75-360 mm	R3639	R3639GL
	Coaxial 45° flue elbows (two bends in a kit)	R3642	R3642GL
	Coaxial 90° flue elbow	R3643	R3643GL
	Flue DV plate 45°		R3608GL
	Flue DV plate 90°		R3609GL