


MODEL: RDV23 (SS850 / NOVO)  
RIB23 (SAPPHIRE / NEO)

## LOG LOCATION GUIDE

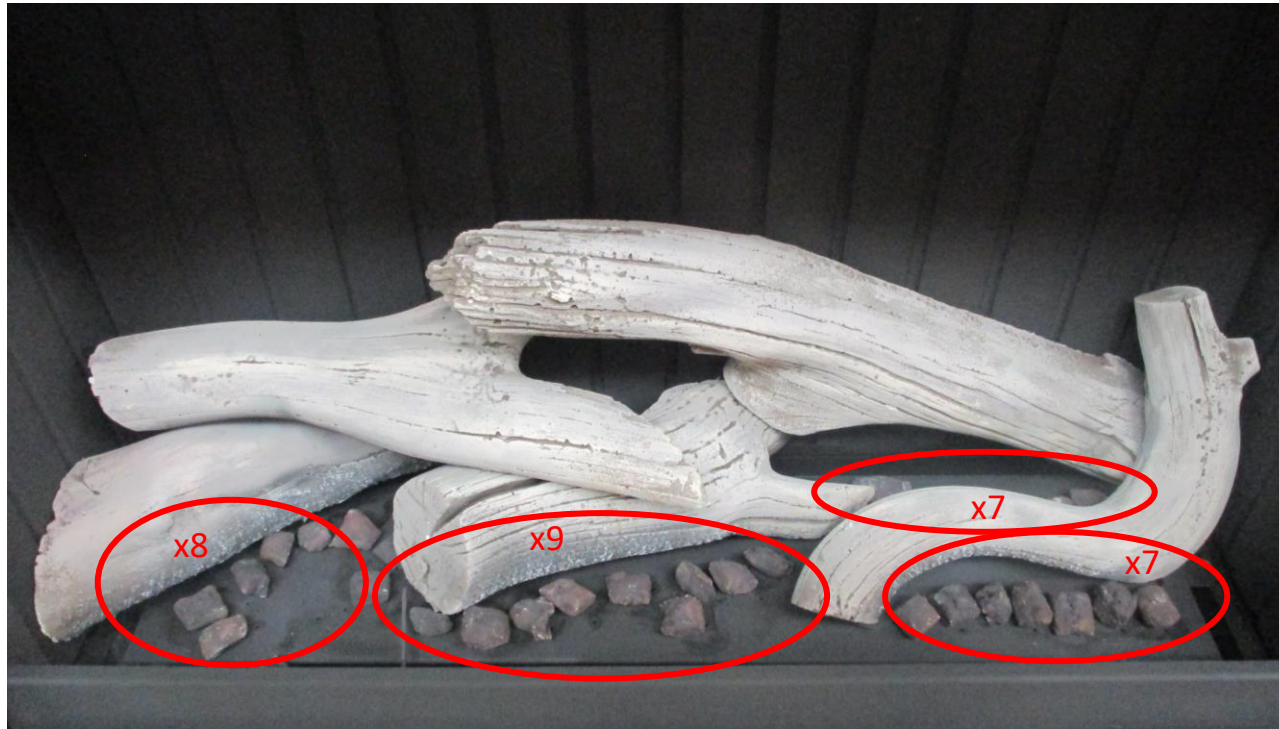

Place 31 granules along the line of the burner ports as indicated in the photo.

Discard surplus granules.



Ensure that the left hand log is sitting on top of the 2 support brackets (NOT directly on Burner)



Ensure left hand log is pushed hard against LH side and Rear Ceramic Panels



Don't place granules directly in front of the Pilot Flame



If there are some abnormally long, streaky flames then re-adjust the position of the granules around those holes slightly until improved.