

ADDENDUM

INSTRUCTION MANUAL P80141002A

The attached assembly instruction replaces the information on pages 9-11 and should be read in conjunction with the booklet provided with the appliance.

SAFARI / IMPRESSOR 4

Unpack and remove all protective packaging.

NOTE: The labels on the trolley legs indicate their assembly position to the bottom shelf. LF=Left Front, LR=Left Rear, RF=Right Front, and RR=Right Rear. Labels should face inward toward each other when correctly assembled. Remaining components cannot be assembled if leg positions are incorrect.

2. Locate the four (4) trolley legs to the indicated corners of the bottom shelf using eight (8) $\frac{1}{4}$ " x $2\frac{1}{2}$ " Phillips-head screws. Do not fully tighten screws. Ensure the door stopper mountings are facing the front. Refer to diagram 1.
3. Locate barbecue body support brackets, facing inward, to trolley legs on both sides using eight (8) $\frac{1}{4}$ " x $\frac{1}{2}$ " Phillips-head screws. Fully tighten. Refer to diagram 1.


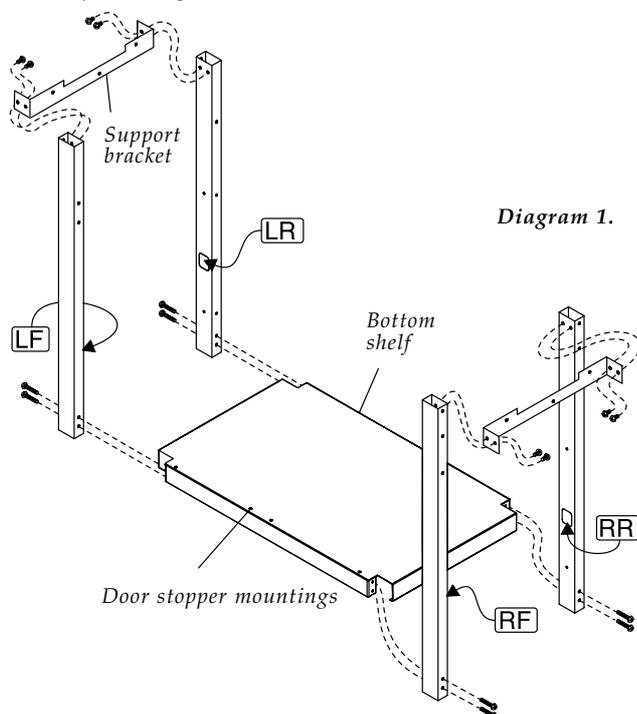


Diagram 1.


4. Screw the four (4) castors into the castor mounting blocks in the bottom of each trolley leg. Turn the threaded castor stem by hand, clockwise until it stops. Fully tighten with the spanner provided. Refer to diagram 2.
5. Install the two side panels and one rear panel to the trolley by using four (4) of the $\frac{3}{16}$ " x $\frac{1}{2}$ " Phillips-head screws on each panel. Leave rear panel screws loose. Refer to diagram 2.

Diagram 2.

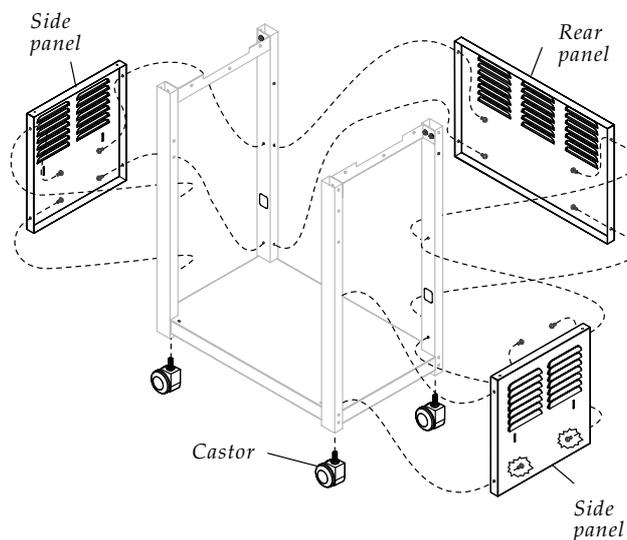


6. Attach the door stopper to the bottom shelf, with the flange facing the front, using two (2) $\frac{3}{16}$ " x $\frac{3}{8}$ " Phillips-head screws. Attach the gas cylinder hook and support to the left side trolley legs using four (4) $\frac{1}{4}$ " x $\frac{1}{2}$ " Phillips-head screws. Fully tighten. Refer to diagram 3.


Diagram 3.

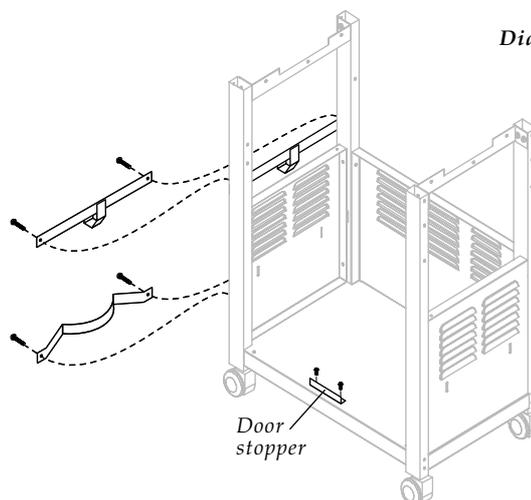

7. Attach the door bracket to the lower holes in the front legs with the end tabs pointing upward and the flange to the rear, pointing downward. Use two (2) of the $\frac{1}{4}$ " x $\frac{1}{2}$ " Phillips-head screws. Do not fully tighten. Refer to diagram 4.
8. Place doors into the hinge holes of the bottom shelf and door bracket. Push door bracket down until doors are secure and can open and close freely. Do not fully tighten door bracket screws. Refer to diagram 4.
9. Remove protective film from doors. Install door handles to doors using four (4) of the $\frac{3}{16}$ " x $\frac{3}{8}$ " Phillips-head screws and washers. Refer to diagram 4.

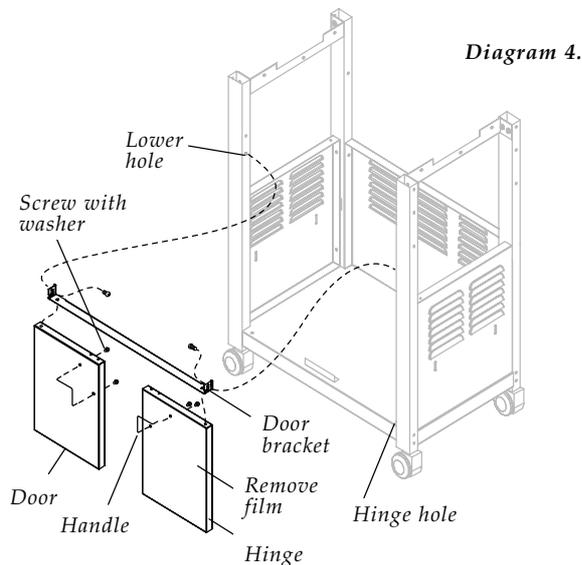


10. Attach the four (4) side shelf brackets to the tops of the trolley legs using eight (8) $\frac{1}{4}$ " x $\frac{1}{2}$ " Phillips-head screws. Be sure the flat side of each bracket faces outward to the front and rear. Fully tighten. Refer to diagram 5.

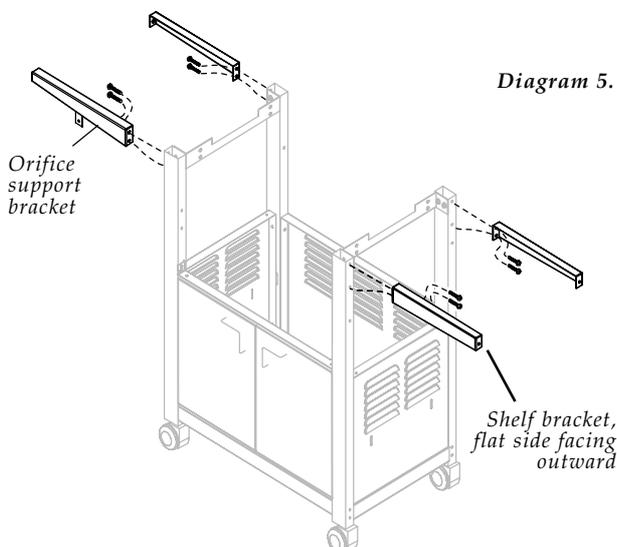


11. To reduce the weight of the barbecue body, open the barbecue hood and remove the packed components. This step requires two (2) people to lift and position the barbecue body onto the trolley.

HINT: Slide barbecue body into trolley from the front. Rest the hang ledges onto slot of the support bracket. Align the three (3) holes beneath the hang ledge on each side of the barbecue body with the three (3) holes in the support bracket on the trolley. Open the barbecue hood and insert six (6) of the $\frac{1}{4}$ " x $\frac{1}{2}$ " Phillips-head screws as shown. Refer to diagram 6.

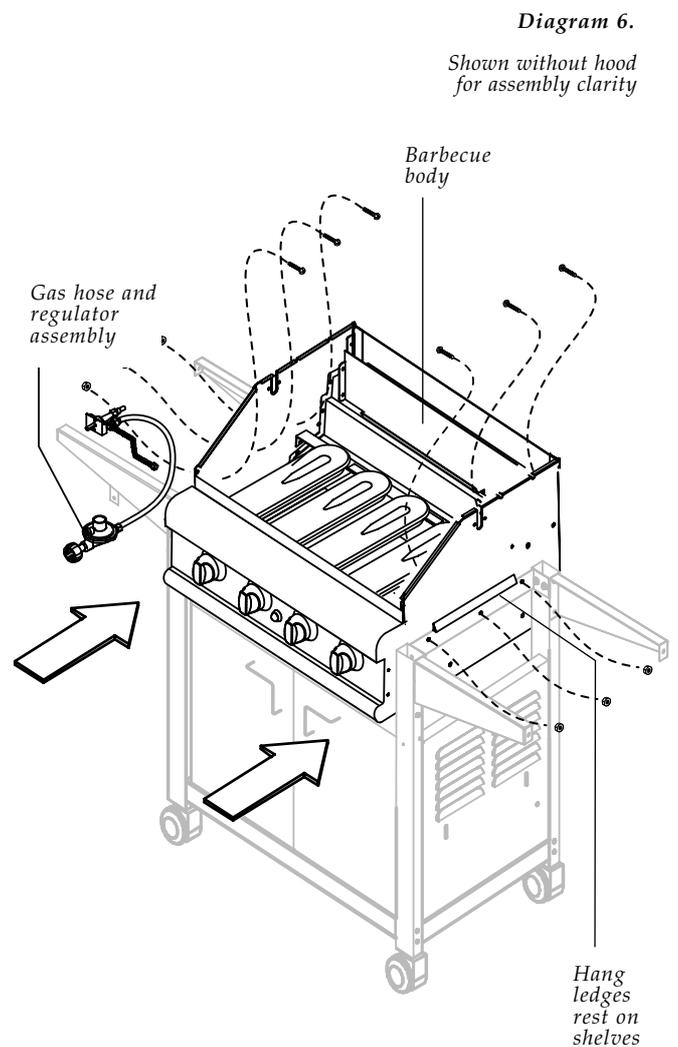


12. Place the side shelves over the brackets and cross braces with the wider-spaced shelf holes to the outside (*shelf with panel on right side*). Be sure the inside shelf holes align with the support bracket. Refer to diagram 7.
13. To install the side shelf handle, remove the bolt and washer from one side of the handle (*cap remains with handle*). From beneath shelf, place washer onto bolt and insert bolt through end of shelf bracket, side shelf, and into handle. Leave bolt loose until other side of handle is attached, then fully tighten both sides. Repeat for side burner shelf.

Install the match lighting stick and chain on the right rear leg using M4 x 10 mm self-tapping Phillips-head screw. Refer to diagram 7.

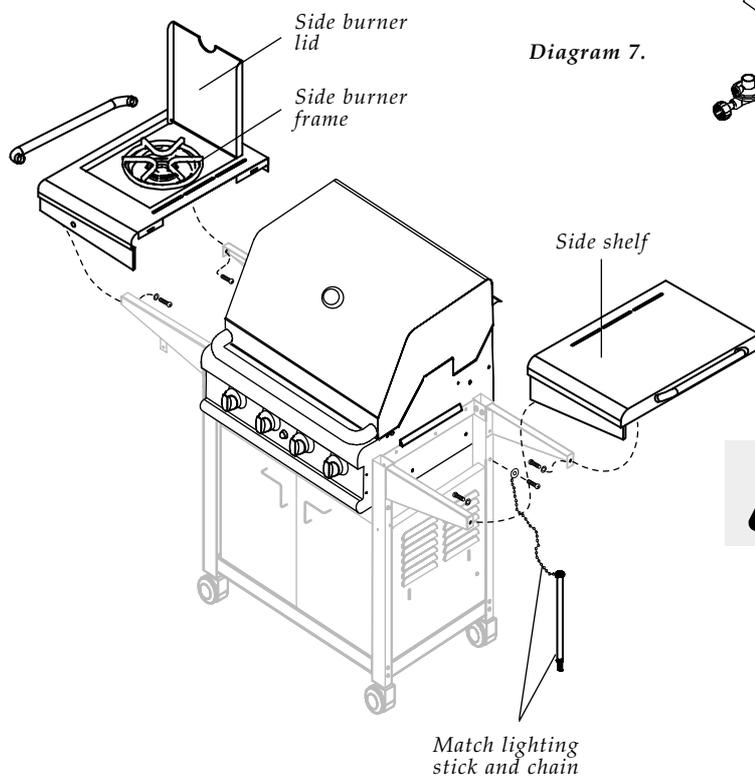

14. Fully tighten all leg screws, rear panel screws, door bracket screws, and barbecue body screws.
15. From the back of the trolley, slide the grease draining tray into the barbecue body. Place the grease receptacle into the notches on the bottom of the tray. Refer to diagram 8.
16. Attach barbecue body to all trolley legs using four (4) 1/4 x 2 1/2" Phillips-head screws and nuts.
17. Fully tighten all screws

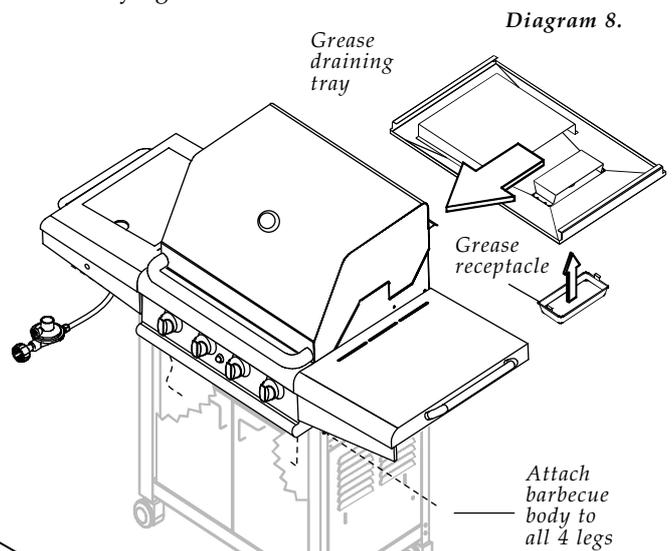

GAS HOSES ARE FACTORY FITTED AND LEAK TESTED – DO NOT DISCONNECT.