


MODEL: (RHFE1250, 1252/ EVOLVE)

STONE LOCATION GUIDE



Ensure that the Ceramic Panels are pushed hard to the Side and Rear

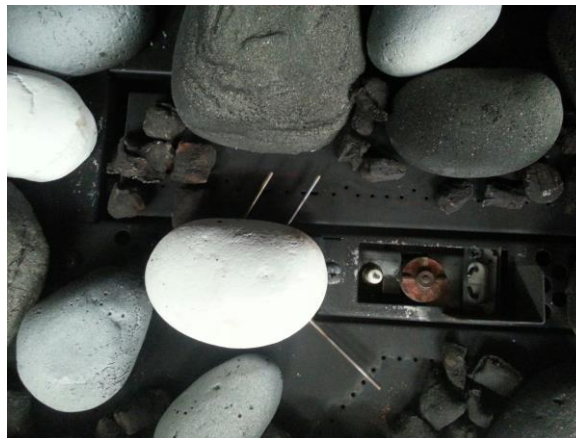

Ensure that there are NO granules placed directly over the Burner Ports to the front and back of the Pilot Burner to the Flame Rods. Note stone sitting on top of the flame rod cover.



MODEL: (RHFE1250, 1252/ EVOLVE)

LOG LOCATION GUIDE



Ensure that the Ceramic Panels are pushed hard to the Side and Rear



Ensure that there are NO granules placed directly over the Burner Ports to the front and back of the Pilot Burner to the Flame Rods.

