


MODEL: RDV700

STONE LOCATION GUIDE

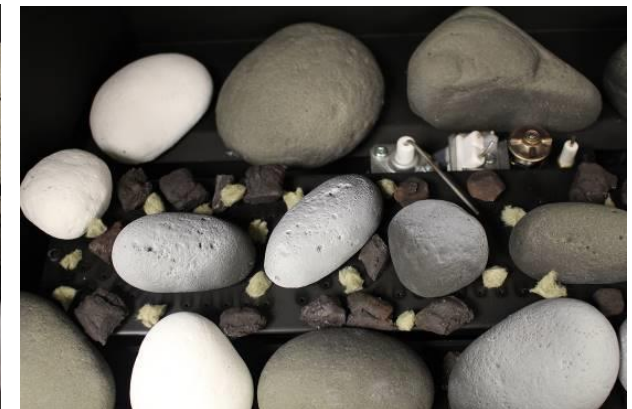

Mix the bag of Vermiculite to the bag of Glass and pour into the tray

Place the granules and rock wool evenly around the stones on the burner. DO NOT place the granules near the flame rods or the pilot (circled area above) as this can cause lighting issues.

Part No 12984 Issue B

MODEL: RDV700

LOG LOCATION GUIDE



Mix the bag of Vermiculite to the bag of Glass and pour into the tray



Place the granules and rock wool evenly across the burner. DO NOT place the granules near the flame rods or the pilot (circled area above) as this can cause lighting issues.



Part No 12984 Issue B