


MODEL: LINEAR RHFE1500

LOG LOCATION GUIDE



Keep Vermiculite away from directly in front of the Pilot

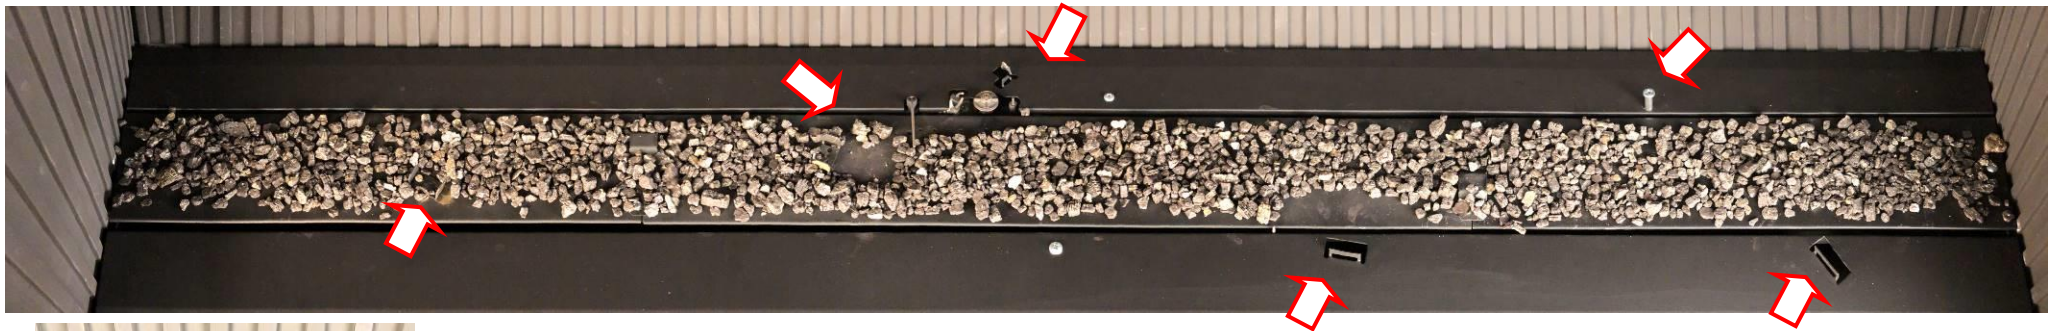


Log locating tabs and pins


Log locating bump on log

MODEL: LINEAR RHFE1500

CRUSHED GLASS GUIDE

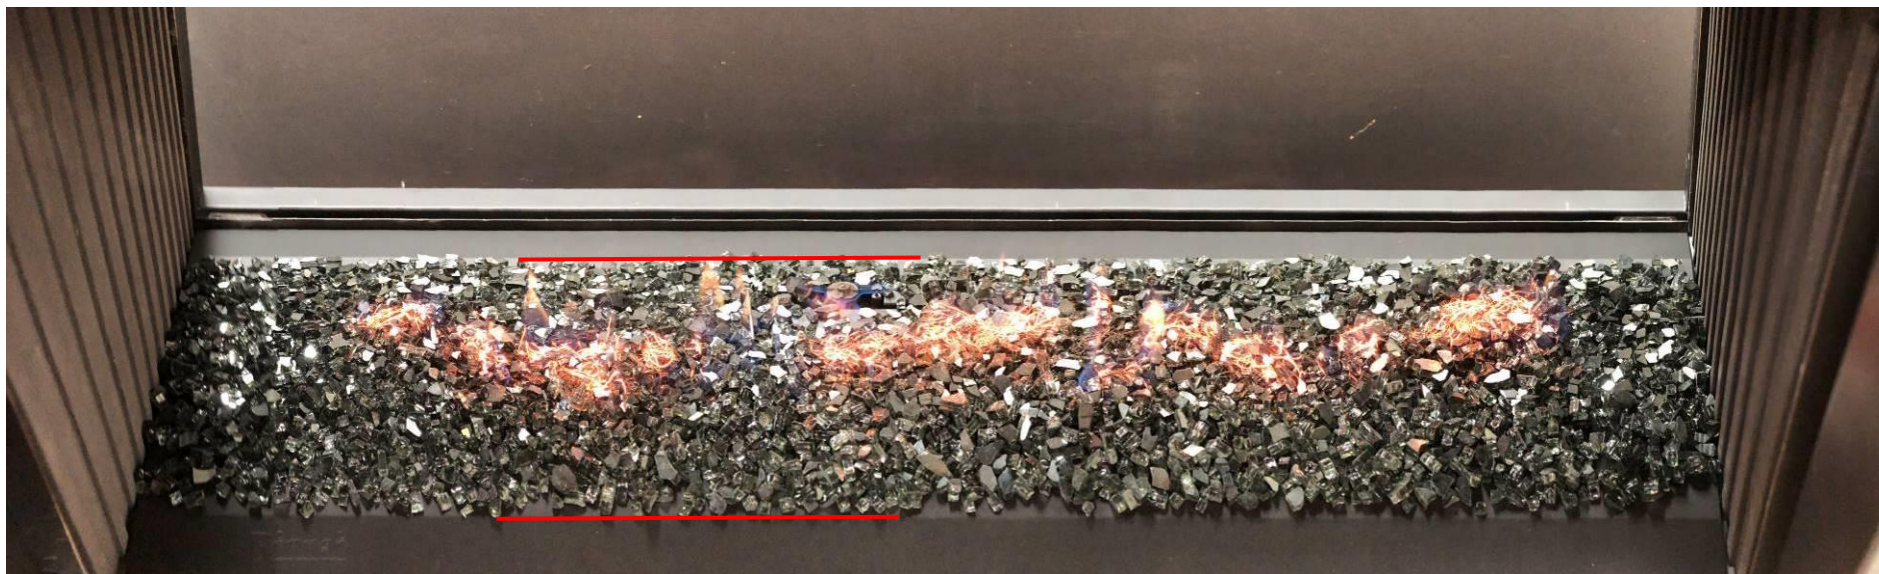

Place the contents of the Crushed Glass bag in layers over the top of the complete burner between the front and rear fold lines
Note: It is advisable to wear gloves as the glass is sharp

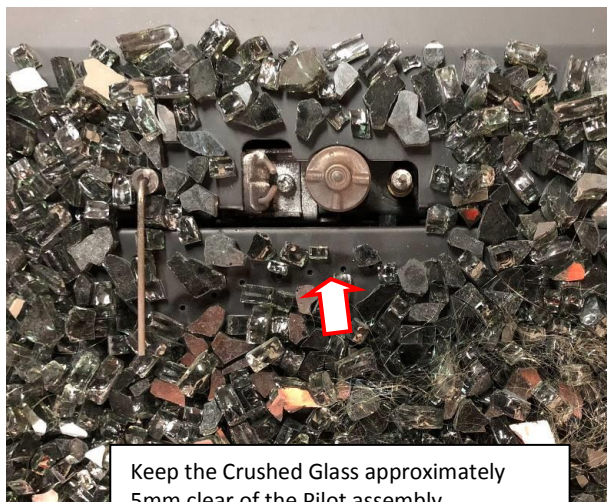

Keep the Crushed Glass approximately 5mm clear of the Pilot assembly



Remove the Wire Wool from the bag, pull pieces off, tuft out, and lay on top of the burner ports

Note: Make sure that the Wire Wool does not touch Either the Pilot or Main burner Flame Rod