


The Rinnai Infill Panel is 1050mm wide x 750mm high and is designed to cover a gap up to 980mm wide x 730mm high


ID	PART No#	DESCRIPTION	QTY	
1	11949GL	INFILL PANEL RIB23 1050 x 750 GL	1	
2	11939	INFILL PANEL MOUNTING BRACKET	2	
3	9020B	SCREW 8 x 10 BLACK	13	
4	7186R	TAPESEAL 19 x 12 x 2.5m	1	
	11917	INSTRUCTIONS INFILL PANEL	1	

1. The Infill Panel Kit consists of an Infill Panel ① and x2 Infill Panel Mounting Brackets ②

There are x13 Screws supplied, 6 screws ③ for attaching the Infill Mounting Brackets to the Infill Panel and the remaining are used to attach the Gas Fire to the Infill Panel.

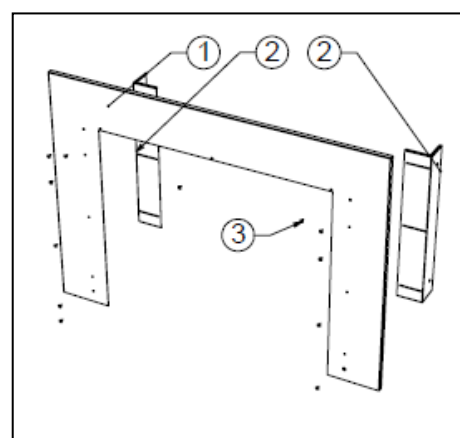


2. The Rinnai Infill Panel is 1050mm wide x 750mm high and is designed to cover a gap up to 980mm wide x 730mm high.

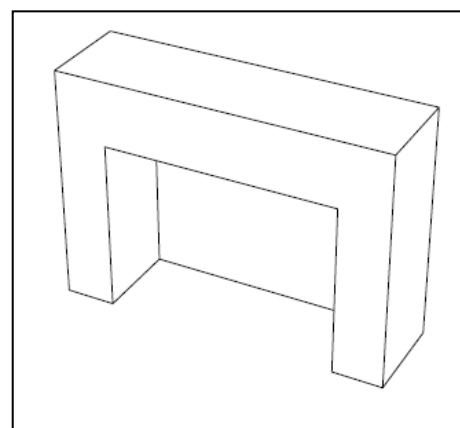

3. If a Rinnai Flexi Flue is not being used, fit the Tape seal ④ around the inside edge of the Infill Panel.

This ensures that the Flue is sealed. Without the Tape seal the Flue will not work properly and may result in products of combustion entering the room and or damage to the appliance.

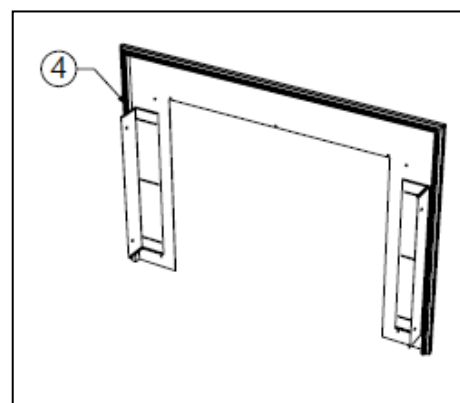

4. Place the Infill Panel in front of the fireplace opening and using 6 screws fit the Mounting Brackets at the appropriate position for the width of the fireplace opening.

Reach around inside the Panel and drill x4 holes (x2 in each Mounting Bracket) and fix to the fireplace using suitable fasteners for the material.

5. Remove the x6 Screws and disconnect the Infill Panel from the Mounting Bracket.

6. Install the Gas Fireplace

When a Flexi Flue Kit is being installed it must now be connected to the appliance

Fit the Infill Panel between the appliance and the wall and secure in place with the x13 screws provided

7. Complete the Installation and Commissioning and fit the Front Panel

