


Ember 600 gas fireplace

This diagram is provided to assist you to identify parts if replacement is necessary. Contact your place of purchase or the manufacturer to enquire about parts, availability and/or service.

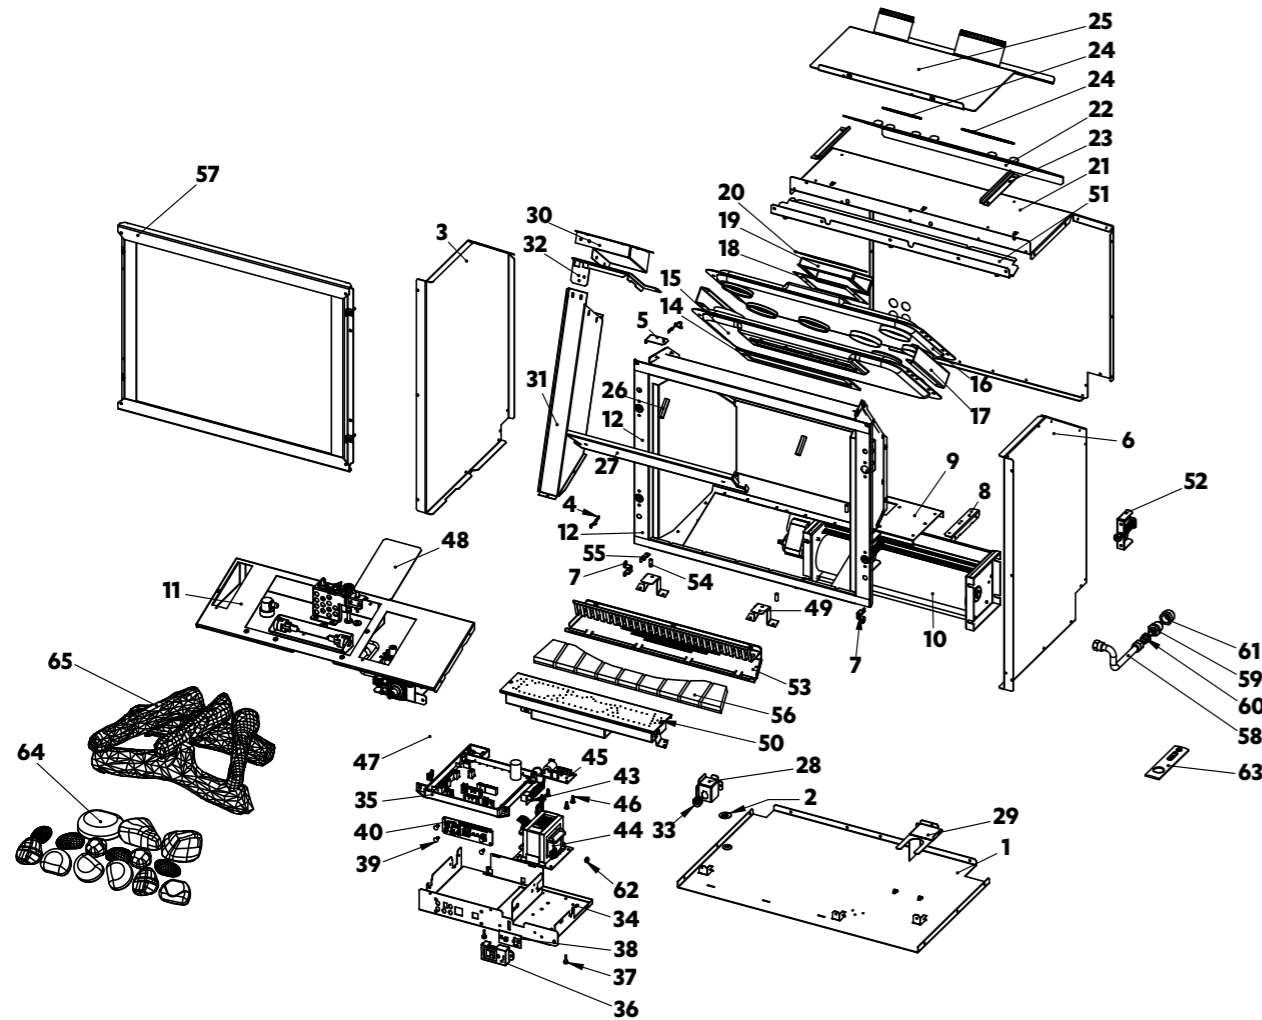


Ref.	Description	Qty.	Part No.
1	Panel bottom	1	12846
2	Tag earth symbol	1	11269
3	Panel side LH	1	12801
4	Wire tie 80 mm	5	4417
5	Thermal bracket	1	12938
6	Panel side RH	1	12802
7	Fascia install bracket	2	12858
8	Fan mounting bracket	1	12809
9	Bracket fan	1	12960
10	Fan TGA	1	12962
11	Gas control assembly	1	refer p. 2
12	Combustion chamber painted	1	12849F
13	CC spring bracket	4	12818
14	Gasket heat exchanger rectangle	1	10925
15	Heat exchanger front	1	10890
16	Heat exchanger rear	1	10891
17	Heat exchanger bracket	1	11560
18	Gasket heat exchanger square	1	10926
19	Flue transition assembly	1	12821
20	Gas adaptor square	1	12909
21	Rear panel	1	12847
22	Flue mounting plate	1	12807
23	Guide flue adaptor	1	10469
24	Glass seal tape 2 m replacement kit	1	R7010
25	Flue spigot adaptor assembly	1	12808
26	Combustion top spacer	1	11551
27	Combustion heat shield top black	1	12850F
28	Electronic inlet cover bracket	1	12857
29	Gas inlet cover bracket	1	12860
30	Air inlet horizontal	1	12803
31	Air inlet vertical	1	12804
32	Overheat thermistor bracket	1	12940
33	Power cord holder	1	7845
34	Electronic slide base assembly	1	12811
35	PCB main	1	12966
36	PCB case receiver	1	10394

Ref.	Description	Qty.	Part No.
37	Self fix bumper 25-TNF 10/2	2	11304
38	PCB receiver	1	10393
39	PCB spacer 05-PCY06	1	10428
40	PCB display	1	10253
41	Protector plastic edge EHS11U	3	1880
42	Protector plastic edge EHS18U	2	10471
43	Interface board	1	12494
44	Transformer	1	10258
45	Igniter EI-2018	1	13006
46	PCB spacer	4	9004
47	PCB box lid	1	12929
48	Service panel	1	12935
49	Log support rear	2	12912F
50	Burner assembly black	1	12853F
51	Air guide top black	1	12851B
52	Explosion relief assembly	4	11662
53	Stone grill	1	12911F
54	Spacer M5X16 CF-516ZE	4	9086
55	Room thermistor bracket	1	12916
56	Ceramic panel front	1	12907
57	Glass frame assembly	1	12963
58	Flextube 3/8 x 8 c/w 3/8-18 nuts	1	7835
59	Adaptor 1/2 BSP 3/8 SAE flare	1	11944
60	Brass plug 3/8 SAE flare	1	11948
61	Nut 1/2 compression	1	5064
62	Rubber grommet IMG010	1	6749
63	IR remote control	1	13040
64	Media stones	1	R2423
65	Log set	1	R2422

Ember 600 gas fireplace

This diagram is provided to assist you to identify parts if replacement is necessary. Contact your place of purchase or the manufacturer to enquire about parts, availability and/or service.

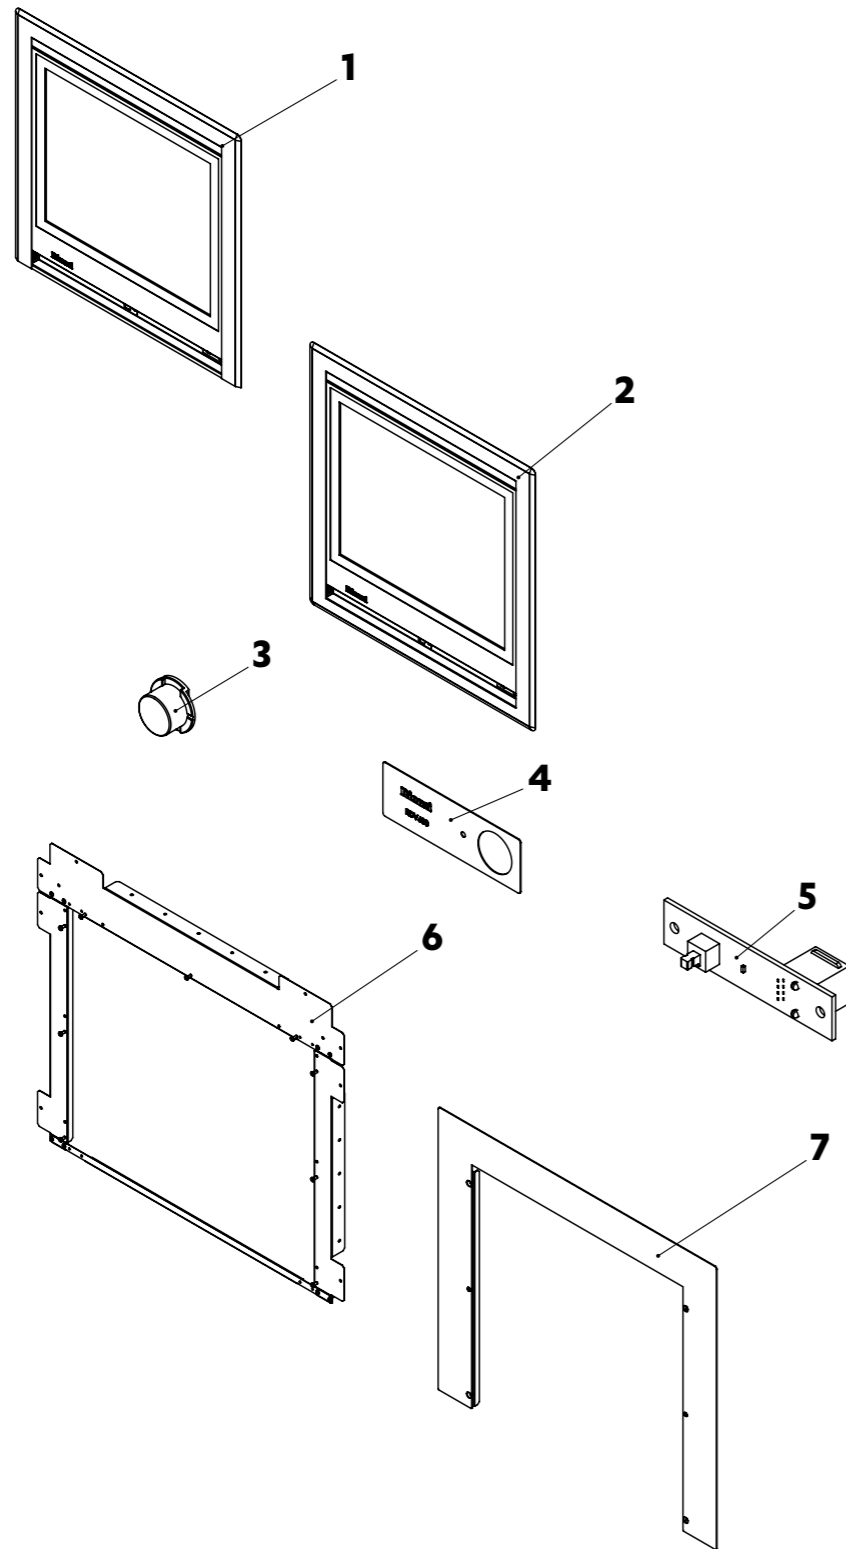

Ref.	Description	Qty.	Part No.
1	Ember 600 3-sided black frame	1	R2410
1	Ember 600 3-sided titanium frame	1	R2412
2	Ember 600 4-sided black frame	1	R2413
2	Ember 600 4-sided titanium frame	1	R2415
3	Button	1	10250
4	Control label	1	12844
5	Switch main control	1	12999
6	Zero clearance frame Ember	1	R2450
7	Infill panel Ember 600	1	R2453
Not drawn			
-	Harness control panel	1	10284
-	Cable CAT5 x 500 mm	1	10631
-	Harness 12-way control panel	1	12492
-	Harness 9-way control panel	1	12496
-	Harness fan	1	12839
-	Harness halogen	1	12998
-	Harness fan	1	13008
-	Harness thermal fuse	1	13011
-	Harness POV universal control	1	13012
-	Harness magnetic valve relay	1	13013
-	Harness main gas control	1	13014
-	Harness ignition	1	13031
-	High tension lead	1	13032
-	Harness thermistor universal control	1	13033
-	Harness receiver	1	12656
-	Power cord universal control black	1	13042
-	Granules	2	2544
-	Crushed glass 100 g	1	12967
-	Rockwool 2 g	1	12968