


Rinnai

INFINITY HD250 external (REU-VR3237WG)

This diagram is provided to assist you to identify parts if replacement is necessary. Contact your place of purchase or the manufacturer to enquire about parts, availability and/or service.

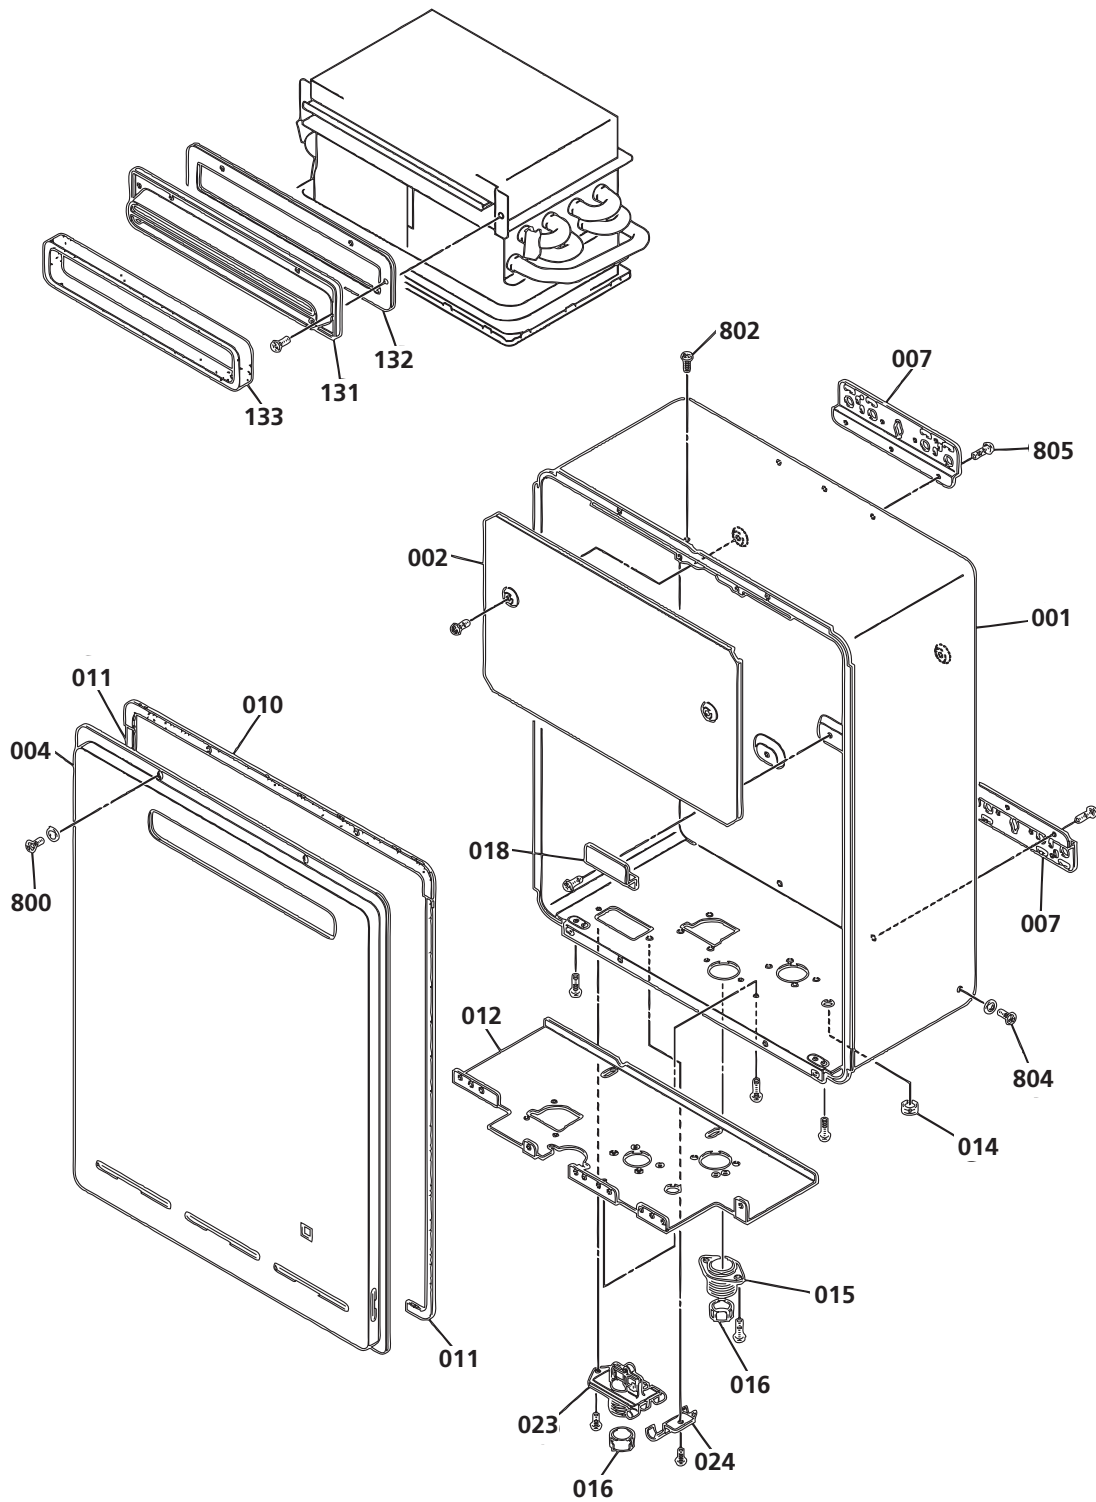


| Ref.              | Description                | Qty. | Part No.  |
|-------------------|----------------------------|------|-----------|
| SI = stocked item |                            |      |           |
| 001               | Casing assembly            | 1    | 3292      |
| 002               | Heat protection plate      | 1    | 3294      |
| 004               | Front panel assembly       | 1    | 3296 (SI) |
| 007               | Wall bracket               | 2    | 3387 (SI) |
| 010               | Front panel packing        | 1    | 3418      |
| 011               | Front panel packing side   | 2    | 3423      |
| 012               | Panel connection           | 1    | 3300      |
| 014               | Seal packing               | 2    | 2898      |
| 015               | Cable connection           | 1    | 3896 (SI) |
| 016               | Cable seal packing         | 1    | 2928      |
| 018               | Reinforcement plate        | 1    | 3303      |
| 023               | Cable access assembly      | 1    | 3310 (SI) |
| 024               | Cable access bracket       | 1    | 3311      |
| 131               | Flue outlet                | 1    | 3555 (SI) |
| 132               | Flue outlet packing        | 1    | 3479 (SI) |
| 133               | Flue outlet packing        | 1    | 3344      |
| 800               | Screw pack for front panel | 1    | R5040     |
| 802               | Screw                      | 2    | 4763      |
| 804               | Screw                      | 8    | 4765      |
| 805               | Screw                      | 5    | 4767      |

Rinnai

INFINITY HD250 external (REU-VR3237WG)

This diagram is provided to assist you to identify parts if replacement is necessary. Contact your place of purchase or the manufacturer to enquire about parts, availability and/or service.

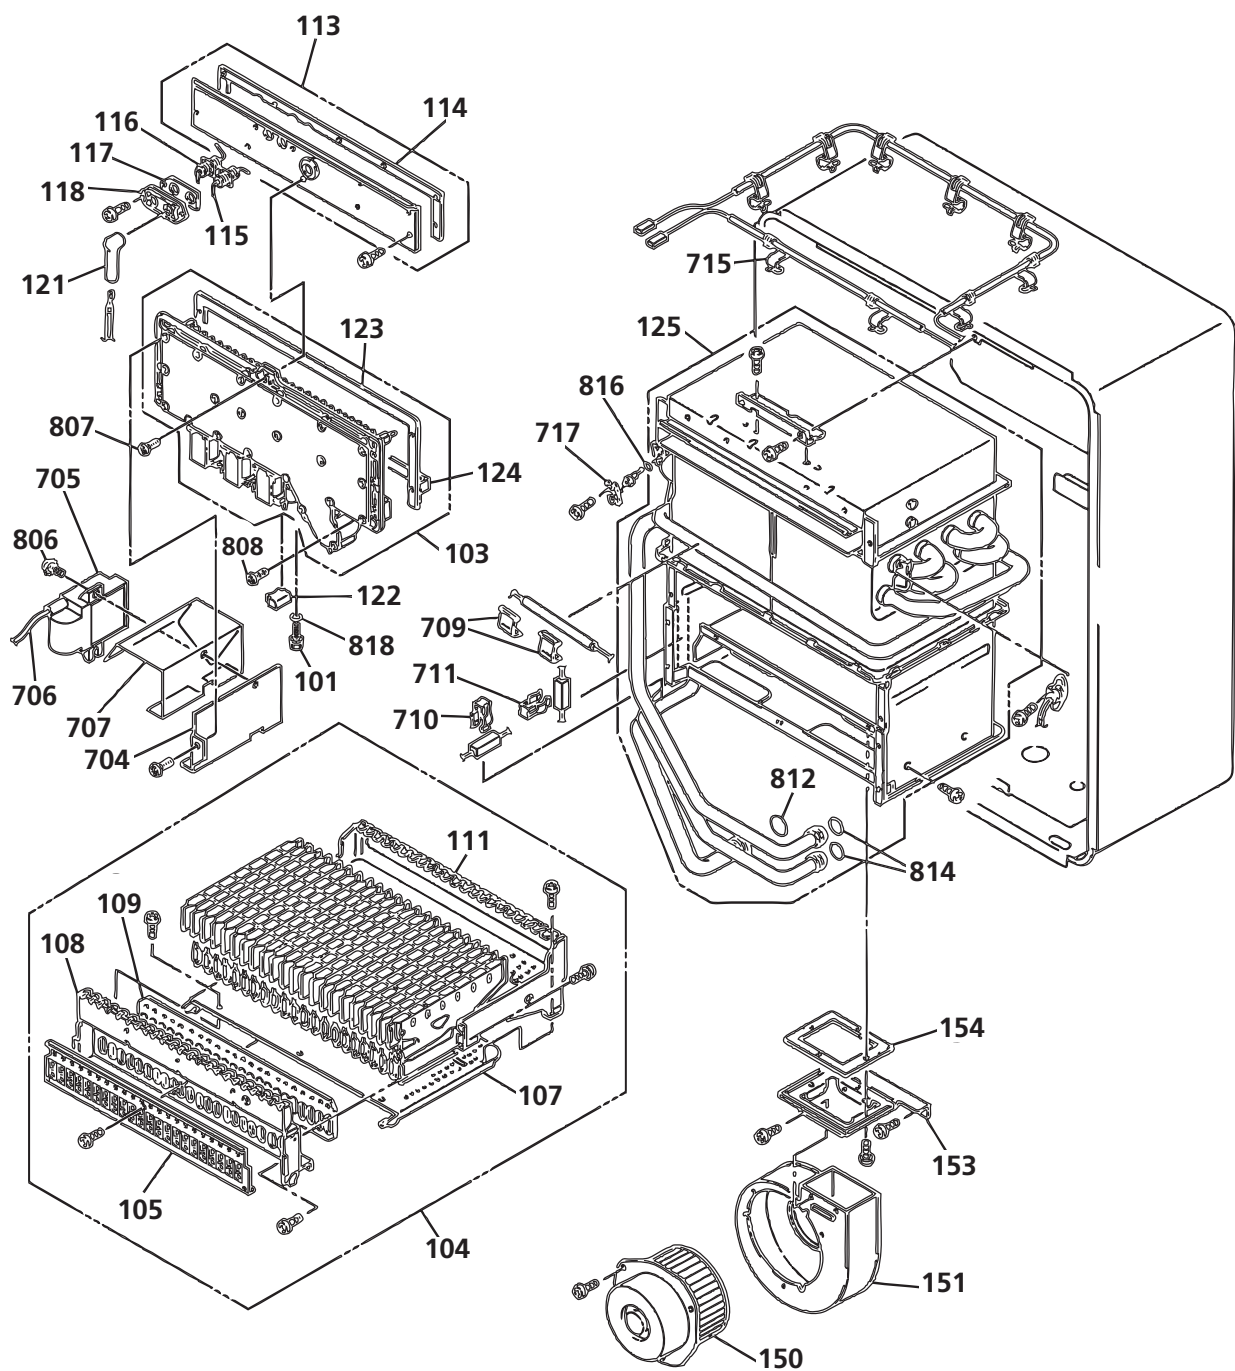


| Ref.              | Description                                                    | Qty. | Part No.  |
|-------------------|----------------------------------------------------------------|------|-----------|
| SI = stocked item |                                                                |      |           |
| 101               | Test point screw c/w o-ring                                    | 1    | 15330     |
| 103               | Manifold assembly NG                                           | 1    | 3314      |
| 103               | Manifold assembly LPG                                          | 1    | 3313 (SI) |
| 104               | Burner unit assembly                                           | 1    | 3315      |
| 105               | Damper NG                                                      | 1    | 3316      |
| 105               | Damper LPG                                                     | 1    | 3337      |
| 107               | Burner case bottom plate                                       | 1    | 3317      |
| 108               | Burner case front                                              | 1    | 3318      |
| 109               | Packing                                                        | 1    | 3439      |
| 111               | Burner case back panel                                         | 1    | 3319      |
| -                 | Combustion chamber front panel assembly, use parts 113 and 114 | 1    | -         |
| 113               | Combustion chamber front plate                                 | 1    | 3320      |
| 114               | Comb. chamber front plate packing                              | 1    | 3443      |
| 115               | Electrode                                                      | 1    | 3445      |
| 116               | Flame rod                                                      | 1    | 4916      |
| 117               | Electrode packing                                              | 1    | 3465      |
| 118               | Electrode holder                                               | 1    | 3468      |
| 121               | Electrode sleeve                                               | 1    | 3475      |
| 122               | Solenoid valve cover                                           | 1    | 3323      |
| 123               | Upper comb. chamber packing                                    | 1    | 3324      |
| 124               | Lower comb. chamber packing                                    | 1    | 3325      |
| 125               | Heat exchanger complete assy.                                  | 1    | 3327 (SI) |
| 150               | Fan motor                                                      | 1    | 2883 (SI) |
| 151               | Fan motor casing                                               | 1    | 2863 (SI) |
| 153               | Fan connecting bracket                                         | 1    | 3763      |
| 154               | Fan connection packing                                         | 1    | 3482      |
| 704               | Ignitor bracket                                                | 1    | 3952      |
| 705               | Ignitor                                                        | 1    | 2886      |
| 706               | HT lead                                                        | 1    | 3651      |
| 707               | Ignitor cover                                                  | 1    | 3953      |
| 709               | Anti frost heater clip                                         | 1    | 3891      |

| Ref. | Description                  | Qty. | Part No. |
|------|------------------------------|------|----------|
| 710  | Heater fixing plate          | 1    | 2899     |
| 711  | Anti frost heater clip       | 1    | 3536     |
| 715  | Fuse clip                    | 1    | 2869     |
| 717  | Thermistor clip              | 1    | 3882     |
| 806  | Tapping screw                | 1    | 2896     |
| 807  | Screw                        | 5    | 4768     |
| 808  | Screw                        | 1    | 2938     |
| 812  | O-ring in/out water          | 1    | 3627     |
| 814  | O-ring heat exchanger outlet | 1    | 3826     |
| 816  | O-ring thermistor            | 1    | 3832     |
| 818  | O-ring                       | 2    | 2239     |

Rinnai

INFINITY HD250 external (REU-VR3237WG)

This diagram is provided to assist you to identify parts if replacement is necessary. Contact your place of purchase or the manufacturer to enquire about parts, availability and/or service.

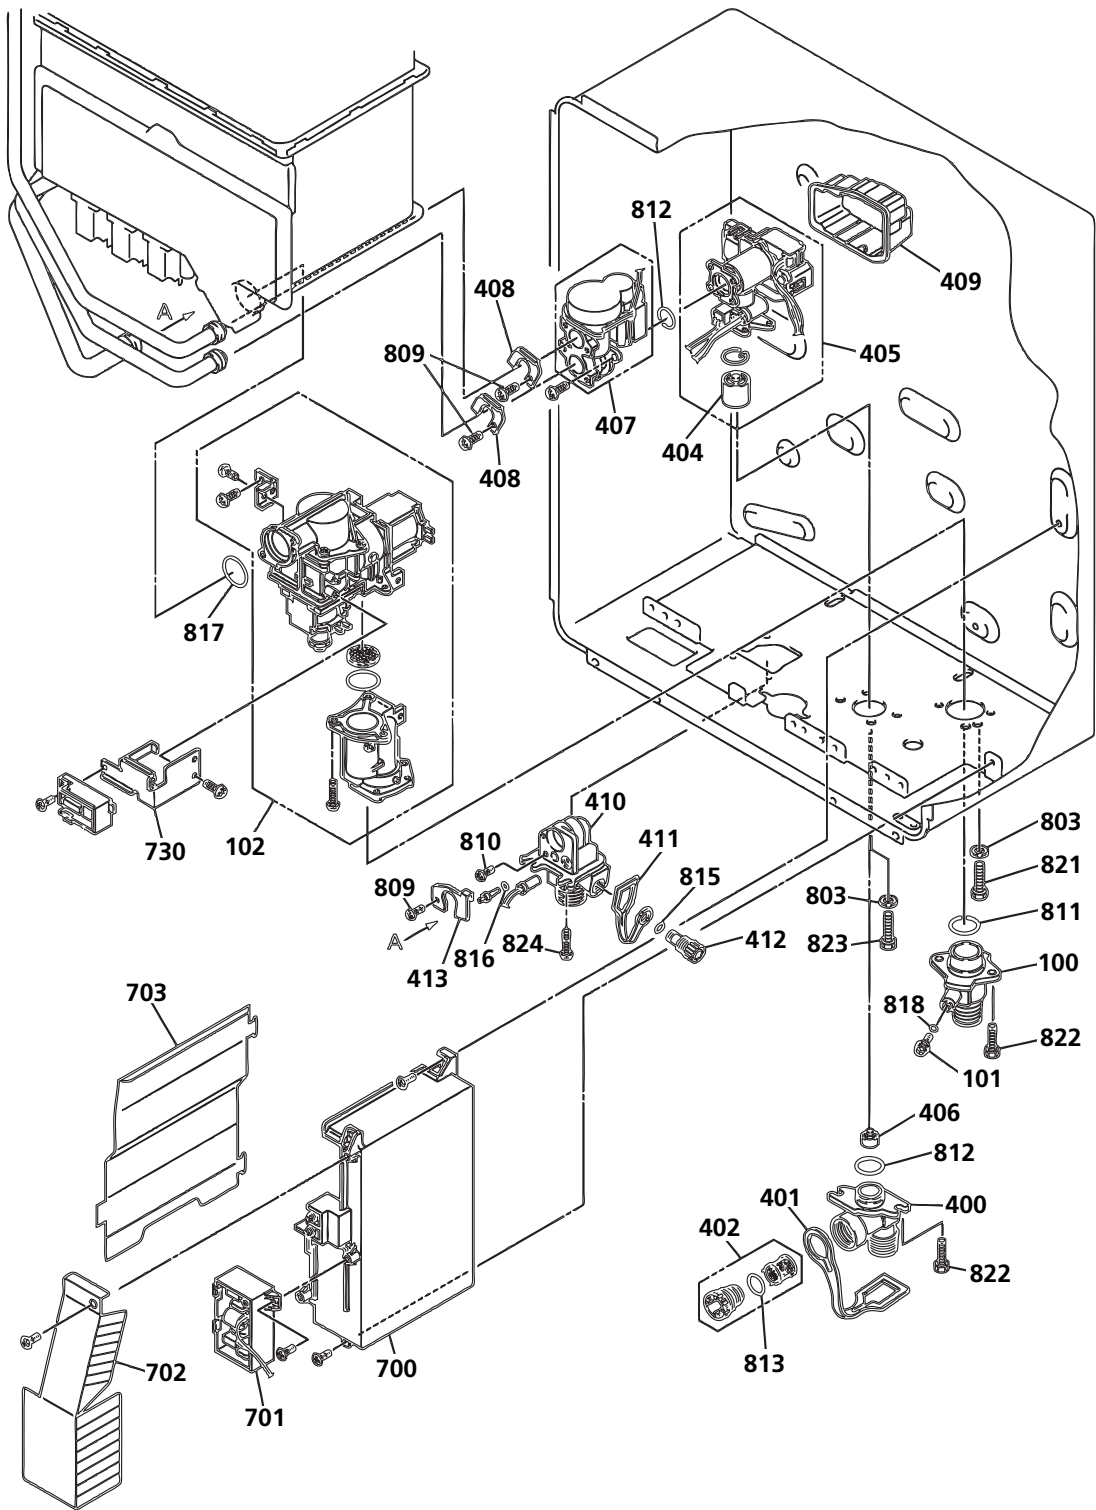


| Ref.              | Description                                      | Qty. | Part No.  |
|-------------------|--------------------------------------------------|------|-----------|
| SI = stocked item |                                                  |      |           |
| 100               | Gas connection                                   | 1    | 3074      |
| 101               | Test point screw c/w o-ring                      | 1    | 15330     |
| 102               | Gas control assembly                             | 1    | 3312      |
| 400               | Water inlet                                      | 1    | 2894      |
| 401               | Plug band inlet                                  | 1    | 2927      |
| 402               | Incoming water filter                            | 1    | 3839 (SI) |
| 404               | Water turbine                                    | 1    | 2850      |
| 405               | Flow servo & sensor assembly (with valve heater) | 1    | 5227 (SI) |
| 406               | Flow straightener                                | 1    | 3487      |
| 407               | Bypass servo assembly                            | 1    | 3944 (SI) |
| 408               | Stop bracket                                     | 1    | 3624      |
| 409               | Water flow servo cover                           | 1    | 2871      |
| 410               | Hot water outlet ¾ NPT                           | 1    | 3946      |
| 411               | Plug band hot water                              | 1    | 2926      |
| 412               | Pressure relief valve                            | 1    | 3491      |
| 413               | Stop bracket                                     | 1    | 3948      |
| 700               | PCB                                              | 1    | 5349      |
| 701               | Surge protector                                  | 1    | 4930 (SI) |
| 702               | PCB front cover                                  | 1    | 3950      |
| 703               | PCB side cover                                   | 1    | 3951      |
| 730               | Status monitor bracket                           | 1    | 4761      |
| 803               | Washer (10 pieces)                               | 5    | 4764      |
| 809               | Screw                                            | 3    | 4769      |
| 810               | Thermistor stop screw                            | 1    | 3241      |
| 811               | Gas inlet o-ring                                 | 1    | 3837      |
| 812               | O-ring in/out water                              | 1    | 3627      |
| 813               | O-ring water filter                              | 1    | 1244      |
| 815               | O-ring pressure relief valve                     | 1    | 1031      |

| Ref. | Description       | Qty. | Part No. |
|------|-------------------|------|----------|
| 816  | O-ring thermistor | 1    | 3832     |
| 817  | Packing           | 1    | 3521     |
| 818  | O-ring            | 2    | 2239     |
| 821  | Screw             | 1    | 4770     |
| 822  | Screw             | 4    | 4771     |
| 823  | Screw             | 2    | 4772     |
| 824  | Screw             | 3    | 4773     |

Rinnai

INFINITY HD250 external (REU-VR3237WG)

This diagram is provided to assist you to identify parts if replacement is necessary. Contact your place of purchase or the manufacturer to enquire about parts, availability and/or service.

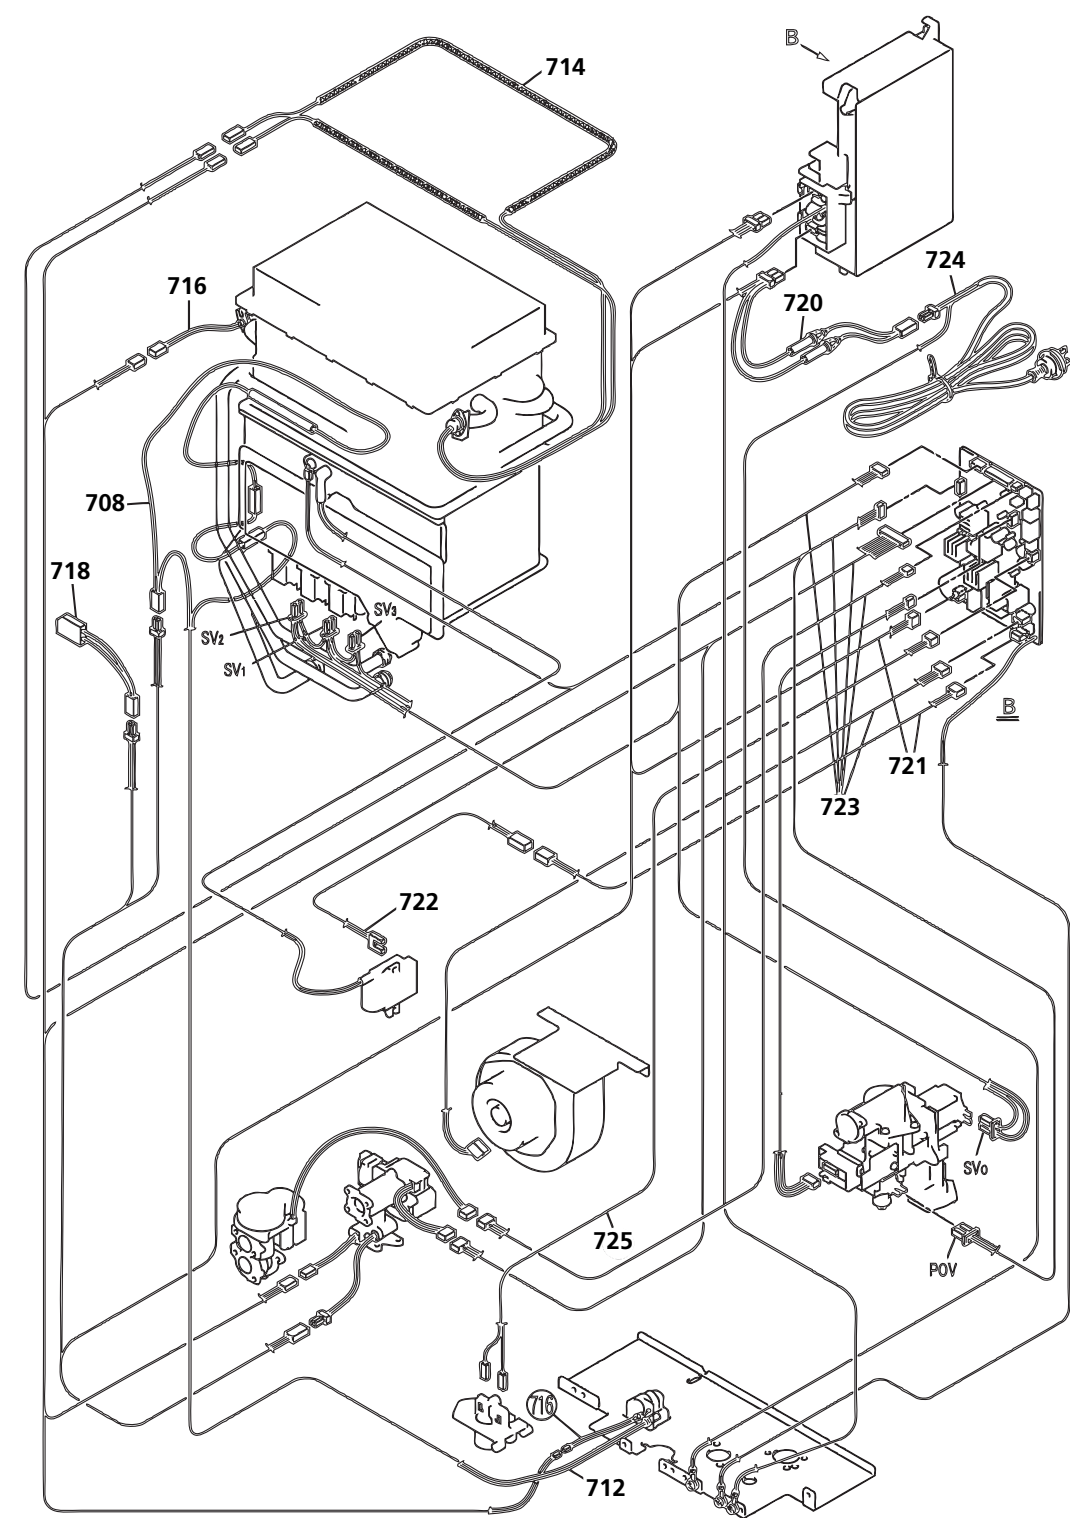

| Ref.              | Description                          | Qty. | Part No.  |
|-------------------|--------------------------------------|------|-----------|
| SI = stocked item |                                      |      |           |
| 708               | 230 V A-frost heater assembly        | 1    | 3955      |
| 712               | 230 V valve heater assembly          | 1    | 4752      |
| 714               | Thermal fuse harness                 | 1    | 4753      |
| 716               | Thermistor                           | 1    | 2884 (SI) |
| 718               | Frost sensing switch                 | 1    | 3358      |
| 720               | Fuse harness (no heater)             | 1    | 4755      |
| 720               | Fuse harness antifrost (with heater) | 1    | 4756      |
| 721               | 220 V power supply harness           | 1    | 4757      |
| 722               | 220 V ignitor harness                | 1    | 4758      |
| 723               | Sensor harness                       | 1    | 4759      |
| 724               | Power cord                           | 1    | 3526      |
| 725               | Remote control harness               | 1    | 2891      |