




Energysaver 556FTR heater

This diagram is provided to assist you to identify parts if replacement is necessary. Contact your place of purchase or the manufacturer to enquire about parts, availability and/or service.

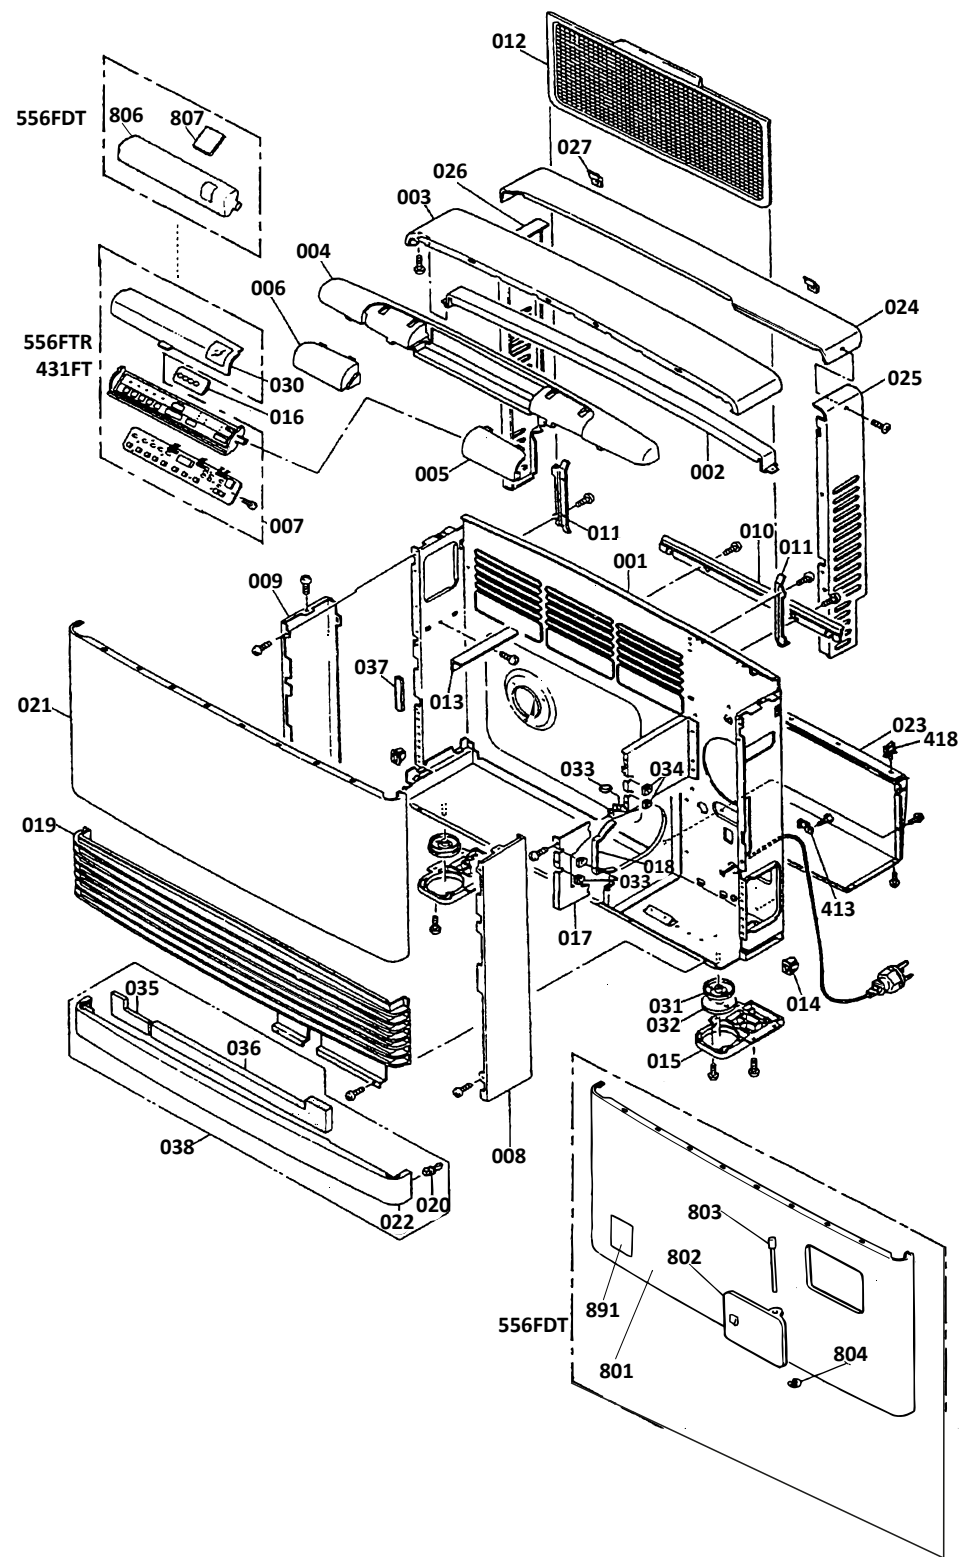


Ref.	Description	Qty.	Part No.
001	Rear panel assembly	1	Not available
002	Top panel support	1	Not available
003	Top panel white/beige	1	3000I/3000
004	Control panel plastic body white/beige	1	3006I/3006
-	Control panel RH side white/beige	1	3007I/3007
006	Control panel LH side white/beige	1	3502/3008
007	Control PCB white/beige	1	3512/3009
008	Side panel RH white/beige	1	3011I/3011
009	Side panel LH white/beige	1	3021I/3021
010	Filter clip bottom	1	Not available
011	Filter clip side	2	4001
012	Air filter	1	3026i
013	Convection fan bracket	1	Not available
014	Latch	1	3028
015	Foot beige	2	3030
016	Remote control	1	13100
017	Heat sealing bracket	1	Not available
018	Heat exchanger packing B	1	4036
019	Louvre white/beige	1	3032I/3032
020	Strike	2	3038
021	Front panel white/beige	1	3503/3024
022	Skirt white/beige	1	Not available
023	Rear panel heat shield	1	Not available
024	Back spacer top white/beige	1	3049I/3049
025	Back spacer RH white/beige	1	3050I/3050
026	Back spacer LH white/beige	1	3060I/3060
027	Wall fixing bracket	2	6684
030	Control cover white	1	3063I
031	Foot base	2	1610
032	Rubber foot	2	4024
033	Cord packing B	3	Not available
034	Cord packing A	2	Not available
035	Heat insulation material A	1	3064
036	Heat insulation material B	1	3065
037	Rear panel packing	1	Not available

Ref.	Description	Qty.	Part No.
038	Skirt complete white/beige	1	3077I/3077
413	Electrical cord holder	1	Not available
418	Wiring clip	1	Not available



Energysaver 556FTR heater

This diagram is provided to assist you to identify parts if replacement is necessary. Contact your place of purchase or the manufacturer to enquire about parts, availability and/or service.

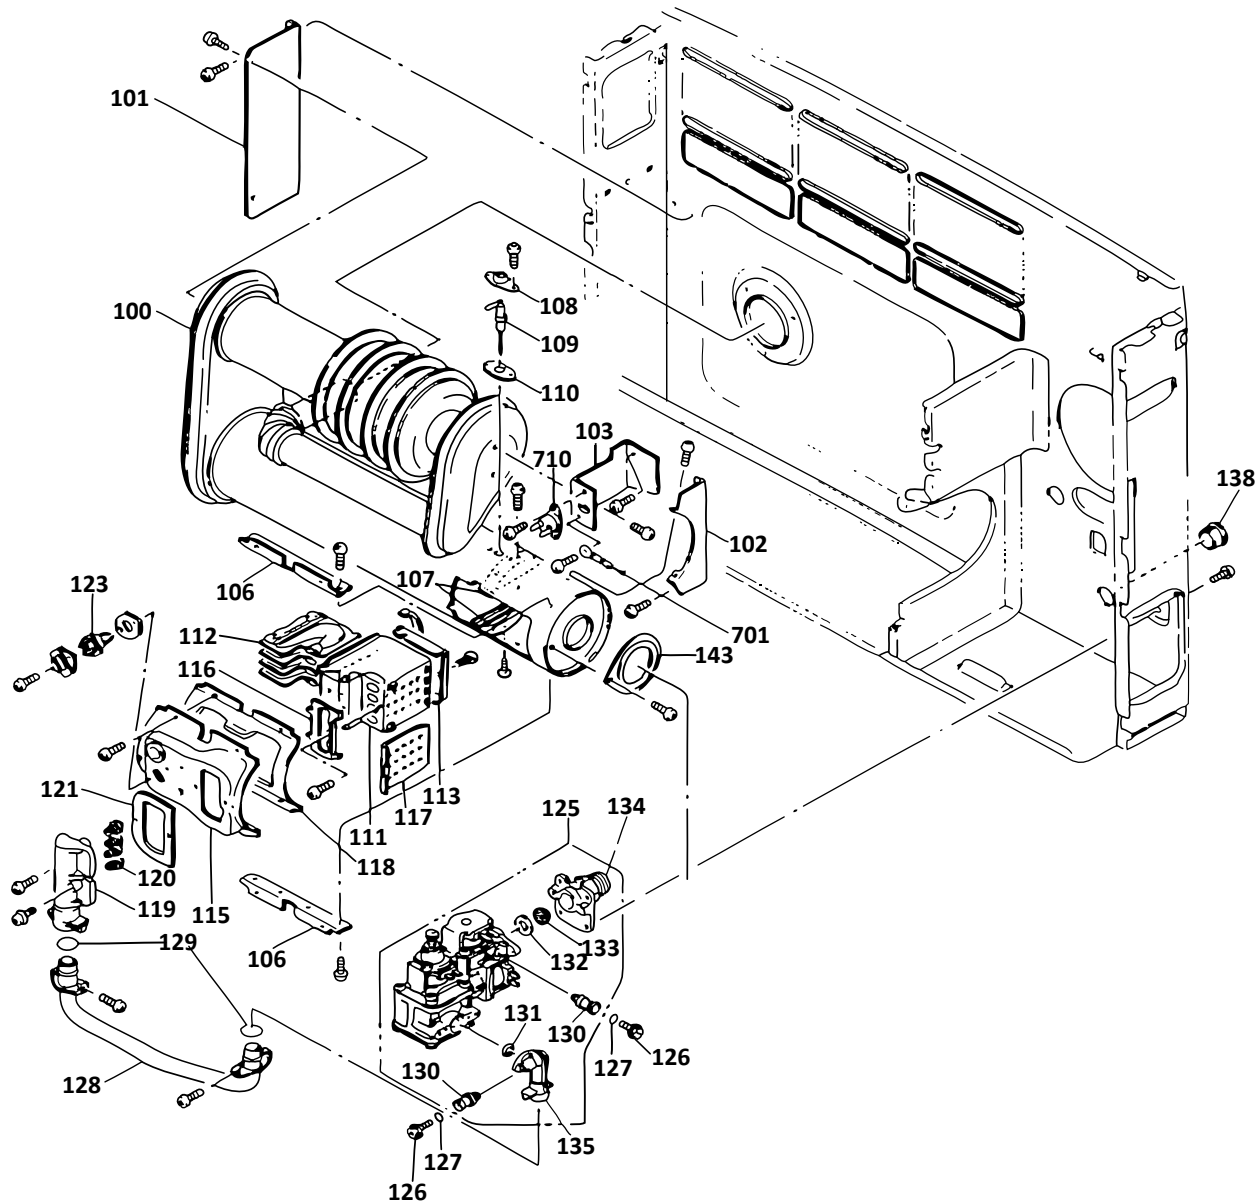


Ref.	Description	Qty.	Part No.
100	Heat exchanger	1	3066
101	Heat exchanger fixing brkt.	1	Not available
102	Comb. chamber fixing brkt	1	Not available
103	OHS bracket	1	Not available
106	Flange	2	Not available
107	Seal bracket	2	Not available
108	Flame rod bracket	1	3068
109	Flame rod	1	4299
110	Flame rod packing	1	3069
111	Burner box	1	Not available
112	Burner NG/LPG	4	3091
113	Burner clip	1	Not available
115	Burner box mounting brkt	1	Not available
116	Primary air damper	1	4390
117	Secondary air damper NG	1	3378
117	Secondary air damper LPG	1	3377
118	Fixing bracket packing	1	4268
119	Injector manifold	1	Not available
120	Main injector LPG 0.85 mm	4	3093
120	Main injector NG 1.30 mm	4	2394
121	Manifold packing	1	3094
123	Electrode kit	1	R1346
125	Gas control valve	1	4335
126	Pressure point test screw	2	Not available
127	O-ring	2	2239
128	Gas supply tube	1	3100
129	Gas supply tube o-ring	2	4357
130	Pressure test point	2	4204
131	O-ring	1	1967
132	Rubber packing	1	10290
133	Gas filter	1	4225
134	Gas inlet	1	4360
135	Elbow	1	4361

Ref.	Description	Qty.	Part No.
138	Cable protector	1	Not available
143	Flex. connection tube clip	1	3103
701	Room temp. thermistor	1	3114
710	OHS 130 °C off	1	4385

Energysaver 556FTR heater


This diagram is provided to assist you to identify parts if replacement is necessary. Contact your place of purchase or the manufacturer to enquire about parts, availability and/or service.

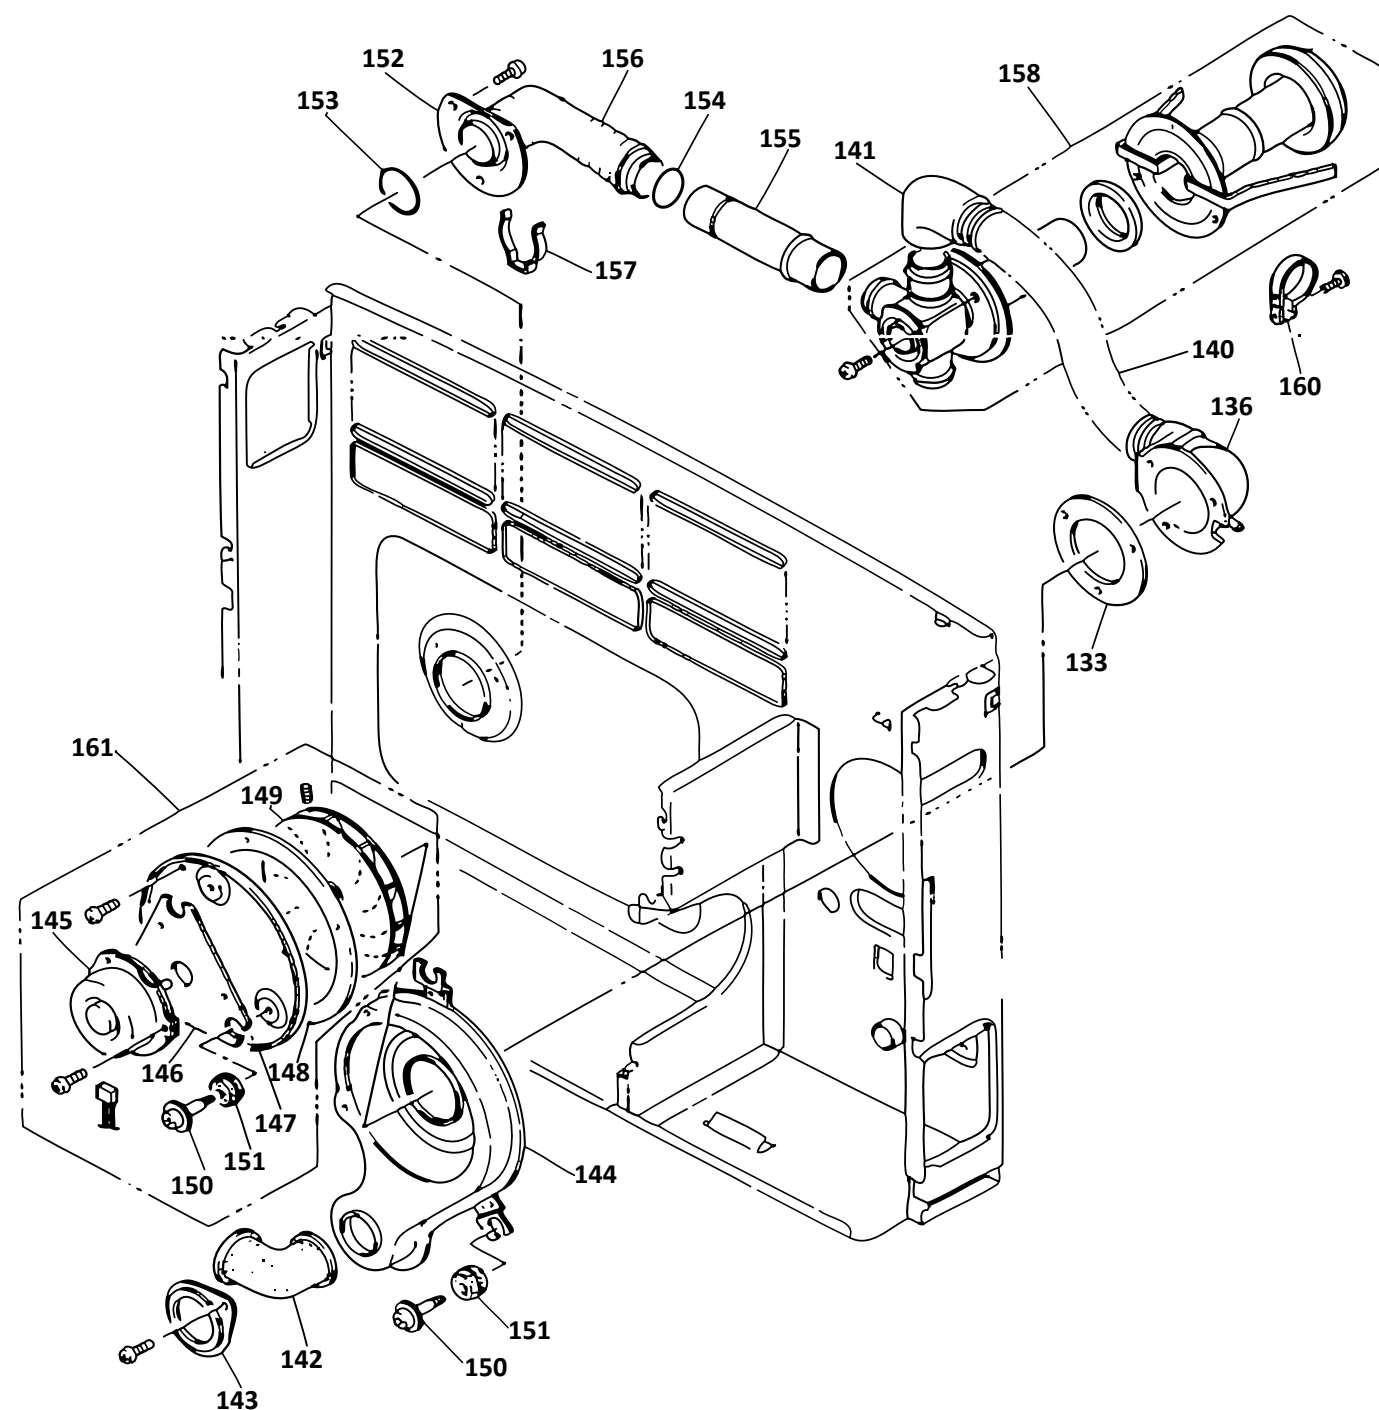

Ref.	Description	Qty.	Part No.
133	Air inlet packing	1	4053
136	Air inlet	1	4367
140	Flexible intake hose	1	4048
141	Air inlet elbow	1	4040
142	Combustion chamber connection tube	1	3102
143	Flexible connection tube clip	1	3103
144	Combustion fan casing	1	Not available
145	Combustion motor	1	3104
146	Combustion motor bracket	1	Not available
147	Combustion fan cover	1	Not available
148	Blanking panel packing	1	Not available
149	Combustion fan blade	1	3907
150	Motor fixing screw	6	Not available
151	Motor rubber cushion	6	4028
152	Flue slide tube	1	3514
153	O-ring 35.5 mm	1	4037
154	O-ring sealing 34 mm	1	4369
155	Exhaust slide tube	1	3515
156	Flue outlet cover	1	4176
157	Insulation clip	1	4171
158	Flue AA (75-115 mm)	1	R1350
158	Flue A (115-240 mm)	1	R1351
158	Flue B (240-400 mm)	1	R1352
158	Flue C (400-600 mm)	1	R1353
158	Flue D (600-800 mm)	1	R1353D
158	Flue E (800-1000 mm)	1	R1353E
160	Clip	2	4173
161	Combustion fan assembly	1	3105

Energysaver 556FTR heater


This diagram is provided to assist you to identify parts if replacement is necessary. Contact your place of purchase or the manufacturer to enquire about parts, availability and/or service.

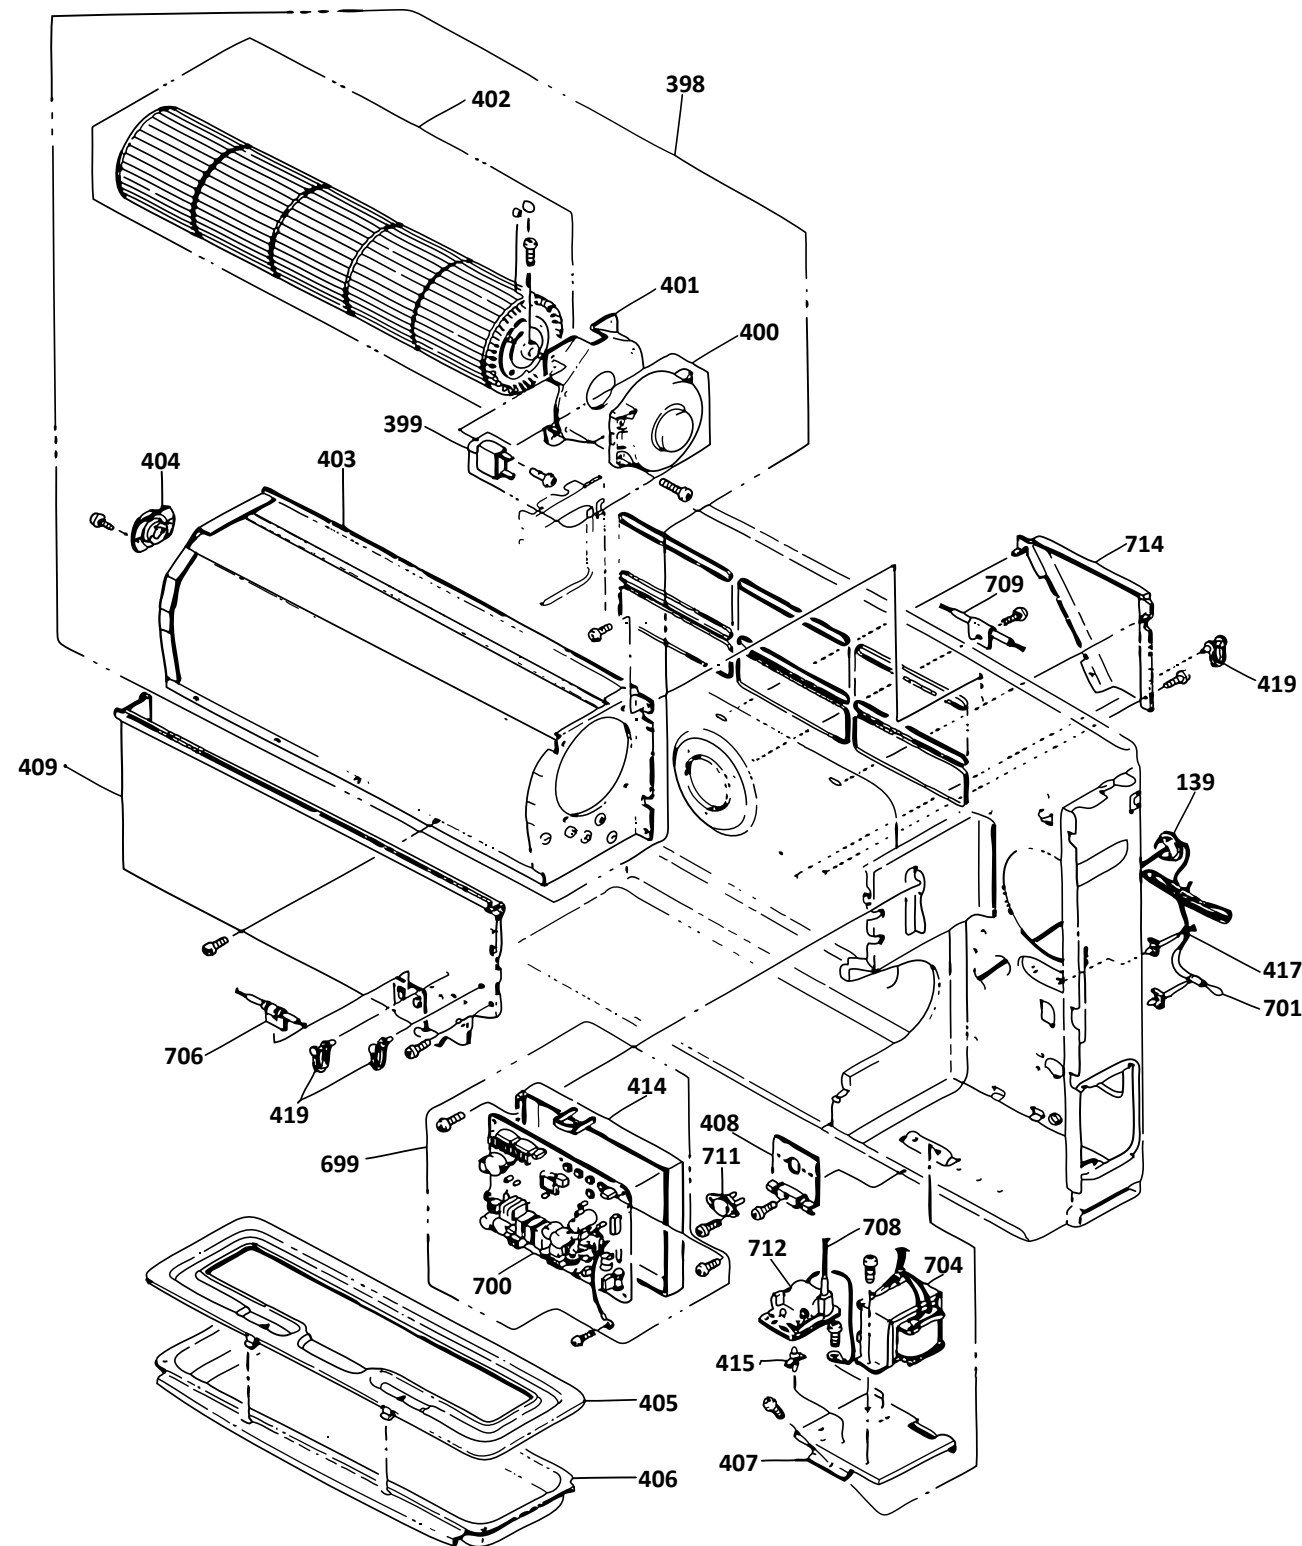

Ref.	Description	Qty.	Part No.
139	Bush	1	Not available
398	Convection fan assembly	1	3106
399	Capacitor	1	3107
400	Convection fan motor	1	3108
401	Motor base	1	Not available
402	Line flow fan	1	3109
403	Convection fan casing	1	Not available
404	Fan bearing	1	2101
405	Humidifier tray cover	1	3110
406	Humidifier R-tray	1	3111
407	Sparker mounting bracket	1	Not available
408	OHS mounting bracket	1	Not available
409	Heat shield	1	Not available
414	PCB mounting bracket	1	Not available
415	PCB spacer	4	1886
417	Cable clip	1	Not available
419	Speed clip	3	Not available
699	PCB complete	1	Not available
700	PCB	1	3113
701	Room temperature thermistor	1	3114
704	Transformer	1	3116
706	Wiring harness A	1	3119
708	High tension cord	1	4383
709	OHS harness	1	3075
711	OHS 90 °C off	1	4384
712	Sparker	1	2958
714	TF cover	1	3079

Energysaver 556FTR heater

This diagram is provided to assist you to identify parts if replacement is necessary. Contact your place of purchase or the manufacturer to enquire about parts, availability and/or service.

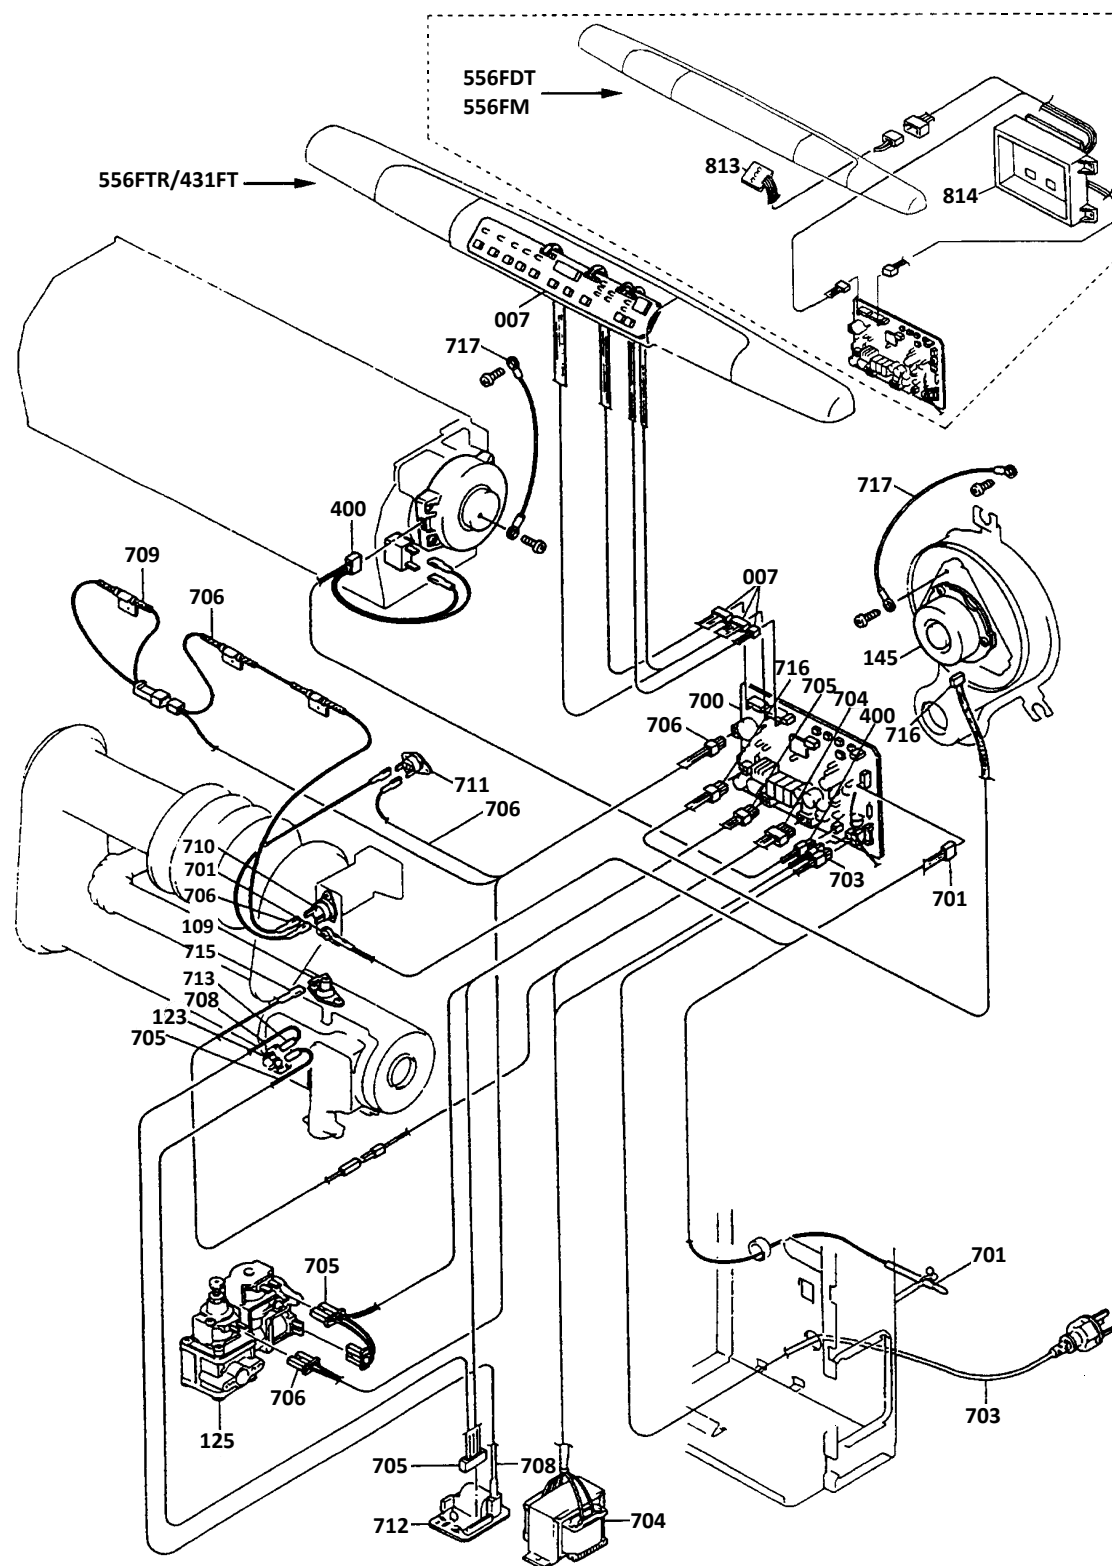

Ref.	Description	Qty.	Part No.
007	Control PCB white/beige	1	3512/3009
109	Flame rod	1	4299
125	Gas control valve	1	4335
145	Combustion motor	1	3104
400	Convection fan motor	1	3108
700	PCB	1	3113
701	Room temperature thermistor	1	3114
703	Power cord	1	3115
704	Transformer	1	3116
705	MV harness	1	3117
706	Wiring harness A	1	3119
708	High tension cord	1	4383
709	OHS harness	1	3075
710	OHS 130 °C off	1	4385
711	OHS 90 °C off	1	4384
712	Sparker	1	2958
713	Electrode sleeve	1	7564
715	Flame rod lead	1	4398
716	Motor harness A	1	4399
717	Convection motor earth cord	2	Not available

Not shown in exploded diagram

-	Surge arrestor	1	3212
-	Harness surge arrestor	1	3213
-	Installation kit	1	3112

Ref.	Description	Qty.	Part No.
Flueing related			
-	Plastic condensate tube	1	9835
-	Fixing strap	1	9830
-	Spiral spacer	4	9833
-	Transition box manifold assy. (thru-wall flue only)	1	1004
-	Transition box manifold assy. (in-wall flue only)	1	1003
-	Header plate & top flue support (in-wall flue only)	1	9831
-	Vertical flue cowl Voumard (in-wall & thru-wall flue only)	1	3232
-	Appliance flue joiner clip (in-wall flue only)	1	9834
-	O-ring for ESPIPE900 & ESDFK	1	4350
-	Spacer for ESPIPE900 & ESDFK	1	4351