

GENERAL INSTALLATION INFORMATION REU-V26 FFU / REU-V26 FFUC

You must install this appliance in accordance with these Instructions and all regulatory requirements which exist in your area. Applicable publications may include:

- NZS 5261 - Gas Installations
- AS/NZS3500 - National Plumbing and Drainage
- AS/NZS3000 - Wiring Rules
- Building Codes of New Zealand

THIS APPLIANCE IS DESIGNED FOR INDOOR INSTALLATION. IT MAY BE INSTALLED OUTDOORS IN AN ENCLOSURE IF THE REQUIREMENTS OF NZS 5261 PART 13.5 ARE SATISFIED.

IT MUST BE MOUNTED ON A VERTICAL WALL OR STRUCTURE WITH THE WATER AND GAS CONNECTIONS ON THE UNDERSIDE POINTING TOWARDS THE GROUND.

IT MUST BE INSTALLED WITH THE RINNAI INFINITY FLUEING SYSTEM. NON RINNAI FLUEING SYSTEMS MUST NOT BE USED.

THIS APPLIANCE MUST NOT BE USED AS A DOMESTIC SPA OR SWIMMING POOL HEATER.

APPLIANCE LOCATION

The appliance should be placed as close as practicable to the most frequently used hot water outlet point or points to minimise the delay time for hot water delivery. For installations where the distance between the unit and hot water outlet points is considerable, the appliance can also be fitted in a 'flow and return system' which minimises the waiting time for hot water delivery. Alternatively, appliances can be strategically placed to service outlet points with minimal delay time. Contact Rinnai New Zealand for further information.

The appliance must also be located so that the flue terminal exits the building at a suitable point. The maximum length of the flue is 9 metres with a maximum of three 90° bends. Both a horizontal (wall) or vertical (roof) terminal are available. For detailed information regarding the Flue refer to the 'Flue Installation Instructions for Infinity Internal Water Heaters' supplied with the flue terminal or contact Rinnai.

The appliance must be in an accessible location. Sufficient clearances shall allow access to, and removal of, all serviceable components. The appliance should not be mounted higher than 3.5 metres from the ground or floor level unless the customer can arrange permanent and safe access or can arrange another means of access, for example, by means of scissor or boom lifts.

AC230V, 10A earthed power point must be provided adjacent to the appliance. It must be clear of the gas and water connections to the appliance, flue and water pressure relief valve. The power cord of the appliance is 1500 mm long.

If a horizontal (wall) terminal is used, the location must be in accordance with the clearances shown in Figure 3 of NZS 5261 which is reproduced right side. Ensure that the flue terminal cannot be touched (particularly by children). A flue guard is available to prevent direct contact with the terminal. The flue must be clear of obstructions and shrubbery.


If a vertical (roof) terminal is used, the requirements of NZS 5261 apply. Clearances must be in accordance with the diagram shown in fig 1 bottom right.

It is the installer's responsibility to ensure that the current requirements of NZS 5261 are met.

PIPE SIZING

This appliance can use up to 199 MJ/h of gas. If the gas pipe sizing is insufficient the customer will not get the full performance benefit. Gas pipe sizing must consider the gas input to this appliance as well as all the other gas appliances in the premises. The gas meter and regulator must be specified for this gas rate. An approved sizing chart such as the one in NZS 5261 should be used.

Water pipe sizing and layout should be performed in accordance with AS/NZS3500. All hot water pipe work should be insulated to optimise performance and energy efficiency.

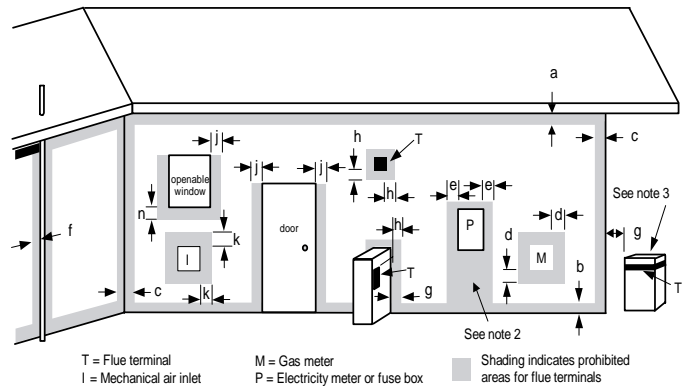

Ref.	Item	Min. clearances (mm)
		Fan assisted
a	Below eaves, balconies and other projections:	
	• Appliances up to 50 MJ/h input	200
	• Appliances over 50 MJ/h input	300
b	From the ground, above a balcony or other surface †	300
c	From a return wall or external corner †	300
d	From a gas meter (M) (see 4.7.11 for vent terminal location of regulator)	1000
e	From an electricity meter or fuse box (P)	500
f	From a drain pipe or soil pipe	75
g	Horizontally from any building structure = or obstruction facing a terminal	500
h	From any other flue terminal, cowl, or combustion air intake †*	300
j	Horizontally from an openable window, door, non-mechanical air inlet, or any other opening into a building with the exception of sub-floor ventilation:	
	• Appliances up to 150 MJ/h input	300
	• Appliances over 150 MJ/h input up to 200 MJ/h input	300
	• Appliances over 200 MJ/h input	500
	• All fan-assisted flue appliances, in the direction of discharge	1500
k	From a mechanical air inlet, including a spa blower	1000
n	Vertically below an openable window, non-mechanical air inlet, or any other opening into a building with the exception of sub-floor ventilation:	
	• Space heaters up to 50 MJ/h input	150
	• Other appliances up to 50 MJ/h input	500
	• Appliances over 50 MJ/h input and up to 150 MJ/h input	1000
	• Appliances over 150 MJ/h input	1500

† - unless appliance is approved for closer installation

NOTES:

- 1 All distances are measured to the nearest part of the terminal.
- 2 Prohibited area below electricity meter or fuse box extends to ground level.
- 3 See Clause 13.12.3 for restrictions on a flue terminal under a covered area.
- 4 See Appendix F, Figures 2 and 3, for clearances required from a flue terminal to an LP Gas cylinder. A flue terminal is considered to be a source of ignition.
- 5 For appliances not addressed above, approval shall be obtained from the Authority.

Fig 3

*Contact Rinnai for exemptions for the above clearances which may have been granted since printing of this document.

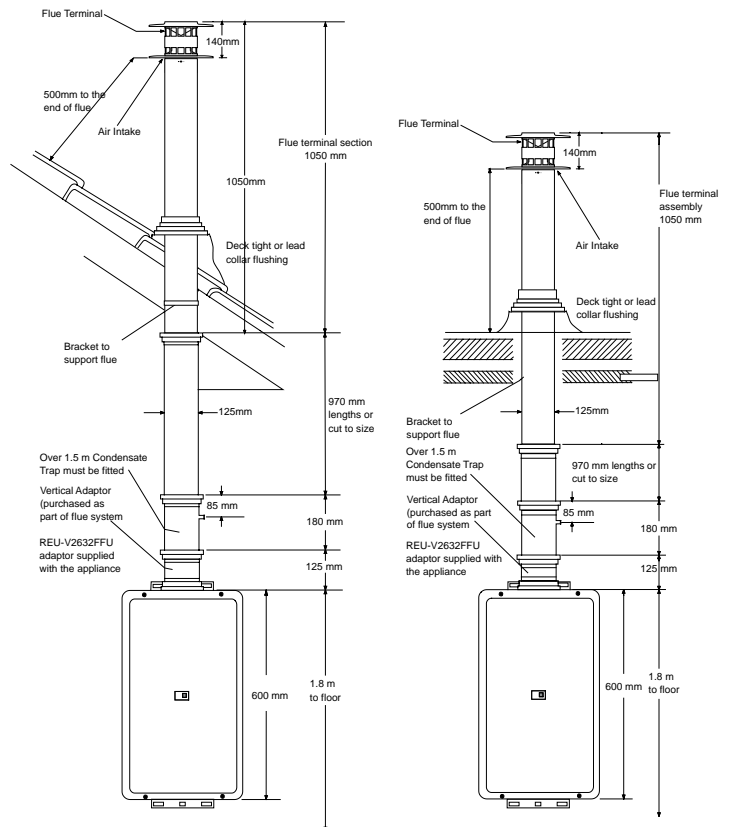


Fig 1.

WATER SUPPLY

Where the water supply pressure exceeds 1200 kPa, an approved pressure limiting valve is required at the inlet of the appliance. To achieve the rated flow a minimum water supply pressure of 140 kPa is required at the appliance inlet. The unit will operate at lower supply pressures but the rated flow will not be achieved. Contact Rinnai for 'gravity fed' or 'low pressure' hot water installations.

The water quality should be in accordance with the guidelines contained in the 'How to use your Water Heater' booklet. Most NZ Metropolitan water supplies will fall within these guidelines. If you are unsure of your water quality, contact your local water authority. If sludge or foreign matter is present in the water supply, a suitable fitter should be incorporated in the cold water supply pipe.

HOT WATER DELIVERY TEMPERATURE

Local regulations and / or the requirements of AS/NZS3500.4 must be considered regarding the temperature limitations of hot water supplied to areas used primarily for personal hygiene.

The temperature of water to these areas may be limited to 55° C or less. To ensure these regulations and / or requirements are met the system MUST be installed in accordance with the 'Water Heater and Controller Installation Configurations' Section of this document.

MOUNTING THE APPLIANCE

The appliance weighs 21 kg and the wall or structure on which it is to be mounted must be capable of supporting the weight of the appliance and associated pipe work. Ensure that suitable fixing screws or bolts are used to secure the Infinity to the wall. Bracket and fixing hole locations are shown overleaf.

The top bracket has a keyhole slot so that the appliance can be positioned by hanging it on one screw, then the other screws can be secured.

FLUEING

Install the Rinnai Infinity Flueing system in accordance with the Instructions supplied with the flue terminal. Non Rinnai Flueing systems must not be used.

SERVICE CONNECTION POINTS

All cold water inlet, hot water outlet and gas connections are R 3/4 (20mm). This is NOT an indication of the pipe sizes required.

An Approved full flow isolation valve and disconnection union MUST be fitted to the cold water inlet. A non return valve is not required unless dictated by local regulations.

An Approved full flow isolation valve and disconnection union MUST be fitted to the gas inlet.

Isolation Valves must not be fitted directly to the appliance.

It may be necessary to fit a temperature limiting device for delivery to areas used primarily for the purposes of personal hygiene. Refer to the 'Water Heater and Controllers Installation Configurations' Section of this document.

Purge gas and cold water supply lines to remove air and swarf before final connection of the appliance. Swarf in either the gas or water supplies may cause damage.

PIPE COVER

The pipework underneath the appliance can be covered using a custom made Rinnai pipe cover. Contact Rinnai for further details.

REMOTE CONTROLLERS

Remote Controllers are an optional extra. 'Standard' and 'Bathfill' controllers can be fitted. Standard controllers allow temperature selection only. Bathfill controllers have temperature selection, bath-fill and voice prompting functions. For detailed information regarding controller operation refer to the 'How to use your water heater' booklet supplied with the appliance. Other manufacturers' controllers are NOT compatible with this appliance.

STANDARD CONTROLLER (MODEL MC-91-1A)

Up to 4 Standard Controllers can be fitted to the appliance. They are normally installed in the areas where the majority of hot water is used, for example, the kitchen, bathroom, ensuite and laundry.

BATHFILL CONTROLLERS (MODELS MC-70-2A AND BC-70-2A)

Bathfill controllers have 'kitchen' (MC-70-2A) and 'bathroom' (BC-70-2A) versions. 'Kitchen' controls are intended for the kitchen or other convenient area where the majority of hot water is used. Bathroom controllers are intended to be fitted in the bathroom or ensuite and allow the user to have a bath filled to the required level and pre selected temperature automatically.

Up to three 'Bathfill' controllers can be connected as follows:

Kitchen	Bathroom	Ensuite
MC-70-2A		
MC-70-2A	BC-70-2A	
MC-70-2A	BC-70-2A	BC-70-2A

If a fourth controller is required, a Standard controller can be included as follows:

Kitchen	Bathroom	Ensuite	Laundry
MC-70-2A			
MC-70-2A	BC-70-2A		
MC-70-2A	BC-70-2A	BC-70-2A	MC-91-1A

POSITIONING OF CONTROLLERS

Controllers must be installed in shaded and clean locations. They should be fitted out of reach of children (suggested height from floor at least 1500mm). Controllers are water resistant, however, durability is improved when positioned outside the shower recess or at least 400mm above the highest part of a sink, basin or bath.

DO NOT INSTALL THE CONTROLLERS:

- NEAR A HEAT SOURCE, SUCH AS A COOK TOP, STOVE OR OVEN. HEAT, STEAM, SMOKE AND HOT OIL MAY CAUSE DAMAGE
- IN DIRECT SUNLIGHT
- OUTDOORS UNLESS AN ENCLOSURE IS PROVIDED WHICH PROTECTS THE CONTROLLER AGAINST SUNLIGHT AND DUST INGRESS.
- AGAINST A METAL WALL UNLESS THE WALL IS EARTHED IN ACCORDANCE WITH AS/NZS3000.

REMOTE CONTROLLER CABLES





Remote controls operate at extra low voltage (12 Volts DC) which is supplied from the appliance. Controllers are supplied with 15 m of electrical cable. The cable wires for connection to the appliance are fitted with spade terminals.

Extension cables are available from Rinnai. Alternatively, a two core sheathed (double insulated) flex with minimum cross-sectional area of 0.5 mm² can be used. Maximum cable length is 50 m.

For connection refer to the "**CONNECTING REMOTE CONTROL CABLES**" section.

FITTING THE 'STANDARD' REMOTE CONTROLLERS (MC-91-1A)





1. Determine the most suitable position for the Remote Control.
2. Drill 3 holes in the wall, as shown in Fig 1, one for the cable and two for the securing screws. Ensure holes are drilled. Fit wall plugs if required.
3. Run the cable through the hole in the wall ensuring that the end fitted with the connector is near the controller.
4. Remove the face plate from the Remote Control, using a screw driver. (fig 2)
5. Connect the cable to the remote controller. (fig 3)
6. Fix the remote controller to the wall and fasten with phillips head screws supplied as shown in Fig 4.
7. Remove the protective plastic film from the controller face as shown in Fig 4.
8. Replace the face plate.

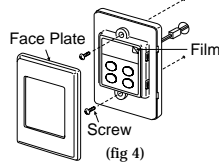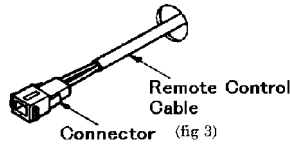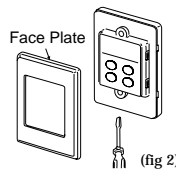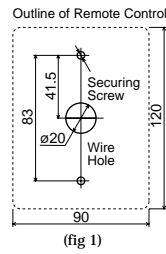

Note: For details on how to program the MC-91-1A remote control see Appendix 1. MC-91-1A CONTROLLER PROGRAMMING


FITTING THE 'BATHFILL' REMOTE CONTROLLERS (MC-70-2A)

1. Determine the most suitable position for the Remote Control.
2. Drill 3 holes in the wall, as shown in Fig 1, one for the cable and two for the securing screws. Ensure holes are drilled. Fit wall plugs if required.
3. Fix the mounting bracket to the wall using the screws provided.
4. Run the cable through the hole in the wall.
5. Remove the face plate from the Remote Control, using a screw driver (fig 2).
6. Connect the cable to the kitchen remote control as shown in Fig 3. Connect cables from bathroom controllers (if fitted) to the kitchen remote control also (if required). Polarity is not important; either colour wire can be connected to either terminal.

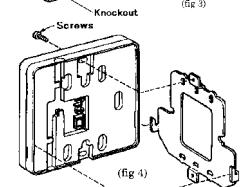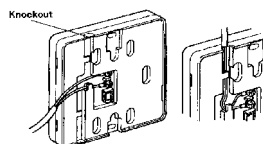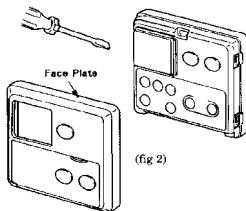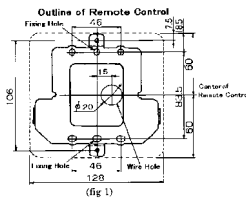





Note: If the cable cannot be run in the wall cavity, remove the plastic 'knockout' lugs as shown in Fig 3. Fix the kitchen controller to the wall bracket and fasten with phillips head screws supplied (M4 x 12) as shown in Fig 4.

7. Open the flip panel and remove the protective plastic film from the controller face as shown in Fig 5.
8. Replace the face plate.
9. Close the flip panel.

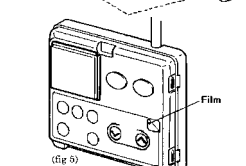



FITTING THE 'BATHFILL' REMOTE CONTROLLERS (BC-70-2A)

1. Determine the most suitable position for the Remote Control.
2. Drill 3 holes in the wall, as shown in Fig 1, one for the cable and two for the securing screws. Drill holes to ensure controller position will be level when installed. Fit wall plugs if required.
3. Run the cable through the hole in the wall - ensuring that the end fitted with the connector is near the controller.
4. Remove the face plate from the Remote Control, using a screw driver (fig 2).
5. Connect the cable to the bathroom remote controller.
6. Fix the bathroom controller to the wall and fasten with phillips head screws supplied as shown in Fig 4.
7. Open the flip panel and remove the protective plastic film from the controller face as shown in Fig 4.
8. Replace the face plate.
9. Close the flip panel.

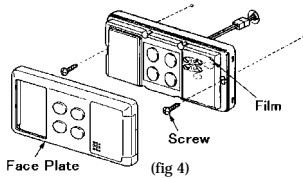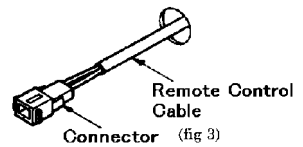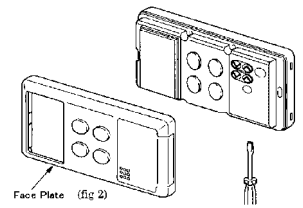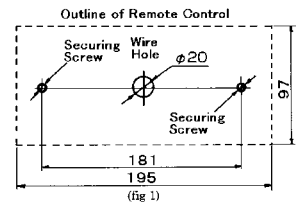

WATER HEATER AND CONTROLLER INSTALLATION CONFIGURATIONS

- **IMPORTANT:** If the appliance is to deliver water primarily for the purposes of personal hygiene in an early childhood centre, primary or secondary school, nursing home or similar facility for young, aged, sick or disabled persons as defined in AS/NZS3500.4 a Temperature Limiting Device (TLD), such as a Tempering Valve, may be required even if the appliance is set to 55°C or less. For these types of applications contact Rinnai.

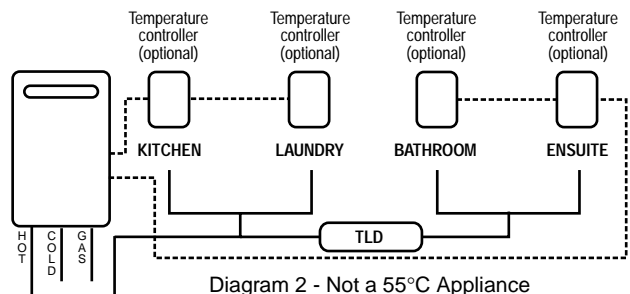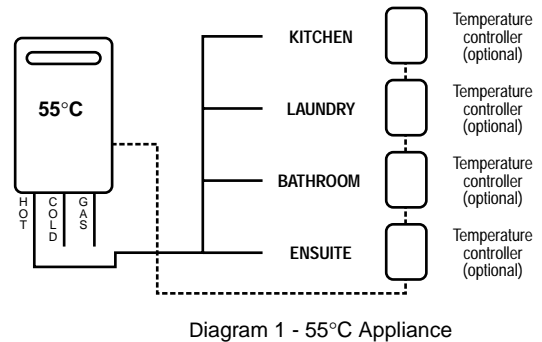

Note: TLD = Temperature Limiting Device.

CONNECTING REMOTE CONTROL CABLES



Do not attempt to connect the remote control cable terminals to the appliance with the power on. **RISK OF ELECTRICAL SHOCK !**

Connecting One or Two Controllers

1. Isolate the power supply.
2. Remove the front cover from the Appliance (4 screws). (fig. 1)
3. Thread the cable(s) through the cable access hole at the base of the appliance.

Connect the spade connectors to the terminals marked "Remote Control" on the printed circuit board (fig. 2). Polarity is not important. Either wire colour can be connected to either terminal.

4. Replace cover of the Appliance. Ensure that the screw with the star washer is placed at the bottom right hand corner for earthing purposes.

Connecting Three Controllers




1. Isolate the power supply.
2. Remove the front cover from the Appliance (4 screws). (fig. 1)
3. Cut the spade connectors from 2 of the controller cables to be connected to the appliance (4 spade connectors should be cut off) and discard. Connect the wires from these two cables and terminate into two new spade connectors as shown in fig. 3. Spade connectors are available from your local electrical component retailer.
4. Thread the 3 cables through the cable access hole at the base of the appliance. Connect the 4 spade connectors to the terminals marked "Remote Control" on the printed circuit board (fig. 2). Polarity is not important. Either wire colour can be connected to either terminal.
5. Replace cover of the Appliance. Ensure that the screw with the star washer is placed at the bottom right hand corner for earthing purposes.

Connecting Four Controllers

1. Isolate the power supply.
2. Remove the front cover from the Appliance (4 screws). (Fig 1)
3. Cut the spade connectors from all four controller cables to be connected to the appliance (8 spade connectors should be cut off) and discard. Connect the wires from two cables and terminate into two new spade connectors as shown in Fig 3.

Repeat for the remaining two cables. Spade connectors are available from your local electrical component retailer.

4. Thread the 4 cables through the cable access hole at the base of the appliance. Connect the 4 spade connectors to the terminals marked "Remote Control" on the printed circuit board (fig 2). Polarity is not important. Either wire colour can be connected to either terminal.
5. Replace cover of the Appliance. Ensure that the screw with the star washer is placed at the bottom right hand corner for earthing purposes.

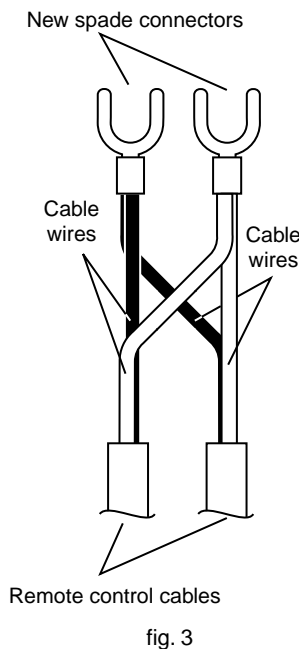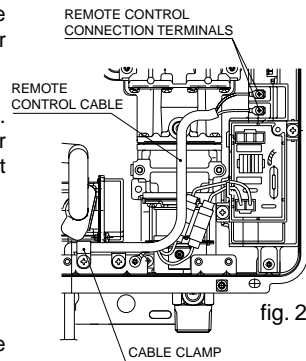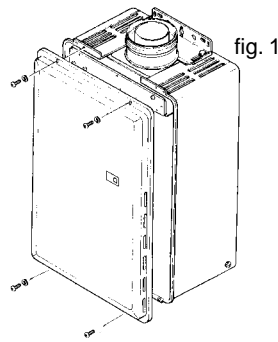

TESTING AND COMISSIONING

1. Before final connection of the water heater purge gas, hot and cold water supply lines. Swarf in either the gas or water supplies may cause damage.
2. Turn on gas and cold water supplies.
3. Test for water leaks and gas escapes near the unit.
4. Isolate gas supply. Remove test point screw located on the gas inlet connection and attach pressure gauge.
5. Turn the power 'on' at the power point socket and turn on gas.
6. If remote controllers are fitted, turn the controller 'on', select the maximum delivery temperature and open ALL available hot water taps including the shower. If remote controllers are not fitted, simply open all available hot water taps. (**CAUTION:** Ensure building occupants do not have access to hot water outlets during this procedure.)
7. Operate ALL other gas appliances at their maximum gas rate, in accordance with manufacturers instructions.
8. With all gas appliances in operation at maximum gas rate, the pressure gauge at the incoming test point the Infinity should read 1.13 - 3.0 kPa on Natural Gas. On LPG the pressure should be 2.75 - 3.0 kPa. If the pressure is lower, the gas supply is inadequate and the Infinity unit will not operate to specification. Check gas meter, regulator and pipework for correct operation/sizing and rectify as required. Note that the gas regulator on the Infinity is electronically controlled and factory pre-set. Under normal circumstances it normal circumstances it **DOES NOT** need adjustment during installation.
9. Close hot water taps including the shower.
10. Inspect and clean the strainer located on the cold water inlet connection. This procedure may need to be repeated to ensure the strainer remains clear, especially on new installations.
11. If Temperature Controllers are fitted, it is necessary to test their operation through the complete range of functions (refer to the 'How to use your Water Heater' booklet).
12. Confirm the hot water delivery temperature(s) using a thermometer. If controllers are fitted, ensure temperatures exceeding 50] C cannot be selected on bathroom or ensuite controllers.
13. After testing is completed, explain to the householder the functions and operation of the water heater and temperature controllers (if fitted). Ensure the 'Customer Record' section of the 'How to use your Water Heater' booklet is filled in and that the booklet is handed to the customer. Remind the customer to complete the Warranty section.

GAS PRESSURE SETTING




DURING PRESSURE TESTING OF THE INSTALLATION ENSURE GAS COCK SITUATED BEFORE UNIT IS SHUT-OFF.

FAILURE TO DO SO MAY RESULT IN SERIOUS DAMAGE TO THE APPLIANCE AND POSSIBLE INJURY.

The regulator on the Infinity is electronically controlled and factory pre-set. Under normal circumstances it does not require adjustment during installation. Perform this procedure only if the unit is not operating correctly and all other possible causes for incorrect operation have been eliminated.


1. Turn 'OFF' the gas supply.
2. Turn 'OFF' 230V power supply.
3. Remove the front cover from the appliance.
4. Check gas type switches (fig. 1) are in the correct position (dipswitch 1 of SW2 'ON' = NG, 'OFF' = LPG).

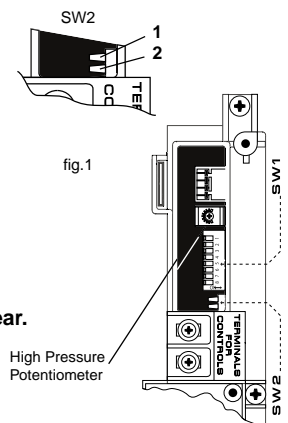

Note: 'ON' towards front, 'OFF' towards rear.

5. Attach pressure gauge to burner test point, located on the gas control. (fig. 2)



6. Turn 'ON' the gas supply.
7. Turn 'ON' 230V power supply.
8. If remote controllers are fitted, turn the unit 'ON' at the kitchen controller, select the maximum delivery temperature of 55°C and open a hot water tap fully. (**CAUTION:** Ensure building occupants do not have access to hot water outlets during this procedure).
9. Set the Infinity to 'Forced Low' combustion by setting No. 7 dipswitch of the (SW1) set of dip switches to 'ON'. (fig. 3)
10. Check the burner test point pressure.
11. Remove rubber access plug and adjust the regulator screw on the modulating valve (fig. 4) as required to the pressure. Table 1. Replace rubber access plug.
12. Set the Infinity to 'Forced High' combustion by setting both No. 7 and No. 8 dipswitches of the bottom (SW1) set to 'ON'. (fig. 5) Ensure maximum water flow.
13. Check the burner test point pressure.
14. Adjust the high pressure Potentiometer (POT) on the Printed Circuit Board (PCB) as required to the pressure shown Table 2. (fig.1).
15. **IMPORTANT:** Set dip switches No. 7 and 8 on the bottom (SW1) set of switches to 'OFF' to return the appliance to 'Normal' combustion. (fig. 6)
16. Close hot water tap.
17. Turn OFF the gas supply and 230V power supply.
18. Remove pressure gauge, and replace sealing screw.
19. Turn 'ON' the gas supply and 230V power supply.
20. Operate unit and check for gas leaks at test point.
21. Replace the front cover of the appliance.

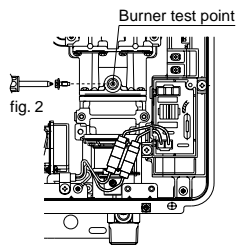

Pressure Setting Low

N.G.	0.16 kPa
LPG.	0.21 kPa


Table 1.

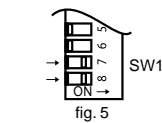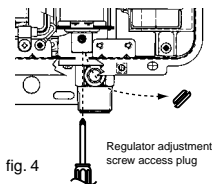

Pressure Setting High

N.G.	0.80 kPa
LPG.	1.06 kPa

Table 2.

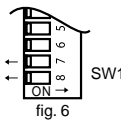

IF NO: You have 3 controllers or fewer, you will need to program the kitchen controller to enable selection of temperatures higher than 50°C.

STEP 1:

For the controller in the KITCHEN only, press and hold the 'Transfer' and 'On/Off' buttons simultaneously (see Fig 1.) until a 'beep' is heard (approximately 5 seconds).

STEP 2:

When the controller fitted in the KITCHEN is switched on, it should be possible to select temperatures higher than 50°C. If not, repeat Step 1.

Note:

- If the kitchen controller is replaced, repeat STEP 1 above for the replacement controller.
- If the kitchen controller is swapped with another controller (for example, the controller fitted in a bathroom), repeat STEP 1 for the controller moved from the kitchen to the bathroom. Then perform STEP 1 for the controller moved from the bathroom to the kitchen.

DIAGNOSTIC POINTS (refer page 7)


Appendix 1. MC-91-1A CONTROLLER PROGRAMMING

QUESTION 1: Are 4 controllers connected ?

IF YES: You will need to activate the fourth controller.


STEP 1:

For the controller in the KITCHEN only, press and hold the 'Transfer' and 'On/Off' buttons simultaneously (see Fig 1.) until a 'beep' is heard (approximately 5 seconds).

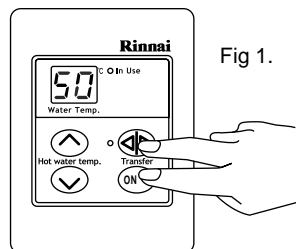

STEP 2:

Check that the display on ALL FOUR controllers is lit and displaying a temperature when 'switched on'. If any ONE of the controller displays two dashes (see Fig 2.) in the display repeat STEP 1.


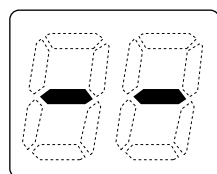



This completes the activation procedure.

WIRING DIAGRAM (refer page 7)

WATER HEATER DIMENSIONS (refer page 8)

REMOTE CONTROLLER DIMENSIONS

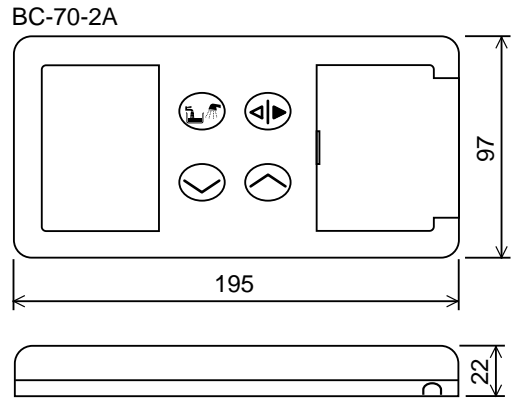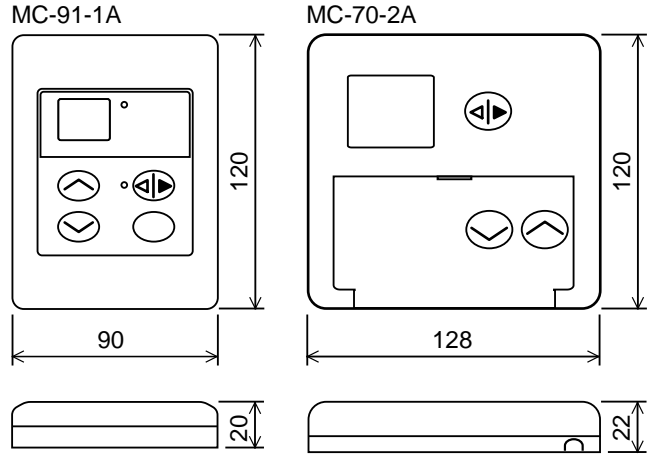

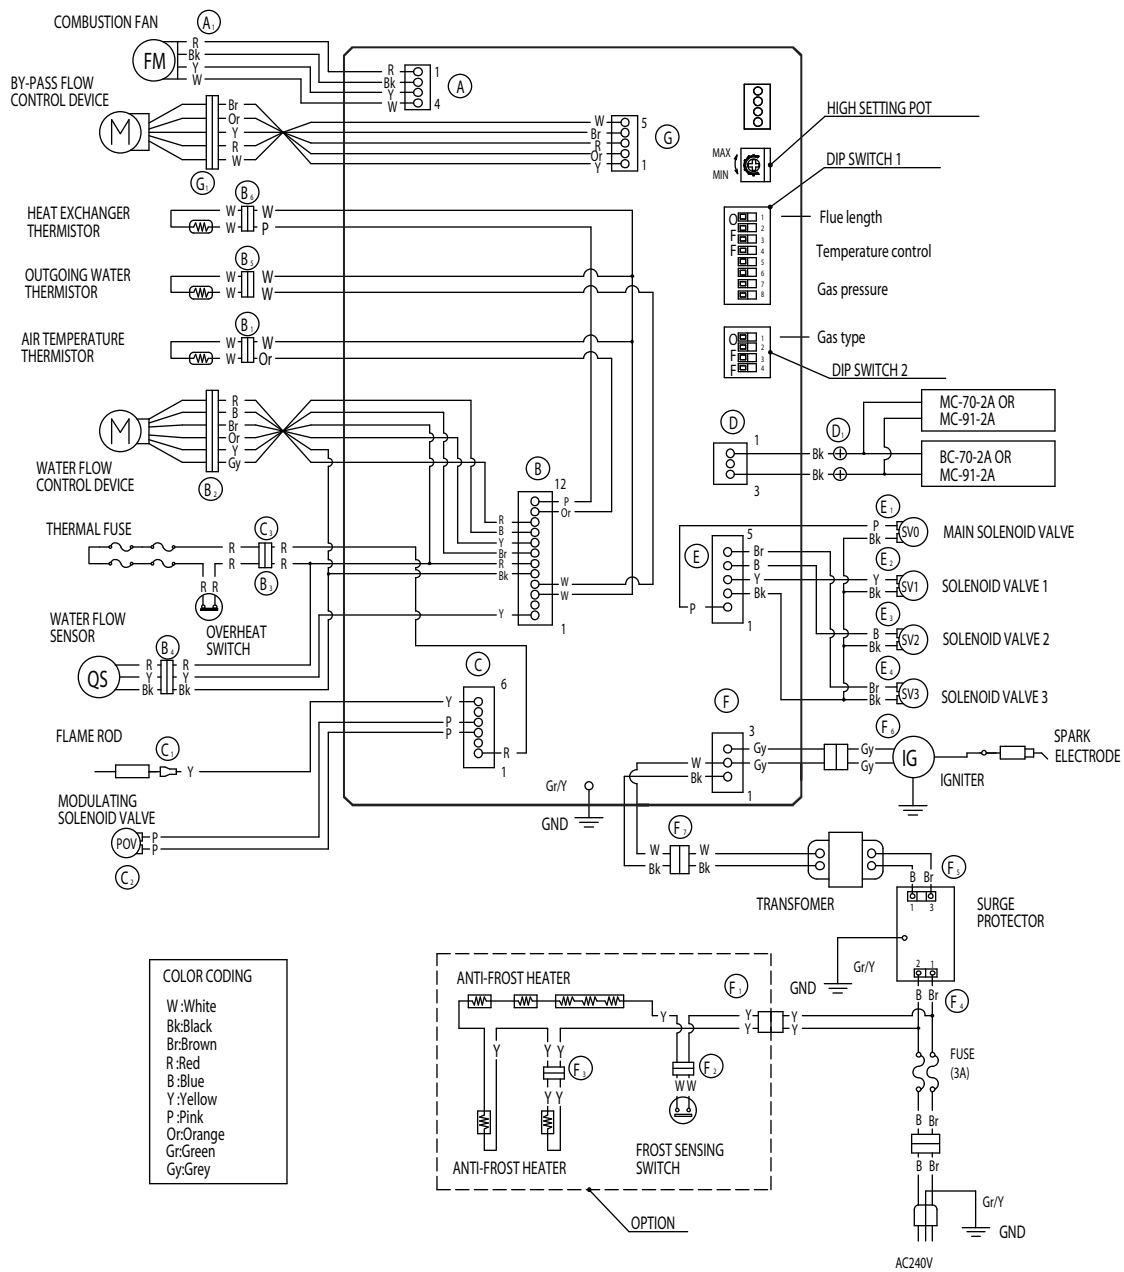





Blk. Part No.	COMPONENT	MEASUREMENT POINT		NORMAL VALUE	NOTE
		CN	WIRE COLOR		
①	SURGE PROTECTOR	F ₅	B-Br	AC207~264V	
② ⑬	WATER FLOW CONTROL DEVICE	B ₂	R-B	DC11~13V	OPERATE ELECTRICITY
			Gy-Or	DC11~13V	CONTROL ELECTRICITY
③	BY-PASS FLOW CONTROL DEVICE	G ₁	Br-W Or-W Y-W R-W GND	DC2~6V	OPERATE CONDITION
				15~35Ω	
④	REMOTE CONTROL	D ₁	Bk-Bk	DC11~13V	
⑤	WATER FLOW SENSOR	B ₄	R-Bk	DC11~13V	ON 2.4L/min (33Hz) OVER 1980PULSE/min
			Y-Bk GND	DC4~7V(PULSE 17~460Hz)	OFF 1.7L/min (23Hz) BELOW 1380PULSE/min
⑥	COMBUSTION FAN	A ₁	R-Bk	DC6~45V	
			Y-Bk	DC11~13V	
			W-Bk GND	DC5~10V (33~400Hz)	
⑦	FLAME ROD	C ₁	Y-BODY EARTH	AC5~150V	AFTER IGNITION
			Y-FLAME ROD	OVER DC1 μA	FLAME CONDITION
⑧	MODULATING VALVE	C ₂	P-P	DC2~15V 67~81 Ω	

Blk. Part No.	COMPONENT	MEASUREMENT POINT		NORMAL VALUE	NOTE
		CN	WIRE COLOR		
⑨	OUTGOING THERMISTOR	B ₅	W-W	15°C~11.4~14.0kΩ	
	HEAT EXCHANGER THERMISTOR	B ₆	W-W	30°C~6.4~7.8kΩ	
	OUTGOING THERMISTOR	B ₆	W-W	45°C~3.6~4.5kΩ	
⑩	AIR THERMISTOR	B ₁	W-W	60°C~2.2~2.7kΩ	
⑪	THERMAL FUSE	B ₃	R-R	BELOW 1Ω	
		C ₃	R-R	BELOW 1Ω	
⑫	IGNITER	F ₆	Gy-Gy	AC90~110V	
⑬	MAIN SOLENOID VALVE	E ₁	P-Bk	DC80~100V 1.7~2.1kΩ	
⑭	SOLENOID VALVE 1	E ₂	Y-Bk	DC80~100V 1.7~2.1kΩ	
⑮	SOLENOID VALVE 2	E ₃	B-Bk	DC80~100V 1.7~2.1kΩ	
⑯	SOLENOID VALVE 3	E ₄	Br-Bk	DC80~100V 1.7~2.0kΩ	

TRANSFORMER
VOLTAGES AND
RESISTANCES

CN	WIRE COLOR	NORMAL VALUE
F ₅	B-Br	16~18 Ω
F ₇	W-Bk	AC90~110V

4. Dimensions

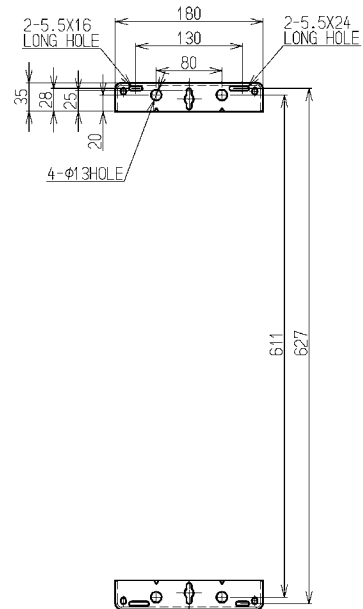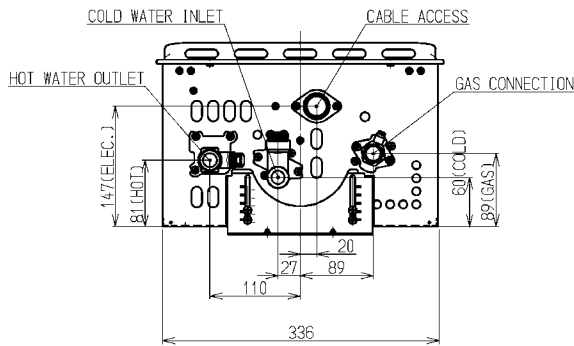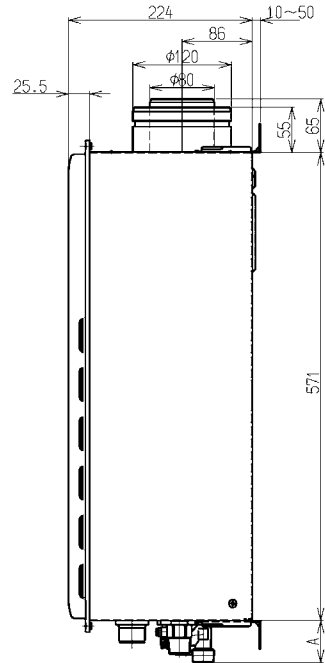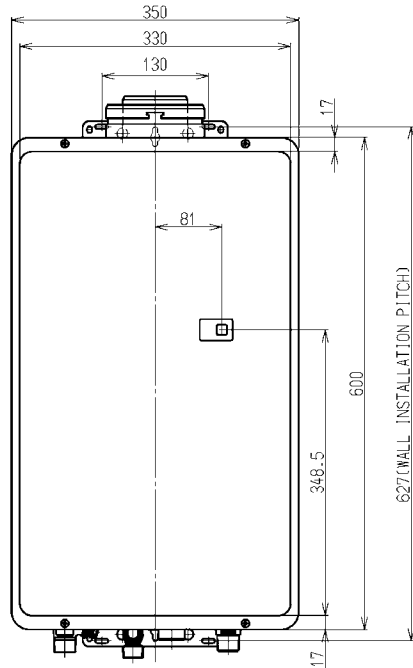

Note: All dimensions are in mm.

	A DIMENSION
GAS	41
COLD	51
HOT	42
ELEC.	27

cold water inlet: 20mm
 hot water outlet: 20mm
 gas inlet: 20mm